

- Manuals.plus /
- PERFASCIN /
 - PERFASCIN N2QAYB000777 Remote Control User Manual for Panasonic Smart LCD LED TV

PERFASCIN N2QAYB000777

PERFASCIN N2QAYB000777 Replacement Remote Control User Manual

For Panasonic Smart LCD LED TVs (Models: TC-P55VT50, TC-65PS64, TCP50ST50X, TCP60ST50X)

INTRODUCTION

This user manual provides comprehensive instructions for the PERFASCIN N2QAYB000777 replacement remote control. This remote is designed to function with various Panasonic Smart LCD LED TV models without the need for programming or pairing. Please read this manual carefully to ensure proper use and to maximize your viewing experience.

PRODUCT OVERVIEW

The PERFASCIN N2QAYB000777 is an infrared replacement remote control. It offers direct functionality for compatible Panasonic TV models upon battery installation.



This image displays the front view of the PERFASCIN N2QAYB000777 replacement remote control, highlighting its button layout and ergonomic design.

SETUP

1. Battery Installation

The PERFASCIN N2QAYB000777 remote control requires two AAA alkaline batteries (not included).

1. Locate the battery compartment cover on the back of the remote control.
2. Press down on the tab and slide the cover off.
3. Insert two new AAA alkaline batteries, ensuring the positive (+) and negative (-) terminals match the diagrams inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.

The remote is ready for use immediately after battery installation. No programming or pairing is required.



This image shows a side angle of the remote, indicating the general location of the battery compartment on the rear.

OPERATING INSTRUCTIONS

This remote control is designed to replicate the functions of your original Panasonic TV remote. Point the remote directly at your television's infrared receiver for optimal performance.

Key Functions Overview

- **POWER:** Turns the TV on or off.
- **INPUT:** Selects video input sources (e.g., HDMI 1, AV).
- **INFO:** Displays on-screen information about the current program or input.
- **MENU:** Accesses the TV's main menu.
- **OK:** Confirms selections within menus.
- **Directional Pad (Up/Down/Left/Right):** Navigates through menus and options.
- **EXIT:** Exits the current menu or screen.
- **RETURN:** Returns to the previous screen or menu.
- **VOLUME (+/-):** Adjusts the TV's volume level.
- **CHANNEL (CH Up/Down):** Changes TV channels.
- **MUTE:** Mutes or unmutes the TV's audio.
- **NETFLIX:** Direct access button for the Netflix application.
- **HELP:** Accesses the TV's help menu or features.
- **Number Pad (0-9):** Directly enters channel numbers.
- **INTERNET:** Accesses smart TV internet features.
- **VIERA TOOLS:** Accesses Panasonic's Viera Tools menu.
- **LIGHT:** Activates backlight on some remote models (if applicable).

- **CC**: Activates or deactivates Closed Captions.
- **SAP**: Selects Secondary Audio Program.
- **3D**: Activates or deactivates 3D mode (for compatible TVs).
- **SD/USB**: Selects SD card or USB input.





This image provides a detailed view of all buttons on the remote control, illustrating their layout and labels for easy identification.

MAINTENANCE

Cleaning the Remote

To clean the remote control, gently wipe it with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid using harsh chemicals or abrasive materials, as these can damage the remote's surface or internal components.

Battery Replacement

Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new AAA alkaline batteries. Do not mix old and new batteries, or different types of batteries, as this can lead to leakage or malfunction.

Storage

When not in use for extended periods, it is recommended to remove the batteries to prevent leakage and potential damage to the remote control. Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

Remote Not Responding

- **Check Batteries:** Ensure batteries are inserted correctly with the correct polarity (+/-). Replace with fresh AAA alkaline batteries.
- **Line of Sight:** Make sure there are no obstructions between the remote control and the TV's infrared sensor.
- **Distance:** Ensure you are within the effective operating range (up to 33 feet or 10 meters).
- **TV Sensor:** Verify that the TV's infrared sensor is clean and not blocked.

Specific Buttons Not Working

- **Clean Buttons:** Sometimes dirt or debris can get under buttons. Gently press and release the button multiple times. If necessary, clean around the button with a soft, slightly damp cloth.
- **Battery Level:** Low batteries can sometimes cause intermittent button functionality. Replace batteries.

Remote Control Does Not Require Programming

This remote control is a direct replacement and does not require any programming or pairing. If it is not working, the issue is likely related to batteries, line of sight, or the TV's IR receiver.

SPECIFICATIONS

Feature	Detail
Model Name	N2QAYB000777
Brand	PERFASCIN
Compatible Devices	Panasonic Smart LCD LED Televisions (Specific models: TC-P55VT50, TC-65PS64, TCP50ST50X, TCP60ST50X)
Connectivity Technology	Infrared (IR)
Battery Type	2 x AAA Alkaline Batteries (not included)
Maximum Range	33 Feet (10 meters)
Special Features	Ergonomic Design, No Programming Required
Item Weight	1.4 Ounces (approximately 40 grams)
Dimensions (L x W x H)	6"L x 1.8"W x 0.45"H (approximately 15.24cm x 4.57cm x 1.14cm)

WARRANTY AND SUPPORT

For any questions or issues regarding your PERFASCIN N2QAYB000777 remote control, please contact the seller directly through your purchase platform. This product is typically covered by a standard return policy. Please refer to your purchase details for specific warranty information and support contacts.

© 2023 PERFASCIN. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CFL2LRDC>

More documents and user manuals: <https://manuals.plus/>