

HAPPY CURVES Smoothie 2.0

HAPPY CURVES Smoothie 2.0 Bikini Trimmer User Manual

Model: Smoothie 2.0

1. INTRODUCTION

This manual provides essential instructions for the safe and effective use, maintenance, and care of your HAPPY CURVES Smoothie 2.0 Bikini Trimmer. Please read all instructions carefully before first use and retain this manual for future reference.

2. PRODUCT OVERVIEW

The HAPPY CURVES Smoothie 2.0 is an electric, waterproof personal groomer designed for women. It features interchangeable heads and adjustable guards for various hair lengths and areas.

2.1 Components

- Trimmer Head: For general hair trimming.
- Foil Shaving Head: For a closer shave.
- Adjustable Guard (0.5mm, 3mm, 5mm): For shorter hair lengths.
- Adjustable Guard (7mm, 9mm, 11mm): For longer hair lengths.
- USB-C Charging Cord: For recharging the device.
- Main Trimmer Body: Contains the power button and battery.

2.2 Key Features

- **Dual Head System:** Includes a snap-on trimmer head and a foil head for versatile grooming.
- **Adjustable Trimming Guards:** Two guards provide multiple length settings (0.5mm, 3mm, 5mm, 7mm, 9mm, 11mm).
- **Waterproof Design (IPX7 Rated):** Suitable for both wet and dry use, including in the shower.
- **Long-Lasting Battery:** Powered by a rechargeable lithium-ion battery, offering up to 90 minutes of use per charge.
- **Low Battery Indicator Light:** Provides visual notification when recharging is needed.
- **Quiet Operation:** Engineered for low vibration and quiet performance.
- **Optimized Blade System:** Features rounded stainless steel teeth and a smooth glide system to

minimize irritation.



Figure 1: HAPPY CURVES Smoothie 2.0 Bikini Trimmer and its packaging, highlighting key features like 100% waterproof and bikini-safe blade.



Figure 2: Detailed view of the Smoothie 2.0 Trimmer, illustrating the trimmer head, foil head, power button, and low battery indicator light.

3. SETUP

3.1 Initial Charge

1. Before first use, fully charge the trimmer. Connect the USB-C charging cord to the trimmer's charging port and plug the other end into a compatible USB power adapter (not included).
2. The low battery indicator light will illuminate during charging and change when fully charged (refer to product specific light behavior if detailed in packaging).
3. A full charge provides up to 90 minutes of cordless operation.

3.2 Attaching/Detaching Heads and Guards

- **To Attach a Head:** Align the desired head (trimmer or foil) with the top of the trimmer body and press firmly until it clicks into place.
- **To Detach a Head:** Gently pull the head upwards from the trimmer body.
- **To Attach a Guard:** Slide the desired adjustable guard over the trimmer head until it securely snaps into position. Ensure the guard is flush with the head.
- **To Detach a Guard:** Gently lift the guard from the trimmer head.



Figure 3: The trimmer with its two adjustable guards, demonstrating how they attach to the trimmer head.

4. OPERATING INSTRUCTIONS

4.1 General Use

1. Ensure the trimmer is charged and the desired head/guard is securely attached.
2. Press the power button to turn the device on.
3. Hold the trimmer at a slight angle against the skin.
4. Move the trimmer slowly and steadily against the direction of hair growth for optimal results.
5. Press the power button again to turn the device off after use.

4.2 Trimmer Head Use

Use the trimmer head for initial hair removal or to maintain longer hair lengths. Attach one of the adjustable guards for desired hair length (0.5mm, 3mm, 5mm, 7mm, 9mm, 11mm). Without a guard, the trimmer head provides a close trim.

4.3 Foil Shaving Head Use

For a smooth, close shave, use the foil shaving head directly on the skin without any guards. Ensure the skin is taut and move the foil head gently in straight or circular motions.

4.4 Wet or Dry Shaving

The Smoothie 2.0 is 100% waterproof (IPX7 rated) and can be used on dry skin or in the shower with water or shaving cream/gel. For best results, ensure the skin is clean before use.



Figure 4: Demonstrates the versatility of the trimmer for use on legs, bikini area, and underarms.



Figure 5: The trimmer being used in a wet environment, highlighting its 100% waterproof design.

5. MAINTENANCE AND CLEANING

5.1 Cleaning the Trimmer

1. Turn off the trimmer and detach the head.
2. Rinse the trimmer head and foil head under running water to remove hair and debris.
3. For thorough cleaning, use a small brush (if included) to remove stubborn hairs from the blades.
4. Allow all parts to air dry completely before reattaching or storing.
5. Do not use harsh chemicals or abrasive cleaners on the device.

5.2 Storage

Store the trimmer in a cool, dry place, away from direct sunlight and out of reach of children. Ensure the device is clean and dry before storage.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Trimmer does not turn on.	Battery is depleted.	Charge the trimmer using the provided USB-C cord. The low battery indicator light will show charging status.
Poor trimming/shaving performance.	Blades are clogged with hair or dull. Incorrect head/guard used for hair length.	Clean the trimmer head and foil head thoroughly. Ensure the correct head and guard are selected for the desired hair length. Replace heads if blades are dull.
Skin irritation or nicks.	Improper technique, dull blades, or dry shaving on sensitive skin.	Ensure skin is clean and taut. Use the trimmer slowly and gently. Consider wet shaving with shaving cream for sensitive areas. Replace dull blades.
Trimmer stops working during use.	Battery is low.	Recharge the trimmer.

7. SPECIFICATIONS

- **Model:** Smoothie 2.0
- **Power Source:** Rechargeable Lithium-ion Battery
- **Runtime:** Up to 90 minutes on a single charge
- **Waterproof Rating:** IPX7 (Submersible up to 1 meter for 30 minutes)
- **Included Components:** Trimmer Head, Foil Shaving Head, 2 Adjustable Guards, USB-C Charging Cord
- **Manufacturer:** Happy Innovations

8. SAFETY INFORMATION

- Keep the device away from children.
- Do not disassemble or attempt to repair the device yourself. Contact customer support for assistance.
- Ensure the charging port is dry before connecting the USB-C cable.
- Do not use the device if any part is damaged.
- Avoid applying excessive pressure to the skin to prevent irritation or injury.
- For external use only.

9. WARRANTY AND SUPPORT

For warranty information, product support, or to purchase replacement parts, please refer to the official HAPPY CURVES website or contact Happy Innovations customer service directly. Details are typically provided with your product packaging or on the manufacturer's website.

Manufacturer: Happy Innovations