

[Manuals.plus](#) /

› [URPOWER](#) /

› URPOWER 700ml Essential Oil Diffuser User Manual

URPOWER 700ml Ultrasonic Aroma Diffuser (B0CFL6TS76)

URPOWER 700ml Essential Oil Diffuser User Manual

Model: 700ml Ultrasonic Aroma Diffuser (B0CFL6TS76)

1. PRODUCT OVERVIEW

The URPOWER 700ml Essential Oil Diffuser combines aromatherapy with humidification, featuring a large capacity for extended operation and 7 color-changing LED lights. Its ultrasonic technology ensures whisper-quiet performance, making it suitable for various environments.



Image: Front view of the URPOWER 700ml Essential Oil Diffuser with its light illuminated.

2. PACKAGE CONTENTS

- 1x URPOWER 700ml Essential Oil Diffuser
- 1x Power Adapter
- 1x User Manual

3. SETUP INSTRUCTIONS

1. Lift the Cap:

Gently lift the top cover of the diffuser vertically to access the water tank.

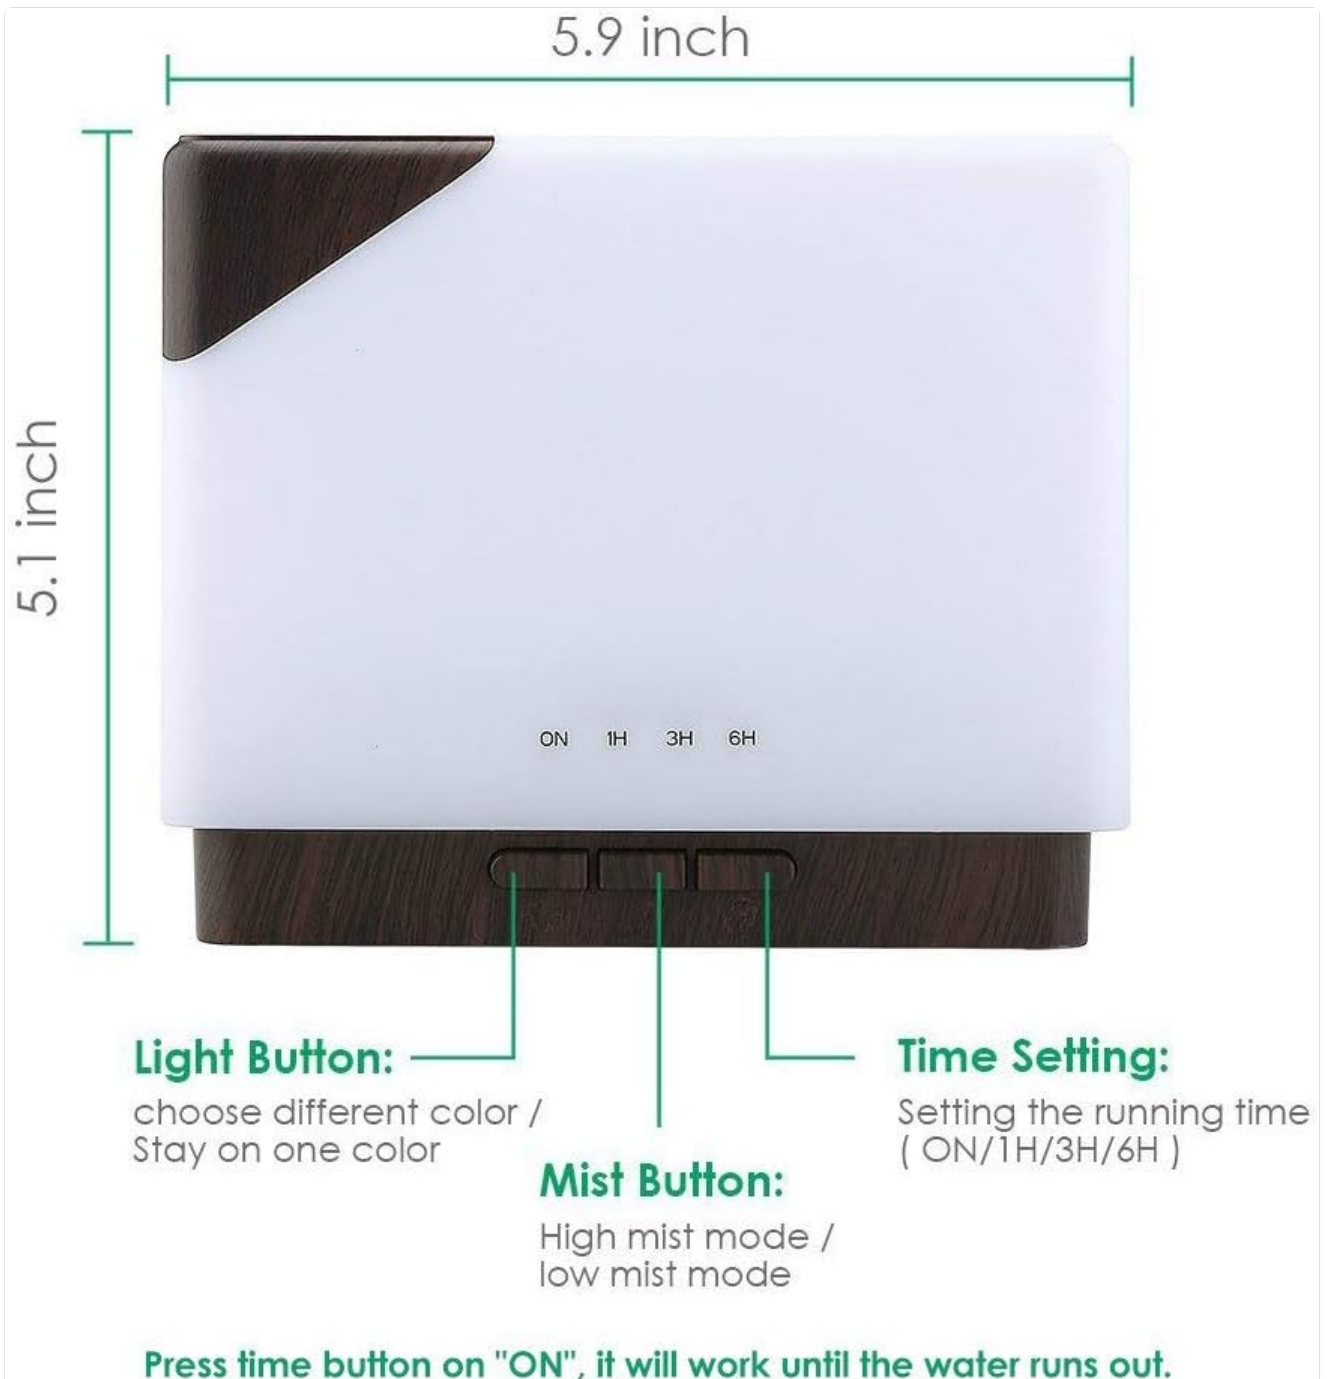


Image: A person lifting the top cap of the diffuser to reveal the water reservoir.

2. **Connect Power Adapter:**

Connect the AC adapter into the DC input jack located at the base of the aroma diffuser.



Lift up the cap vertically.



Connect AC adapter into the DC input jack at the base of the aroma diffuser.



Add water per 100ml with 2~3 drops essential oil (Oil Not Included).



Put the cap back and turn on the diffuser.

Image: A hand plugging the power adapter into the diffuser's base.

3. Fill Water Reservoir:

Fill the water tank with clean tap water. Do not exceed the maximum water level line. For optimal performance, use distilled water.



Image: A hand pouring water into the diffuser's water tank.

4. Add Essential Oils:

Add 2-3 drops of your preferred essential oil per 100ml of water directly into the water tank. Adjust the amount based on desired fragrance intensity.



Image: A hand adding drops of essential oil into the water-filled diffuser tank.

5. Replace the Cap:

Carefully place the top cover back onto the diffuser, ensuring it is properly seated.



Image: A person placing the top cap back onto the diffuser.

4. OPERATING INSTRUCTIONS

The diffuser features intuitive button controls for mist and light functions.



Image: Close-up view of the diffuser's base showing the Light, Mist, and Time Setting buttons.

Mist Control:

- Press the **Mist Button** once for High Mist mode.
- Press the **Mist Button** again for Low Mist mode.
- Press and hold the **Mist Button** to turn off the mist function.
- The diffuser can run for over 10 hours in high mist mode and over 20 hours in low mist mode.

Light Control:

- Press the **Light Button** once to turn on the 7-color changing LED lights.
- Press the **Light Button** repeatedly to cycle through individual colors or to set it to a single preferred color.
- Press and hold the **Light Button** to turn off the light function.

7 LED Mood Lights

Each light is adjustable between bright and dim



Image: Multiple diffusers showcasing the 7 different LED mood light colors.

Timer Settings:

- The diffuser offers timer settings for 1 hour, 3 hours, and 6 hours.
- Press the **Time Setting Button** to select your desired operating duration.
- If no timer is selected (ON mode), the diffuser will run continuously until the water runs out.
- The diffuser features an automatic shut-off function when water levels are low or depleted, ensuring safety and preventing damage.

5. MAINTENANCE

Regular cleaning helps maintain the diffuser's performance and extends its lifespan.

1. **Daily Maintenance:**

Empty any remaining water from the tank and wipe it clean with a soft cloth after each use. This prevents mineral buildup and residue from essential oils.

2. **Weekly Cleaning:**

Unplug the diffuser. Add 100ml of clean water and 1 tablespoon of white vinegar to the water tank. Run the diffuser for 5-10 minutes to allow the vinegar to clean the internal components. Drain the water, then wipe the tank and ultrasonic plate with a soft cloth. Rinse thoroughly with clean water.

3. **Storage:**

If not in use for an extended period, clean the diffuser thoroughly, ensure it is completely dry, and store it in a cool, dry place.

Important: Do not immerse the base of the diffuser in water. Use only essential oils recommended for diffusers. Avoid using corrosive detergents.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
No Mist/Low Mist Output	Insufficient water; water level too high; mineral buildup on ultrasonic plate; fan blocked.	Ensure water is between min/max lines; clean the ultrasonic plate; check for obstructions in the fan area.
Diffuser Leaks Water	Overfilled water tank; cap not properly sealed; diffuser placed on an uneven surface.	Do not overfill; ensure cap is securely placed; place diffuser on a flat, stable surface.
Unit Turns Off Unexpectedly	Water has run out (auto shut-off); timer setting reached.	Refill water tank; check timer settings.
No Power/Lights Not Working	Power adapter not connected; power outlet issue; unit malfunction.	Check power connection; try a different outlet; contact customer support if issue persists.

7. SPECIFICATIONS

Brand: URPOWER

Color: C-dark

Recommended Uses: Home, Office

Special Features: Automatic Shut-Off, Silent Operation

Capacity: 700 Milliliters

Product Dimensions: 6.4"L x 6.3"W x 5.5"H

Light Source Type: LED

Runtime: 20 hours

Auto Shutoff: Yes

Number of Items: 1

Manufacturer: URPOWER

Unit Count: 1.0 Count

Item Weight: 1.68 pounds

ASIN: B0CFL6TS76

Date First Available: August 14, 2023

8. WARRANTY AND SUPPORT

Specific warranty information and detailed support contacts are not provided within this manual.

For warranty claims, technical support, or further inquiries, please visit the official URPOWER website or contact their customer service directly. Refer to the product packaging or purchase documentation for additional support details.

You can visit the [URPOWER Store on Amazon](#) for more information.

© 2024 URPOWER. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

