

[Manuals.plus](#) /

› [HAPPY NUTS](#) /

› HAPPY NUTS The Lumberjack Electric Groin & Body Hair Trimmer User Manual

HAPPY NUTS The Lumberjack

HAPPY NUTS The Lumberjack Electric Groin & Body Hair Trimmer User Manual

Model: The Lumberjack (HN-15)

IMPORTANT SAFETY INFORMATION

Please read all safety instructions carefully before using your HAPPY NUTS The Lumberjack Trimmer. Failure to follow these instructions may result in injury or damage to the product.

- Always keep blades away from children.
- Do not use this product on infants.
- Keep the trimmer away from water sources while charging.
- Always unplug the trimmer and allow it to cool before cleaning.
- Always follow the cleaning and maintenance instructions provided in this manual.
- Exercise caution when trimming sensitive areas to avoid nicks or cuts.

PRODUCT OVERVIEW

The HAPPY NUTS The Lumberjack Electric Groin & Body Hair Trimmer is designed for precise and comfortable grooming of body and groin hair. It features IPX7 waterproofing, a long-lasting rechargeable battery, and specialized blades for a smooth experience.



Image: Overview of The Lumberjack Trimmer highlighting key features like IPX7 waterproof rating, 7500 RPM motor, nose & ear trimmer head attachment, nut-safe pivoting blade technology, and long-lasting rechargeable battery.

SETUP

Charging the Trimmer

Before first use, fully charge your Lumberjack Trimmer. The device is powered by a Lithium-ion rechargeable battery, providing up to 90 minutes of trimming time on a single charge.

1. Connect the USB charging cable to the trimmer and a compatible USB power adapter (not included).
2. Allow the trimmer to charge until the indicator light shows a full charge (refer to the device's specific light indicators if available, otherwise assume a steady light or change in color).
3. Do not charge the trimmer near water.

Attaching Trimmer Guards and Heads

The Lumberjack Trimmer comes with two adjustable guards for different hair lengths (1-5mm and 7-11mm) and a separate nose & ear trimmer head.



Image: A hand demonstrating the trimmer's blade, emphasizing its 'Nut-Safe' design for worry-free trimming and ease of attachment/removal.

1. To attach a guard: Align the guard with the trimmer blade and gently push until it clicks into place.
2. To remove a guard: Gently pull the guard away from the blade.
3. To attach the nose & ear trimmer head: Remove the main blade head by gently pulling it off. Align the nose & ear trimmer head and push until it clicks into place.
4. To remove the nose & ear trimmer head: Gently pull it off.

OPERATING INSTRUCTIONS

The Lumberjack Trimmer is designed for both wet and dry use, thanks to its IPX7 waterproof rating. It can be used in the shower for added convenience.




Image: A man using The Lumberjack Trimmer for grooming the groin area, demonstrating its intended use for below-the-belt trimming.

1. **Preparation:** Ensure the trimmer is fully charged. Clean the trimmer head and any attachments with warm, soapy water before use.
2. **Select Length:** Choose your desired trimming length by attaching one of the two adjustable guards (1-5mm or 7-11mm) for body hair, or use the main blade without a guard for a closer trim. For nose and ear hair, attach the specialized nose & ear trimmer head.
3. **Power On:** Press the power button to turn on the trimmer.
4. **Trimming Technique:**
 - For body and groin areas: Gently pull the skin tight to create a flat surface. Move the trimmer slowly and steadily against the direction of hair growth.
 - For nose and ear hair: Insert the nose & ear trimmer head gently into the nostril or ear canal. Move it in a circular motion to trim hair.
5. **Post-Trimming:** Turn off the trimmer. Clean the trimmer head and attachments as described in the Maintenance section.
6. **Storage:** Store the trimmer in a dry, secure place.


HOW TO TRIM YOUR PAIR



**CHOOSE YOUR
GUARD IF DESIRED**

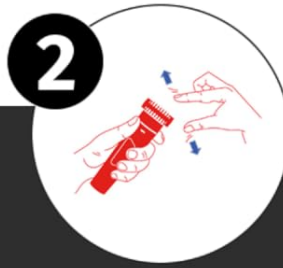

**PULL THE
SKIN TIGHT**

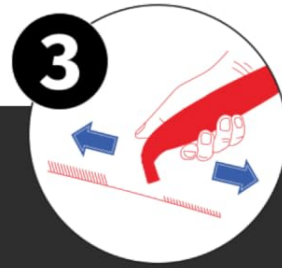

**SLOW AND
STEADY STROKES**

Image: A visual guide illustrating the three key steps for effective trimming: choosing the appropriate guard, pulling the skin tight, and using slow and steady strokes.

ALL-IN-ONE COMPLETE GROOMING SOLUTION



Image: Demonstrates the versatility of The Lumberjack Trimmer for multi-zone grooming, showing its use on chest, groin, ear, and nose areas.



Image: A man demonstrating the use of the specialized nose and ear trimmer attachment for precise and efficient hair removal.

MAINTENANCE & CLEANING

Regular cleaning ensures optimal performance and hygiene of your trimmer.

- After Each Use:** Turn off and unplug the trimmer if it was charging. Remove any attached guards or trimmer heads.
- Rinsing:** Since the trimmer is IPX7 waterproof, you can rinse the blade head and attachments directly under running water. For thorough cleaning, use warm, soapy water.
- Drying:** Shake off excess water and allow all parts to air dry completely before reassembling or storing.
- Blade Care:** Periodically, you may apply a small drop of clipper oil (not included) to the blades to maintain their sharpness and smooth operation.
- Storage:** Store the trimmer and its accessories in a clean, dry place, away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

If you encounter issues with your Lumberjack Trimmer, refer to the following common solutions:

Problem	Possible Cause	Solution
Trimmer does not turn on.	Battery is depleted.	Charge the trimmer fully.
Trimmer pulls hair or cuts poorly.	Blades are dull or clogged with hair.	Clean the blades thoroughly. Consider replacing the blade head if performance does not improve.
Trimmer makes unusual noise.	Hair caught in motor or blade assembly.	Turn off and clean the trimmer. Ensure no hair is obstructing the blades or motor.
Battery life is shorter than expected.	Battery not fully charged or aging battery.	Ensure a full charge cycle. Over time, rechargeable batteries may degrade.

SPECIFICATIONS

Feature	Detail
---------	--------

Feature	Detail
Model Name	The Lumberjack
Model Number	HN-15
Brand	HAPPY NUTS
Power Source	Battery Powered (Lithium-ion rechargeable)
Battery Life	Up to 90 minutes per charge
Waterproof Rating	IPX7 (fully washable, suitable for shower use)
Blade Material	Stainless Steel
Motor Speed	7500 RPM
Cutting Lengths	0.5 mm (without guard), 1-5mm, 7-11mm (with adjustable guards)
Special Features	Nut-Safe Pivoting Blade Technology, Nose & Ear Trimmer Head, Smooth No-Slip Grip
Connector Type	USB
Item Weight	0.23 kg
Dimensions	19 x 8.79 x 7.11 cm (Parcel Dimensions)

WARRANTY AND SUPPORT

Information regarding product warranty and customer support was not available in the provided product data. Please refer to the product packaging or the official HAPPY NUTS website for the most current warranty details and support contact information.

Manufacturer: Happy Innovations

Place of Business: 20371 IRVINE AVE STE 140, NEWPORT BEACH, CA, US, 92660

