

[Manuals.plus](#) /

› [Energizer](#) /

› Energizer Power Bank 30000mAh (Model UE30016PQ) User Manual

Energizer UE30016PQ

Energizer Power Bank 30000mAh (Model UE30016PQ) User Manual

1. INTRODUCTION

Thank you for choosing the Energizer Power Bank 30000mAh (Model UE30016PQ). This portable power bank is designed to provide reliable and efficient charging for your mobile devices, including smartphones, tablets, and other USB-powered gadgets. With its high capacity and fast-charging capabilities, it ensures your devices stay powered throughout the day.

This manual provides essential information on how to set up, operate, and maintain your power bank. Please read it thoroughly before use to ensure optimal performance and safety.



Image: Illustration of PowerSafe Management features, including temperature protection, overcharging protection, short circuit prevention, and premium battery cells.

3. PACKAGE CONTENTS

Verify that all items are present in your package:

- Energizer Power Bank 30000mAh (Model UE30016PQ)
- USB Charging Cable
- User Manual (this document)



Package Contents



UE30016PQ



USB Charging Cable



User Manual

Image: The package contents, showing the UE30016PQ power bank, a USB charging cable, and the user manual.

4. PRODUCT OVERVIEW

4.1. Components

- **USB-C In/Out Port:** For charging the power bank or charging compatible devices.
- **Micro USB In Port:** For charging the power bank.
- **Smart Fast Charge USB Output Ports (x2):** For charging devices with fast charging support.
- **LCD Indicator:** Displays the current battery level and charging status.



Image: A detailed view of the Energizer Power Bank UE30016PQ, highlighting the USB-C In/Out, Micro USB In, and two Smart Fast Charge USB Output ports.

4.2. LCD Indicator

The integrated LCD screen provides real-time information about the power bank's battery status. When charging the power bank or a device, the display will show the percentage of charge remaining or the charging progress.

LCD Indicator

Shows the battery level and charging status at a quick glance



Image: Close-up of the Energizer Power Bank's LCD indicator, displaying '100' to signify a full charge.

5. SPECIFICATIONS

Feature	Detail
Brand	Energizer
Model Number	UE30016PQ
Capacity	30000mAh
Voltage	5 Volts
Item Weight	500 Grams

Feature	Detail
Number of Ports	4 (1x USB-C In/Out, 1x Micro USB In, 2x USB-A Output)
Reusability	Rechargeable
Item Dimensions	6.3 x 3.19 x 1.28 inches
Manufacturer	Tennrich International Corp.



Image: Visual representation of the 30000mAh high capacity, indicating approximate extra hours for smartphones (108hrs), small tablets (39hrs), and large tablets (24hrs).

6. SETUP: CHARGING THE POWER BANK

Before first use, fully charge your Energizer Power Bank. It can be charged via either the Micro USB input or the USB-C input port.

1. Connect the provided USB charging cable (or a compatible USB-C cable) to the appropriate input port on the power bank (Micro USB IN or USB-C IN/OUT).
2. Connect the other end of the cable to a USB wall adapter (not included) or a computer's USB port. For faster charging, use a 20W USB-C Power Delivery (PD) compatible adapter.
3. The LCD indicator will show the charging progress. When the display shows '100', the power bank is fully charged.
4. Disconnect the cable once charging is complete.



Image: The Energizer Power Bank highlighting its dual input capability, allowing recharge via Micro-USB or USB-C PD.

7. OPERATING: CHARGING YOUR DEVICES

The Energizer Power Bank can charge up to three devices simultaneously using its USB-A and USB-C output ports.

1. Connect your device's charging cable to one of the output ports on the power bank (USB-C IN/OUT or Smart Fast Charge USB Output).
2. Connect the other end of the cable to your device.
3. The power bank will automatically begin charging your device. The LCD indicator will show the remaining battery level of the power bank.
4. Disconnect your device once it is fully charged or when you wish to stop charging.

The power bank supports 22.5W ultra-high output and 20W USB-C fast charging, compatible with various devices including Android phones, iPhones, iPads, and tablets.



Image: Close-up of the power bank's output ports, indicating 22.5W fast charge capability for the USB-A ports and USB-C PD for the USB-C port.



Image: A person holding a smartphone connected to the Energizer Power Bank, demonstrating its use for on-the-go charging.

8. MAINTENANCE

Proper care and maintenance will help extend the life of your power bank:

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the power bank. Do not use liquid cleaners or aerosols.
- **Storage:** Store the power bank in a cool, dry place away from direct sunlight and extreme temperatures. If storing for an extended period, charge it to approximately 50-75% every three months to maintain battery health.
- **Avoid Over-Discharge:** Do not allow the power bank to completely drain its battery frequently, as this can reduce its overall lifespan.

9. TROUBLESHOOTING

Problem	Possible Cause	Solution
Power bank not charging	Cable not connected properly; faulty cable/adaptor; power bank fully charged.	Ensure cables are securely connected. Try a different cable or wall adapter. Check LCD for '100' indicating full charge.
Device not charging from power bank	Power bank battery low; device cable not connected; incompatible device.	Recharge the power bank. Ensure device cable is securely connected. Verify device compatibility with USB charging.
Slow charging	Non-fast charging cable/adaptor; multiple devices charging simultaneously; device not supporting fast charge.	Use a fast-charging compatible cable and adapter. Charge fewer devices at once. Ensure your device supports fast charging.
LCD display not working	Power bank is off; internal issue.	Press the power button (if available) to activate the display. If the issue persists, contact customer support.

10. WARRANTY & SUPPORT

Energizer products are designed and manufactured to the highest quality standards. For information regarding warranty coverage, please refer to the warranty card included with your purchase or visit the official Energizer website.

If you encounter any issues not covered in this manual or require further assistance, please contact Energizer customer support through their official channels.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question