

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Sorandy](#) /

› [Sorandy 6L Air Fryer User Manual](#)

## Sorandy B0CFLRN8P3

# Sorandy 6L Air Fryer User Manual

Model: B0CFLRN8P3

## INTRODUCTION

---

Thank you for choosing the Sorandy 6L Air Fryer. This appliance is designed to provide a healthier way to cook your favorite foods with little to no oil, utilizing 360-degree cycle heating for even results. Please read this manual thoroughly before first use to ensure safe and optimal operation.



Image: The Sorandy Air Fryer positioned on a kitchen counter, ready for use.

## IMPORTANT SAFETY INSTRUCTIONS

---

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons.

- Read all instructions before operating the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse cord, plugs, or the appliance in water or other liquid.

- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.

## PRODUCT COMPONENTS

---

Familiarize yourself with the main parts of your Sorandy Air Fryer.

- **Main Unit:** Houses the heating element and fan.
- **Control Panel:** Top-mounted rotary knob for temperature and timer settings, with preset icons.
- **Removable Basket:** The primary cooking container with a nonstick coating.
- **Crisper Plate:** Inserted into the basket to allow air circulation around food and drain excess oil.
- **Handle:** For safely pulling out and inserting the basket.



Image: Front view of the Sorandy Air Fryer, showing the main unit and the separate crisper plate.



Image: The air fryer with its nonstick cooking basket fully removed, illustrating the internal cavity.



Image: A detailed view of the black, circular crisper plate with its slotted design, designed for optimal air circulation.

## SETUP

---

1. **Unpacking:** Carefully remove all packaging materials and promotional labels from the air fryer.
2. **Initial Cleaning:** Before first use, wash the removable basket and crisper plate with hot water, dish soap, and a non-abrasive sponge. Rinse thoroughly and dry completely. Wipe the main unit with a damp cloth.
3. **Placement:** Place the air fryer on a stable, heat-resistant, and level surface. Ensure there is at least 10 cm (4 inches) of free space on the back and sides, and above the appliance, to allow for proper air circulation.
4. **Power Connection:** Ensure the appliance is unplugged during setup. Once placed, plug the power cord into a grounded 110V wall outlet.



Image: Side view of the air fryer, highlighting the power cord connection point at the rear.

## OPERATING INSTRUCTIONS

The Sorandy Air Fryer offers a simple touch control interface and a rotary knob for precise temperature and time adjustments, enabling a variety of cooking functions including air frying, grilling, roasting, baking, searing, preheating, toasting, reheating, warming, and dehydrating.



Image: Visual representation of the 10-in-1 functions of the air fryer, including air fry, grill, roast, bake, sear, preheat, toast, reheat, warm, and dehydrate.



Image: Icons illustrating key features such as electronic recipe support, power-off memory, 3D hot air circulation, Teflon non-stick coating, 6L large capacity, and continuous heating.

## General Operation Steps:

1. **Prepare Food:** Place the crisper plate inside the removable basket. Place your ingredients into the basket. Do not overfill the basket to ensure even cooking.
2. **Insert Basket:** Slide the basket back into the main unit until it clicks securely into place.
3. **Power On:** Plug the air fryer into a 110V grounded outlet. The display will illuminate.
4. **Set Temperature and Time:** Use the rotary knob on the control panel to select your desired temperature and cooking time. You can also choose from the pre-set cooking icons for common dishes like fries, chicken, or fish.
5. **Start Cooking:** Press the start button (if available, or the knob itself) to begin the cooking process. The air fryer will begin circulating hot air.
6. **Shake/Flip (Optional):** For some foods, especially fries or smaller items, it is recommended to shake or flip the ingredients halfway through the cooking time. Carefully pull out the basket using the handle, shake, and then reinsert. The appliance has a power-off memory function, resuming cooking when the basket is reinserted.
7. **Auto Shutoff:** The air fryer will automatically shut off when the set cooking time has elapsed. A chime will sound.
8. **Remove Food:** Carefully pull out the basket. Use heat-resistant tongs to remove the cooked food from the basket. Avoid tipping the basket directly to pour out food, as excess oil may have collected underneath the crisper plate.
9. **Cool Down:** Allow the appliance to cool down completely before cleaning.



Image: The air fryer basket shown alongside various cooked food items such as fries, chicken nuggets, and roasted chicken, demonstrating cooking versatility.



Image: A composite image showing the air fryer in use, with the basket pulled out to reveal cooked food, and various prepared dishes on a table.

## MAINTENANCE AND CLEANING

Regular cleaning will extend the life of your air fryer and ensure optimal performance. Always unplug the appliance and allow it to

cool completely before cleaning.

- **Basket and Crisper Plate:** These parts have a nonstick coating and are dishwasher safe, though hand washing with warm soapy water and a non-abrasive sponge is recommended to preserve the coating. Do not use metal utensils or abrasive cleaning materials.
- **Main Unit:** Wipe the exterior of the air fryer with a damp cloth. Do not immerse the main unit in water or any other liquid.
- **Heating Element:** If necessary, gently clean the heating element inside the appliance with a cleaning brush to remove any food residue.
- **Storage:** Ensure all parts are clean and dry before storing the air fryer in a cool, dry place.

## TROUBLESHOOTING

If you encounter any issues with your air fryer, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Air fryer does not turn on.	Appliance is not plugged in; power outlet is not working; basket is not inserted correctly.	Ensure the power cord is securely plugged into a working 110V outlet. Push the basket firmly into the main unit until it clicks.
Food is not cooked evenly.	Basket is overfilled; food pieces are too large; food was not shaken/flipped.	Do not overfill the basket. Cut food into smaller, more uniform pieces. Shake or flip ingredients halfway through cooking.
White smoke coming from the appliance.	Fat residue from previous use; cooking fatty ingredients.	Clean the basket and crisper plate thoroughly after each use. For fatty foods, add a tablespoon of water to the bottom of the basket to prevent smoke.
Food is not crispy.	Too much moisture in food; not enough oil (if desired); temperature too low.	Pat food dry before air frying. Lightly toss with a small amount of oil for extra crispiness. Increase temperature slightly.

## SPECIFICATIONS

Feature	Detail
Brand	Sorandy
Model	B0CFLRN8P3
Capacity	6 Liters
Voltage	110 Volts
Control Method	Touch / Rotary Knob
Special Feature	Temperature Control, Auto Shutoff, 360 Degree Cycle Heating
Nonstick Coating	Yes
Material (Outer)	Acrylonitrile Butadiene Styrene (ABS)

Feature	Detail
Item Weight	7.83 pounds
Package Dimensions	13.62 x 12.2 x 11.57 inches

## WARRANTY AND SUPPORT

---

For warranty information or technical support, please contact the seller or manufacturer directly through the platform where the product was purchased. Keep your purchase receipt as proof of purchase.

Manufacturer: Sorandy