

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [CRKD](#) /

› [CRKD Nitro Deck - Professional Handheld Deck with Zero Stick Drift for Nintendo Switch and Switch OLED \(Black\)](#)

## CRKD 23ND

# CRKD Nitro Deck Instruction Manual

Model: 23ND | Brand: CRKD

## INTRODUCTION

---

Welcome to the CRKD Nitro Deck instruction manual. This guide provides essential information for setting up, operating, maintaining, and troubleshooting your professional handheld deck for Nintendo Switch and Switch OLED. The Nitro Deck is designed to enhance your gaming experience with zero stick drift, customizable controls, and pass-through charging.

## SETUP GUIDE

---

### Package Contents

- CRKD Nitro Deck (Black)
- USB-C to USB-C Cable
- Swappable Thumbstick Toppers

### Inserting Your Nintendo Switch

Carefully align your Nintendo Switch console with the USB-C connector inside the Nitro Deck. Gently slide the console into the deck until it clicks securely into place. Ensure the console is fully seated for proper connection.



*Image: Front view of the CRKD Nitro Deck with a Nintendo Switch console securely inserted.*

## Initial Connection and Pairing

The Nitro Deck connects directly via USB-C, eliminating the need for wireless pairing. For optimal performance, ensure 'Pro Controller Wired Communication' is enabled on your Nintendo Switch. Navigate to System Settings > Controllers and Sensors > Pro Controller Wired Communication and set it to 'On'.

---

*Video: Official trailer showcasing the CRKD Nitro Deck's features and compatibility.*

## OPERATING INSTRUCTIONS

---

### Button Layout and Functions

The Nitro Deck features a familiar button layout for intuitive gameplay. This includes A, B, X, Y face buttons, a directional pad, two clickable analog sticks (Hall effect), L/R shoulder buttons, and ZL/ZR triggers. Additionally, there are re-mappable back buttons for advanced customization.

# ZERO STICK DRIFT

## HALL EFFECT THUMBSTICKS



*Image: Detailed view of the Nitro Deck's precision Hall effect thumbsticks and responsive face buttons.*

### Re-mappable Back Buttons

Customize your gameplay by assigning functions to the four re-mappable back buttons. Refer to the CRKD Companion app for detailed instructions on button mapping and profile management.



*Image: The rear of the Nitro Deck showing the two sets of re-mappable back buttons for personalized control.*

### Swappable Thumbstick Toppers

The Nitro Deck allows you to swap out thumbstick toppers to suit your preference. Gently pull the existing topper straight up to remove it, then align and press down the desired topper until it securely snaps into place.



*Image: A thumbstick topper being removed from the Nitro Deck, illustrating the swappable design.*

## Pass-Through Charging

The Nitro Deck supports pass-through charging, allowing you to charge your Nintendo Switch console while actively playing. Connect your USB-C charging cable to the designated input port on the back of the Nitro Deck.



**BUILT FOR SPEED**  
CONNECTS VIA USB-C

*Image: Close-up of the USB-C input port on the Nitro Deck, enabling pass-through charging for the Switch.*

## Gyro Compatibility and Rumble Support

The Nitro Deck fully supports gyro controls and rumble feedback, providing an immersive and responsive gaming experience for compatible Nintendo Switch titles.

## MAINTENANCE

---

### Cleaning

To clean your Nitro Deck, use a soft, dry cloth. For stubborn smudges, a slightly damp cloth with mild soap can be used, ensuring no moisture enters any ports or openings. Avoid abrasive cleaners or solvents.

### Storage

When not in use, store the Nitro Deck in a cool, dry place away from direct sunlight and extreme temperatures. If storing for extended periods, ensure the Nintendo Switch console is removed from the deck.

## TROUBLESHOOTING

---

### Common Issues and Solutions

**Issue: Stick Drift**

Solution: The Nitro Deck features Hall effect thumbsticks designed for zero stick drift. If you experience any unexpected input, ensure the device is properly connected and the Switch's firmware is up to date.

**Issue: Device Not Responding**

Solution: Ensure the Nintendo Switch is securely seated in the Nitro Deck. Verify the "Pro Controller Wired Communication" setting is enabled in the Switch's system settings (System Settings > Controllers and Sensors). Disconnect and re-connect the Switch from the deck.

**Issue: Charging Problems**

Solution: Ensure the USB-C cable is properly connected to the input port on the Nitro Deck. Use a compatible power adapter and cable. Test with a different cable or adapter if issues persist.

## SPECIFICATIONS

---

ASIN	B0CFLVJBBD
Release Date	January 26, 2024
Product Dimensions	10.04 x 1.77 x 4.41 inches
Item Model Number	23ND
Item Weight	9.5 ounces
Manufacturer	CRKD
Country of Origin	China
Date First Available	October 13, 2023

## WARRANTY AND SUPPORT

---

For detailed warranty information and technical support, please visit the official CRKD website or contact their customer service directly. You can find more information and products at the [CRKD Store](#).