

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [HAEGER](#) /

› [HAEGER CF-300.017A Chest Freezer User Manual](#)

## HAEGER CF-300.017A

# HAEGER CF-300.017A Chest Freezer User Manual

Model: CF-300.017A | Brand: HAEGER

## 1. INTRODUCTION

This manual provides essential information for the safe and efficient use of your HAEGER CF-300.017A Chest Freezer. Please read these instructions carefully before installation and operation, and retain them for future reference. Proper installation, use, and maintenance will ensure optimal performance and extend the lifespan of your appliance.

### 1.1 Safety Information

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury. This appliance is intended for household use only. Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.

- Ensure the power supply matches the voltage specified on the appliance's rating plate.
- Do not damage the refrigerant circuit.
- Keep ventilation openings clear of obstruction.
- Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.
- Supervise children to ensure they do not play with the appliance.

## 2. SETUP AND INSTALLATION

### 2.1 Unpacking

Carefully remove all packaging materials. Inspect the freezer for any damage. If damage is found, do not install or operate the appliance, and contact your retailer immediately.

### 2.2 Placement

Choose a suitable location for your freezer. It should be placed on a firm, level surface away from direct sunlight, heat sources (e.g., stoves, radiators), and extreme cold. Ensure adequate ventilation around the appliance. Allow at least 10 cm of space around the sides and back for proper air circulation.



**Figure 1:** Front view of the HAEGER CF-300.017A Chest Freezer. This image shows the overall design of the freezer, highlighting its white exterior and the HAEGER logo.

## 2.3 Initial Power-on

1. After placing the freezer, allow it to stand upright for at least 2-4 hours before plugging it in. This allows the refrigerant to settle.
2. Clean the interior of the freezer with a damp cloth and mild detergent. Dry thoroughly.
3. Plug the freezer into a dedicated, grounded power outlet.
4. Set the temperature control to the desired setting (refer to the Operating section).
5. Allow the freezer to cool down for several hours (at least 4-6 hours) before loading food.

## 3. OPERATING INSTRUCTIONS

---

### 3.1 Temperature Control

The temperature control dial is typically located on the front or side of the freezer. Rotate the dial to adjust the internal temperature. Lower numbers usually indicate warmer temperatures, while higher numbers indicate colder temperatures. For optimal food preservation, a temperature of  $-18^{\circ}\text{C}$  ( $0^{\circ}\text{F}$ ) or colder is recommended.



**Figure 2:** HAEGER CF-300.017A Chest Freezer displaying its energy efficiency label. This image shows the freezer with the energy label attached, indicating its energy class F rating.

### 3.2 Food Storage

- Package food properly in airtight containers or freezer bags to prevent freezer burn and odor transfer.
- Do not overload the freezer. Allow space for air to circulate around items.
- Avoid placing hot food directly into the freezer; allow it to cool down first.
- Organize food for easy access and to minimize door opening time.

## 4. MAINTENANCE

---

### 4.1 Cleaning

Regular cleaning helps maintain hygiene and efficiency. Always unplug the freezer before cleaning.

- Clean the interior with a solution of mild detergent and warm water. Rinse with clean water and dry thoroughly.
- Wipe the exterior with a soft, damp cloth.
- Clean the condenser coils at the back of the freezer periodically (at least once a year) using a soft brush or vacuum cleaner to remove dust and debris. This improves energy efficiency.

### 4.2 Defrosting

Frost buildup reduces efficiency and storage capacity. Defrost the freezer when the frost layer reaches about 0.5 cm (1/4 inch) thickness.

1. Unplug the freezer.
2. Remove all food items and store them in another freezer or cooler.
3. Leave the lid open to allow frost to melt naturally. You can place towels at the bottom to absorb water.
4. Do not use sharp objects or heating devices to remove frost, as this can damage the freezer.
5. Once defrosted, clean and dry the interior thoroughly before plugging it back in and reloading food.

## 5. TROUBLESHOOTING

---

Before contacting service, check the following common issues:

- **Freezer not operating:** Check if it's plugged in, if the circuit breaker is tripped, or if there's a power outage.
- **Temperature is not cold enough:** Ensure the temperature setting is correct, the lid is closed properly, and there's no excessive frost buildup. Avoid placing hot food inside.
- **Excessive noise:** Check if the freezer is level and stable. Ensure nothing is vibrating against the unit.
- **Water on the floor:** This usually indicates a defrosting issue or a blocked drain (if applicable).

If the problem persists after checking these points, contact qualified service personnel.

## 6. SPECIFICATIONS

---

The following table details the technical specifications for the HAEGER CF-300.017A Chest Freezer.



HÆGER


CF-300.017A



**285 kWh/annum**



**287 L**

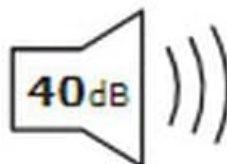

**40dB**

ABC**D**

2019/2016

**Figure 3:** Detailed energy label for the HÆGER CF-300.017A Chest Freezer. This image provides a close-up of the energy label, showing specific values for energy consumption, volume, and noise level.

Feature

Specification

Feature	Specification
Brand	HAEGER
Model Number	CF-300.017A
Energy Efficiency Class	F
Annual Energy Consumption	250 kWh/year
Total Usable Volume	287 liters
Gross Volume	288 liters
Temperature Rise Time	28 hours
Freezing Capacity	14 kg/24h
Climate Class	SN-ST
Noise Level	40 dB(A)
Product Dimensions (W x H x D)	1090 x 610 x 845 mm
Weight	42 kg
Color	White

*Note: Dimensions and weight are based on the product description.*

## 7. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included with your product or contact your retailer. Keep your proof of purchase for any warranty claims.

For technical assistance or spare parts, please contact HAEGER customer service through their official channels.