

[Manuals.plus](#) /

> [BLAUPUNKT](#) /

> [Blaupunkt Rock & Roll PS150 Wireless Bluetooth Outdoor Party Speaker Instruction Manual](#)

## BLAUPUNKT PS150

# Blaupunkt Rock & Roll PS150 Wireless Bluetooth Outdoor Party Speaker

Instruction Manual

## 1. INTRODUCTION

Thank you for purchasing the Blaupunkt Rock & Roll PS150 Wireless Bluetooth Outdoor Party Speaker. This manual provides essential information for the safe and efficient operation of your device. Please read it thoroughly before use and retain it for future reference.

## 2. SAFETY INFORMATION

- Do not expose the speaker to extreme temperatures, direct sunlight, or high humidity.
- Avoid dropping or subjecting the speaker to strong impacts.
- Do not attempt to disassemble or modify the speaker. Repairs should only be performed by qualified service personnel.
- Keep the speaker away from water and other liquids to prevent electric shock or damage.
- Ensure proper ventilation when operating the speaker.

## 3. WHAT'S IN THE BOX

- Blaupunkt Rock & Roll PS150 Party Speaker
- Karaoke Microphone
- Charging Cable
- User Manual

## 4. PRODUCT OVERVIEW

The Blaupunkt Rock & Roll PS150 is a portable outdoor party speaker designed for robust audio performance and ease of transport. It features a powerful 100W output, X-Bass enhancement, and multiple connectivity options.



Figure 1: Front view of the Blaupunkt Rock & Roll PS150 Party Speaker.

## 5. CONTROLS AND CONNECTIONS

The control panel on top of the speaker provides access to all functions.



Figure 2: Detailed view of the speaker's control panel.

- **Power Button:** Press to turn the speaker ON/OFF.
- **Source Button:** Select input source (Bluetooth, AUX, USB).
- **X-Bass Button:** Activate or deactivate the X-Bass sound enhancement.
- **Menu Button:** Access various settings.
- **Track Select Buttons (< / >):** Navigate between tracks.
- **TWS Button:** Initiate True Wireless Stereo pairing.
- **Volume Dial:** Adjust the master volume.
- **Numbered Buttons (1-6):** For direct track selection or preset functions.
- **AUX IN Port:** Connect external audio devices via a 3.5mm audio cable.
- **USB Port:** For USB playback and charging (5V, 2000mAh).

## 6. SETUP AND CHARGING

### 6.1 Initial Charging

Before first use, fully charge the speaker. Connect the charging cable to the speaker's charging port and a suitable power adapter. The charging indicator will illuminate. A full charge ensures optimal battery life for the 4500mAh battery.

## 6.2 Powering On/Off

Press and hold the Power button on the control panel to turn the speaker ON or OFF.

## 7. OPERATION

---

### 7.1 Bluetooth Pairing

1. Turn on the speaker. The Bluetooth indicator will flash, indicating it's in pairing mode.
2. Enable Bluetooth on your smartphone or tablet and search for available devices.
3. Select "Blaupunkt PS150" from the list.
4. Once paired, the Bluetooth indicator will stop flashing and remain solid.

### 7.2 AUX-In Mode

Connect an external audio device (e.g., MP3 player) to the AUX IN port using a 3.5mm audio cable. Press the Source button to select AUX mode.

### 7.3 USB Playback

Insert a USB drive with audio files into the USB port. The speaker will automatically switch to USB mode and begin playback. Use the track select buttons to navigate.

### 7.4 Karaoke Function

Connect the provided karaoke microphone to the designated microphone input. Adjust the microphone volume as needed. The speaker is ready for karaoke performances.

# GO BIG ON KARAOKE



CERTIFIED GERMAN BRAND

Figure 3: Using the karaoke function with the PS150 speaker.

## 7.5 X-Bass Feature

Press the X-Bass button to enhance the bass output for a deeper, more impactful sound experience.

# YOU'RE IN CONTROL



CERTIFIED GERMAN BRAND

Figure 4: Visual representation of the X-Bass feature.

## 8. PORTABILITY AND DESIGN

The PS150 is designed for portability with integrated wheels and a retractable handle, making it easy to transport to any location.

# FEEL THE X-BASS



Figure 5: The PS150 speaker being transported with its wheels and handle.

## 9. SPECIFICATIONS

Feature	Specification
Brand	BLAUPUNKT
Model Number	PS150 BK
Output Wattage	100 Watts
Connectivity Technology	Bluetooth
Compatible Devices	Smartphone, Tablet
Power Source	Battery Powered
Battery Capacity	4500mAh

Audio Input	Auxiliary
USB Output	5V, 2000mAh
Item Dimensions (L x W x H)	43 x 31.5 x 52.5 Centimeters
Item Weight	7500 Grams
Enclosure Material	Acrylonitrile Butadiene Styrene (ABS)

## 10. MAINTENANCE

---

- Clean the speaker with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- Store the speaker in a cool, dry place when not in use.
- Avoid prolonged exposure to direct sunlight or extreme temperatures.

## 11. TROUBLESHOOTING

---

### 11.1 No Power

- Ensure the speaker is fully charged.
- Check if the power cable is securely connected.
- Press and hold the power button for a few seconds to ensure it's not just a short press.

### 11.2 No Sound

- Increase the volume on both the speaker and the connected device.
- Ensure the correct input source (Bluetooth, AUX, USB) is selected.
- If using Bluetooth, ensure the device is properly paired.
- If using AUX, check the cable connection.

### 11.3 Bluetooth Disconnection

- Ensure the connected device is within the Bluetooth range (typically 10 meters).
- Avoid obstacles between the speaker and the device that may interfere with the signal.
- Try unpairing and re-pairing the device.

## 12. WARRANTY AND SUPPORT

---

The Blaupunkt Rock & Roll PS150 comes with a 1-year warranty from the date of purchase. For warranty claims, technical support, or any other inquiries, please contact:

- **Manufacturer:** Envent Worldwide Pvt Ltd
- **Customer Care WhatsApp Support:** 8860022600
- **Email ID:** [wecare@blaupunktaudio.in](mailto:wecare@blaupunktaudio.in)