

## Blow BT500

# BLOW BT500 Portable Bluetooth Speaker User Manual

Model: BT500 | Brand: Blow

## INTRODUCTION

Thank you for purchasing the BLOW BT500 Portable Bluetooth Speaker. This manual provides essential information for the safe and efficient use of your device. Please read it thoroughly before operation and keep it for future reference.

The BT500 is a compact wireless speaker featuring Bluetooth connectivity, a powerful rechargeable battery, volume control, FM radio, a microSD card slot, and a USB input. It is designed for versatile audio playback on the go.

## Package Contents

- BLOW BT500 Bluetooth Speaker
- Micro USB Charging Cable
- 3.5mm Mini Jack Audio Cable
- Carrying Strap



Image: The BLOW BT500 speaker shown with its included accessories: a micro USB charging cable, a 3.5mm mini jack audio cable, and a carrying strap. The speaker itself is black with a mesh grille and control buttons on top.

## PRODUCT OVERVIEW

---



Image: A front-angled view of the BLOW BT500 portable Bluetooth speaker. It is cylindrical, black, with a textured mesh exterior and a red 'B' logo on the front. A black carrying strap is attached.





Image: A side view of the BLOW BT500 speaker, highlighting the control panel on the top surface. Buttons for Bluetooth, power, mode, volume up/next track, and volume down/previous track are visible.





Image: The rear view of the BLOW BT500 speaker, showing the protected port area. This area typically houses the charging port, USB input, and microSD card slot, covered by a rubber flap for protection.

## SETUP

---

### Charging the Speaker

Before first use, fully charge the speaker. Connect the supplied micro USB cable to the speaker's charging port and the other end to a USB power source (e.g., computer USB port, USB wall adapter). The charging time is approximately 5-6 hours. The charging indicator light will typically show red during charging and turn off or change color when fully charged.

### Attaching the Carrying Strap

Attach the included carrying strap to the designated loops on either end of the speaker for easy portability.

## OPERATING INSTRUCTIONS

---

### Power On/Off

- To power on, press and hold the **Power button** until you hear an audible prompt.
- To power off, press and hold the **Power button** again until the speaker shuts down.

### Bluetooth Mode

Upon powering on, the speaker will automatically enter Bluetooth pairing mode, indicated by a flashing LED light. If not, press the **Mode (M) button** to switch to Bluetooth mode.

1. Enable Bluetooth on your smartphone, tablet, or other device.
2. Search for available Bluetooth devices.
3. Select "**BT500**" from the list.
4. Once paired, the speaker will confirm with an audible prompt, and the LED light will become solid.
5. You can now play audio from your connected device.

The Bluetooth range is approximately 10 meters (33 feet).

### FM Radio Mode

Press the **Mode (M) button** to switch to FM radio mode.

- To auto-scan and save stations, press and hold the **Play/Pause button**.
- To switch between saved stations, use the **Previous Track** (*Volume Down*) and **Next Track** (*Volume Up*) buttons.

### USB/MicroSD Card Playback

Insert a USB flash drive or a microSD card (up to 32GB) into the respective slot. The speaker will automatically switch to the corresponding mode and begin playing audio files.

- Use the **Play/Pause button** to pause or resume playback.
- Press the **Previous Track** (*Volume Down*) or **Next Track** (*Volume Up*) buttons to skip tracks.

### AUX Mode

Connect an external audio device (e.g., MP3 player, laptop) to the speaker's 3.5mm AUX input using the supplied mini jack cable.

The speaker will automatically switch to AUX mode.

Control playback from your connected device.

### Volume Control

- Press and hold the **Volume Up** button to increase volume.
- Press and hold the **Volume Down** button to decrease volume.

## MAINTENANCE

---

- Keep the speaker dry. Do not expose it to water or excessive moisture.
- Clean the speaker with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- Avoid extreme temperatures.
- Do not disassemble the speaker. This will void the warranty and may cause damage.
- Store in a cool, dry place when not in use for extended periods.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Speaker does not turn on.	Battery is depleted.	Charge the speaker fully (5-6 hours).
No sound from speaker.	Volume is too low; Device not connected; Incorrect mode.	Increase speaker and device volume; Ensure proper Bluetooth pairing or AUX connection; Press <b>Mode (M) button</b> to select correct input.
Bluetooth pairing fails.	Speaker not in pairing mode; Device too far; Interference.	Ensure speaker is in Bluetooth mode (flashing LED); Move device closer to speaker (within 10m); Turn off other Bluetooth devices.
FM radio reception is poor.	Weak signal; Environmental interference.	Relocate the speaker to an area with better reception; The charging cable can sometimes act as an antenna, try connecting it.

## SPECIFICATIONS

Feature	Specification
Bluetooth Version	V4.2
Bluetooth Range	Up to 10m (33ft)
Speaker Output	2 x 6W
Frequency Range	100Hz – 20kHz
FM Radio Frequency	87.5 MHz – 108 MHz
Memory Card Slot	MicroSD, max 32GB
Input Ports	USB, 3.5mm Jack (AUX)
Charging Current	DC 5V, 500mAh
Built-in Battery	2000mAh
Charging Time	5-6 hours
Play Time	Up to 7 hours
Dimensions (L x W x H)	220 x 98.7 x 94.8 mm (8.66 x 3.89 x 3.73 inches)
Weight	750g (1.65 lbs)
Compatible Devices	Smartphone, tablet, laptop, desktop computer, MP3 player
Material	Plastic








# WARRANTY AND SUPPORT

BLOW products are known for their quality and reliability. For warranty information and technical support, please refer to the warranty card included with your purchase or visit the official BLOW website. Keep your proof of purchase for warranty claims. For further assistance, you may contact the retailer where you purchased the product.



© 2023 Blow. All rights reserved.

## Related Documents - BT500

	<p><a href="#">BLOW CityLIGHT Active Loudspeaker Bluetooth with Microphone User Manual</a></p> <p>User manual for the BLOW CityLIGHT active loudspeaker, detailing its features, controls, Bluetooth connectivity, TWS function, and specifications. Includes safety information and connection guides.</p>
	<p><a href="#">BLOW Remote Control User Manual for LG TVs</a></p> <p>Comprehensive user manual for the BLOW remote control designed for LG televisions, covering operation, button functions, and pairing instructions.</p>
	<p><a href="#">BLOW iTag Bluetooth Locator User Manual and Features</a></p> <p>Comprehensive user manual for the BLOW iTag Bluetooth locator. Learn how to set up, use features like anti-lost, location tracking, photography, and battery replacement. Includes warranty and compliance information.</p>
	<p><a href="#">Návod k obsluze: Kamera BLOW WiFi H-492 2MP se solárním panelem (T864B)</a></p> <p>Kompletní návod k obsluze pro kameru BLOW WiFi H-492 2MP se solárním panelem (model T864B). Zjistěte, jak nainstalovat, nastavit a používat vaši novou bezpečnostní kameru.</p>
	<p><a href="#">BT-18 2-IN-1 Wireless Audio Adapter User Guide</a></p> <p>User guide for the BT-18 2-IN-1 Wireless Audio Adapter, covering features, specifications, operation instructions, and troubleshooting for Bluetooth audio transmission and reception.</p>



User manual for the T864C BLOW WiFi Camera 5MP (H-425, 78-813). Learn how to set up, connect, and use your camera with the V380 Pro app, including configuration, recording, and troubleshooting.