

manuals.plus /

› [Hedgehog](#) /

› [Hedgehog Hanger Shoe Dryer and Deodorizer with Ionic i3 Turbo Technology Instruction Manual](#)

Hedgehog Hanger Dryer Ionic i3 (Model 01)

Hedgehog Hanger Shoe Dryer and Deodorizer with Ionic i3 Turbo Technology

Model: Hanger Dryer Ionic i3 (Model 01)

1. INTRODUCTION

Thank you for choosing the Hedgehog Hanger Shoe Dryer and Deodorizer. This device is designed to efficiently dry and deodorize various footwear and gear, including sneakers, boots, gloves, and mittens. Featuring Ionic i3 Turbo Technology, it provides rapid drying and odor elimination, ensuring your items are fresh and ready for use. Please read this manual thoroughly before operation to ensure safe and optimal performance.



Image 1.1: The Hedgehog Hanger Shoe Dryer, showcasing its design with shoes and gloves placed on the drying arms.

2. SAFETY INFORMATION

General Safety Precautions

- Read all instructions before using the appliance.
- Do not immerse the appliance, cord, or plug in water or other liquids.
- Keep out of reach of children. This appliance is not intended for use by persons with reduced physical, sensory, or mental capabilities unless supervised.

- Ensure the appliance is placed on a stable, heat-resistant surface or hung securely.
- Do not block air vents during operation.
- Unplug the appliance when not in use and before cleaning.

Electrical Safety

- Operate only on a 110-volt AC power supply.
- Do not operate any appliance with a damaged cord or plug.
- Do not attempt to repair the appliance yourself. Contact qualified service personnel.
- Avoid using extension cords unless absolutely necessary and ensure they are rated for the appliance's wattage (650 watts).

3. PACKAGE CONTENTS

Upon unpacking, please verify that all components are present:

- Hedgehog Hanger Shoe Dryer Main Unit
- Drying Arms (expandable for up to 4 pairs)
- Power Charger
- Instruction Manual

4. PRODUCT OVERVIEW

The Hedgehog Hanger Shoe Dryer is equipped with advanced features for effective drying and deodorizing:

- **Ionic i3 Technology:** Emits ions to neutralize odors and refresh items.
- **Adjustable Heat Settings:** Offers room temperature, 37°C (98°F), 45°C (113°F), and 60°C (140°F) for various material types.
- **Turbocharged Drying:** Patented turbine technology for rapid drying, up to 5 times faster than conventional dryers.
- **Tornado Mode:** The fastest drying setting for quick results.
- **Silent Mode:** Operates quietly for minimal disturbance.
- **Adjustable Timer:** Set drying duration from 15 minutes to 10 hours.
- **Fire-Safe Ceramic Warmer:** Ensures safe operation with automatic overheating protection.
- **Expandable Design:** Accommodates up to 4 pairs of shoes or gloves simultaneously.

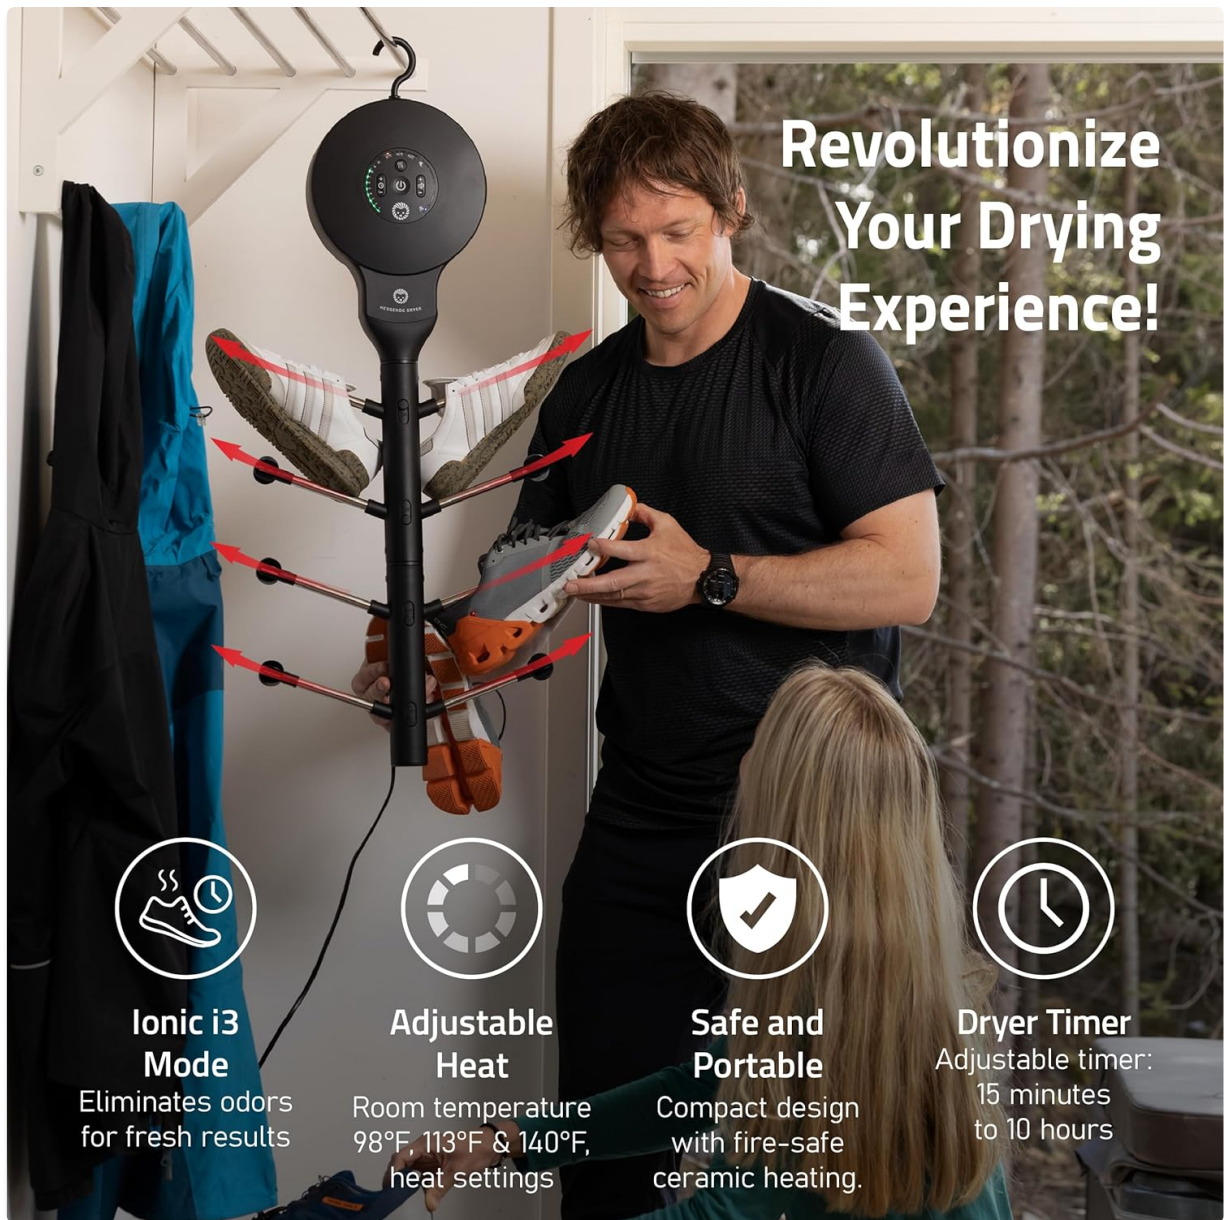


Image 4.1: The Hedgehog Hanger Shoe Dryer in use, demonstrating its capacity for multiple items.

5. SETUP

Follow these steps to set up your Hedgehog Hanger Shoe Dryer:

1. **Unpack:** Carefully remove all components from the packaging.
2. **Assemble Drying Arms:** Insert the drying arms into the designated slots on the main unit. Ensure they are securely clicked into place. The arms can be adjusted or expanded as needed.
3. **Positioning:** The Hanger Dryer is designed to be hung. Use the integrated steel hook to hang the unit securely on a rod, hook, or similar fixture in a well-ventilated area. Ensure it is stable and can support the weight of the dryer plus the items being dried.
4. **Connect Power:** Plug the power charger into the dryer unit, then plug the charger into a standard 110-volt electrical outlet.



Image 5.1: Proper placement of shoes on the drying arms.

6. OPERATING INSTRUCTIONS

The control panel allows you to customize drying settings. Refer to Image 6.1 for control panel layout.

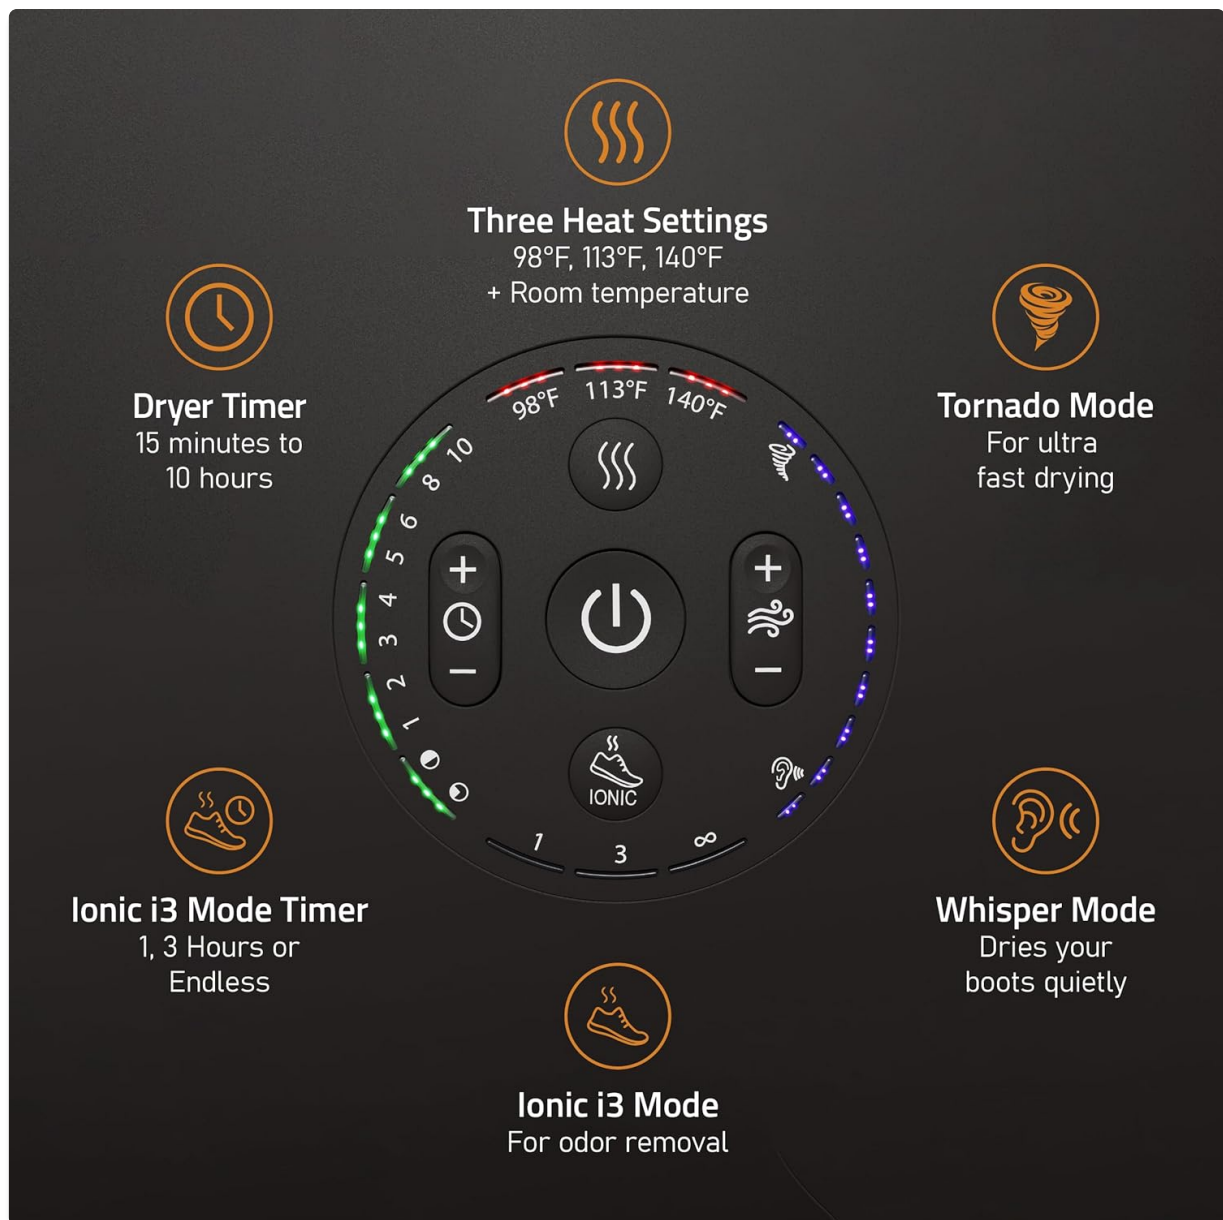


Image 6.1: Detailed view of the control panel.

Basic Operation

1. **Place Items:** Position shoes, boots, gloves, or mittens onto the drying arms. Ensure air can circulate freely within the items.
2. **Power On:** Press the central power button (**U**) to turn on the dryer.
3. **Select Heat Setting:** Use the heat control buttons (**SSS**) to cycle through room temperature, 37°C (98°F), 45°C (113°F), or 60°C (140°F). Choose a lower temperature for delicate materials.
4. **Set Timer:** Use the timer buttons (+ / -) to set the desired drying duration, from 15 minutes to 10 hours.
5. **Activate Ionic i3 Mode (Optional):** Press the Ionic button (**IONIC**) to activate the odor elimination function. You can set the Ionic mode timer for 1, 3 hours, or endless operation.
6. **Select Fan Mode (Optional):**
 - **Tornado Mode:** Press the Tornado button (**Tornado icon**) for maximum airflow and fastest drying.
 - **Silent Mode:** Press the Silent button (**Ear icon**) for reduced noise operation.
7. **Start Drying:** The dryer will begin operation once settings are selected.

8. **Power Off:** The unit will automatically shut off after the timer expires. You can manually turn it off by pressing the power button.



Image 6.2: User interacting with the control panel to adjust settings.

7. MAINTENANCE

Regular maintenance ensures the longevity and efficiency of your dryer.

Cleaning

- Always unplug the dryer before cleaning.
- Wipe the exterior of the unit with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- Periodically check the air intake filter (located at the back of the unit) for dust and debris. Clean the filter by gently brushing or vacuuming it. Ensure the filter is dry before reattaching.



Image 7.1: Location of the air intake filter for maintenance.

Storage

When not in use, store the dryer in a cool, dry place, away from direct sunlight and moisture. You may detach the drying arms for more compact storage.

8. TROUBLESHOOTING

If you encounter issues with your Hedgehog Hanger Shoe Dryer, refer to the following common problems and solutions:

| Problem | Possible Cause | Solution |
|-----------------------------------|--|---|
| Dryer does not turn on. | No power supply; Power button not pressed. | Ensure the power cord is securely plugged into a working outlet. Press the power button. |
| Items are not drying efficiently. | Incorrect heat setting; Blocked airflow; Overloaded drying arms. | Increase heat setting if appropriate for material. Ensure items are placed to allow airflow. Reduce the number of items if overloaded. Clean air intake filter. |
| Unusual noise during operation. | Air intake filter blocked; Internal obstruction. | Clean the air intake filter. If noise persists, discontinue use and contact customer support. |
| Ionic i3 mode not working. | Ionic button not pressed; Unit malfunction. | Ensure the Ionic button is pressed and the indicator light is on. If not, contact customer support. |

If the problem persists after attempting these solutions, please contact Hedgehog customer support for assistance.

9. SPECIFICATIONS

| Feature | Detail |
|---------------------|---|
| Brand | Hedgehog |
| Model Name | Hanger Dryer Ionic i3 |
| Model Number | 01 |
| Item Weight | 4.6 pounds |
| Product Dimensions | 11 x 8.85 x 7.5 inches |
| Installation Type | Built-In (Hanger) |
| Form Factor | Freestanding (when hung) |
| Special Features | Adjustable heat, Variable Speed, Ionic i3 Technology, Timer |
| Color | Black |
| Voltage | 110 Volts |
| Wattage | 650 watts |
| Material | Plastic |
| Included Components | Charger |

10. WARRANTY AND SUPPORT

The Hedgehog Hanger Shoe Dryer is designed for durability and performance. For specific warranty details, please refer to the warranty card included with your product or visit the official Hedgehog website. For technical support, troubleshooting assistance, or to inquire about replacement parts, please contact Hedgehog customer service through the contact information provided on the product packaging or website.