

JKZTJOF K-1028E

JKZTJOF K-1028E Universal Air Conditioner Remote Control User Manual

Model: K-1028E | Brand: JKZTJOF

1. INTRODUCTION

Welcome to the user manual for your JKZTJOF K-1028E Universal Air Conditioner Remote Control. This manual provides detailed instructions on how to set up, operate, and troubleshoot your new remote control. Please read this manual carefully before use to ensure optimal performance and longevity of your device.

The K-1028E is designed to be compatible with over 99% of air conditioner brands, offering a convenient 1000-in-1 solution. **Please note:** This universal remote control is not compatible with WINDOW and PORTABLE air conditioner units.



Image: The K-1028E universal A/C remote control with text highlighting its compatibility with over 1000 air conditioner brands and a

2. PRODUCT OVERVIEW

Key Features

- **Wide Compatibility:** Controls over 1000 different air conditioner brands.
- **Convenient Functions:** Includes clock, timer (ON/OFF), factory default reset, fast cooling, and fast heating functions.
- **Easy to Use:** Simple programming methods for quick setup.
- **Large Screen Display:** Clear LCD screen for easy viewing of settings.
- **LED Light:** Integrated light for use in dark environments.
- **Ergonomic Design:** Comfortable to hold and operate.

Remote Control Layout

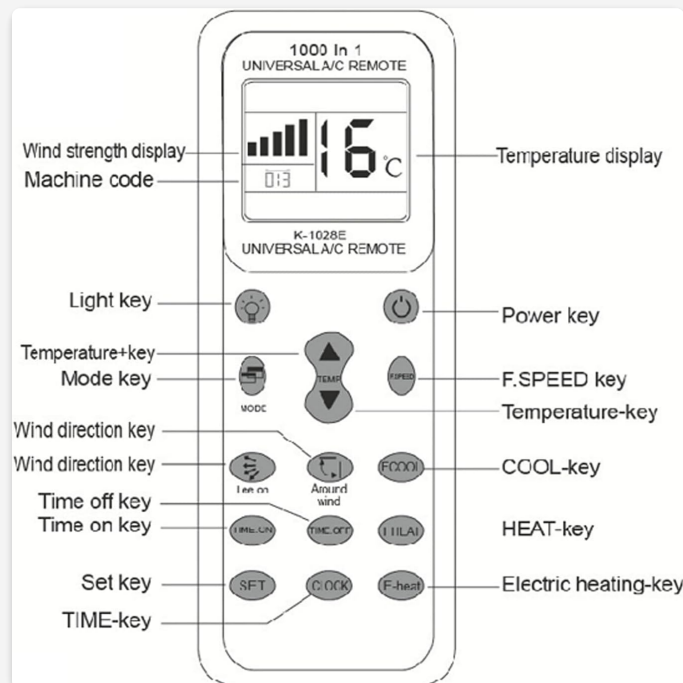


Image: A detailed diagram of the K-1028E universal A/C remote control, labeling each button and display element such as temperature display, wind strength, mode key, timer keys, and set key.

The remote control features a clear LCD screen at the top, displaying temperature, mode, fan speed, and other indicators. Below the screen are various function buttons:

- **LIGHT Key:** Activates the backlight for the LCD screen.
- **ON/OFF Key:** Powers the air conditioner on or off.
- **TEMP +/- Keys:** Adjusts the temperature setting.
- **MODE Key:** Cycles through operating modes (e.g., Cool, Heat, Fan, Dry, Auto).
- **F.SPEED Key:** Adjusts fan speed.
- **M.SWING / A.SWING Keys:** Controls manual or automatic swing of the air deflector.
- **TIME ON / TIME OFF Keys:** Sets the timer for automatic power on or off.
- **F.COOL / F.HEAT Keys:** Activates fast cooling or fast heating modes.
- **SET Key:** Used for programming and setting functions.
- **CLOCK Key:** Sets the current time.

- **OK Key:** Confirms selections during programming or setting.

3. SETUP AND PROGRAMMING

Battery Installation

Before using the remote control, you need to install two AAA batteries (not included). Ensure correct polarity (+/-) when inserting the batteries.

1. Open the battery compartment cover on the back of the remote control.
2. Insert two AAA batteries, matching the polarity indicators inside the compartment.
3. Close the battery compartment cover securely.



Image: Front and back view of the K-1028E universal A/C remote control, showing the LCD screen, buttons, and battery compartment with manual code input instructions.

Programming Your Air Conditioner

Some air conditioners may work directly with the K-1028E remote without programming. If your air conditioner does not respond, follow one of the programming methods below. It is recommended to try the Manual Code Input method first if you know your AC brand.

Method 1: Manual Code Input

This method requires you to find the specific code for your air conditioner brand from the provided code list (usually found in the remote's packaging or on the back of the remote itself).

1. Manually power on your air conditioner unit.

2. Press and hold the **SET** button on the remote control for approximately 3 seconds until the code on the LCD screen starts flashing.
3. Use the **TEMP +** or **TEMP -** buttons to input the 3-digit code for your air conditioner brand.
4. Point the remote at your air conditioner and press the **ON/OFF** button repeatedly. If the air conditioner responds (e.g., turns on/off, changes mode), you have found the correct code.
5. Press the **OK** button to confirm and save the code. The code will stop flashing.

Method 2: Automatic Search

This method allows the remote to automatically search for a compatible code.

1. Manually power on your air conditioner unit.
2. Press and hold the **SET** button for approximately 6 seconds. The code on the LCD screen will start flashing and automatically increase. The remote is now in automatic search mode.
3. Point the remote at your air conditioner. The remote will send out codes one by one.
4. When your air conditioner responds (e.g., turns on/off, beeps), immediately press the **OK** button to confirm and save the code.

Method 3: Manual Code Search

This method is similar to automatic search but allows for manual incrementing of codes.

1. Manually power on your air conditioner unit.
2. Press and hold the **SET** button for approximately 3 seconds until the code on the LCD screen starts flashing.
3. Press the **SET** button repeatedly to manually cycle through the codes.
4. Point the remote at your air conditioner. When your air conditioner responds, immediately press the **OK** button to confirm and save the code.

4. OPERATING INSTRUCTIONS

Basic Operation

- **Power On/Off:** Press the **ON/OFF** button to turn the air conditioner on or off.
- **Mode Selection:** Press the **MODE** button to cycle through available modes (e.g., Cool, Heat, Fan, Dry, Auto). The current mode will be displayed on the LCD screen.
- **Temperature Adjustment:** Use the **TEMP +** or **TEMP -** buttons to increase or decrease the desired temperature.
- **Fan Speed Adjustment:** Press the **F.SPEED** button to cycle through different fan speeds (e.g., Auto, Low, Medium, High).



Image: The K-1028E remote control in a living room setting, illustrating its cooling and heating functions with blue and orange airflows from an air conditioner unit.

Advanced Functions

- **Timer ON/OFF:** Press **TIME ON** or **TIME OFF** to set a specific time for the air conditioner to turn on or off automatically. Use **TEMP +** or **TEMP -** to adjust the time, then press **OK** to confirm.
- **Clock Setting:** Press the **CLOCK** button, then use **TEMP +** or **TEMP -** to set the current time. Press **CLOCK** again or **OK** to confirm.
- **Light Function:** Press the **LIGHT** button to illuminate the remote's LCD screen for better visibility in low light conditions.
- **Swing Control:** Use the **M.SWING** (Manual Swing) or **A.SWING** (Automatic Swing) buttons to adjust the direction of the air deflector.
- **Fast Cooling/Heating:** Press **F.COOL** for rapid cooling or **F.HEAT** for rapid heating.



Image: The K-1028E remote control being used in a bedroom, demonstrating its long-distance control capability (up to 26 feet) and fast response time (0.2 seconds).

5. MAINTENANCE

Cleaning and Storage

- Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- If the remote will not be used for an extended period, remove the batteries to prevent leakage and damage.
- Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.

6. TROUBLESHOOTING

Common Issues and Solutions

- **Remote not working:**
 - Check if batteries are installed correctly and have sufficient power. Replace if necessary.
 - Ensure there are no obstructions between the remote and the air conditioner's receiver.
 - Verify that the remote is programmed with the correct code for your air conditioner. Re-program if unsure.
- **Air conditioner not responding to commands:**
 - Confirm the remote is pointed directly at the air conditioner.
 - The remote's operating range is approximately 26 feet (8 meters). Ensure you are within this range.
 - If the air conditioner has its own power button, try operating it manually to confirm it is functioning.
- **Display issues (e.g., dim screen, missing segments):**
 - Replace the batteries. Low battery power can affect display clarity.
- **Cannot find a compatible code:**
 - Try all programming methods (Manual Code Input, Automatic Search, Manual Code Search).
 - Ensure your air conditioner is not a window or portable unit, as these are generally not compatible.

7. SPECIFICATIONS

Product Specifications

- **Model:** K-1028E
- **Brand:** JKZTJOF
- **Compatibility:** Universal for over 99% of air conditioner brands (not compatible with window or portable A/C units).
- **Power:** 2 x AAA batteries (not included)
- **Max Number of Supported Devices:** 1 (controls one A/C unit at a time)
- **Special Feature:** Universal control with clock, timer, fast cool/heat, LED light.
- **Color:** White

8. WARRANTY AND SUPPORT

Warranty Information

Specific warranty details for the JKZTJOF K-1028E Universal Air Conditioner Remote Control are not provided in this manual. Please refer to the product packaging or contact your retailer for warranty terms and conditions.

Customer Support

If you encounter any issues that cannot be resolved using the troubleshooting guide, or if you require further assistance, please contact the seller or manufacturer's customer support. Have your product model number (K-1028E) and purchase details ready when contacting support.