

[Manuals.plus](#) /

› [Kenmore](#) /

› Kenmore 24" Built-In Stainless Steel Tub Dishwasher User Manual

Kenmore 2214585

Kenmore 24" Built-In Stainless Steel Tub Dishwasher User Manual

Model: 2214585

INTRODUCTION

This manual provides essential information for the safe and efficient operation, installation, and maintenance of your Kenmore 24" Built-In Stainless Steel Tub Dishwasher. Please read all instructions carefully before using your appliance to ensure optimal performance and longevity.



Figure 1: Front view of the Kenmore 24" Built-In Stainless Steel Tub Dishwasher.



Figure 2: Dishwasher dimensions, showing 23 9/16" width and 33 7/8" height.

SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury to persons. This appliance is intended for domestic use only.

- Read all instructions before using the dishwasher.
- Do not touch the heating element during or immediately after use.

- Use only detergents and rinse aids recommended for use in a dishwasher.
- Do not abuse, sit on, or stand on the door or dish rack of the dishwasher.
- Keep children away from detergent and rinse aid, and keep children away from the open door of the dishwasher.
- The dishwasher must be properly grounded.
- Do not operate the dishwasher unless all enclosure panels are properly in place.
- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent.

SETUP

Installation

The Kenmore 24" Built-In Dishwasher is designed for permanent installation. Professional installation is recommended to ensure proper connection to water and electrical supplies, and to prevent potential leaks. Ensure the appliance is level and securely fastened within the cabinet opening.


Initial Use

Before the first wash, ensure the rinse aid dispenser is filled and the detergent dispenser is loaded. It is recommended to run an empty cycle with detergent to clean the interior of the dishwasher.

OPERATING INSTRUCTIONS

Loading Dishes

Proper loading is crucial for effective cleaning. Scrape off large food particles before loading. Avoid overcrowding to allow water and detergent to reach all surfaces.

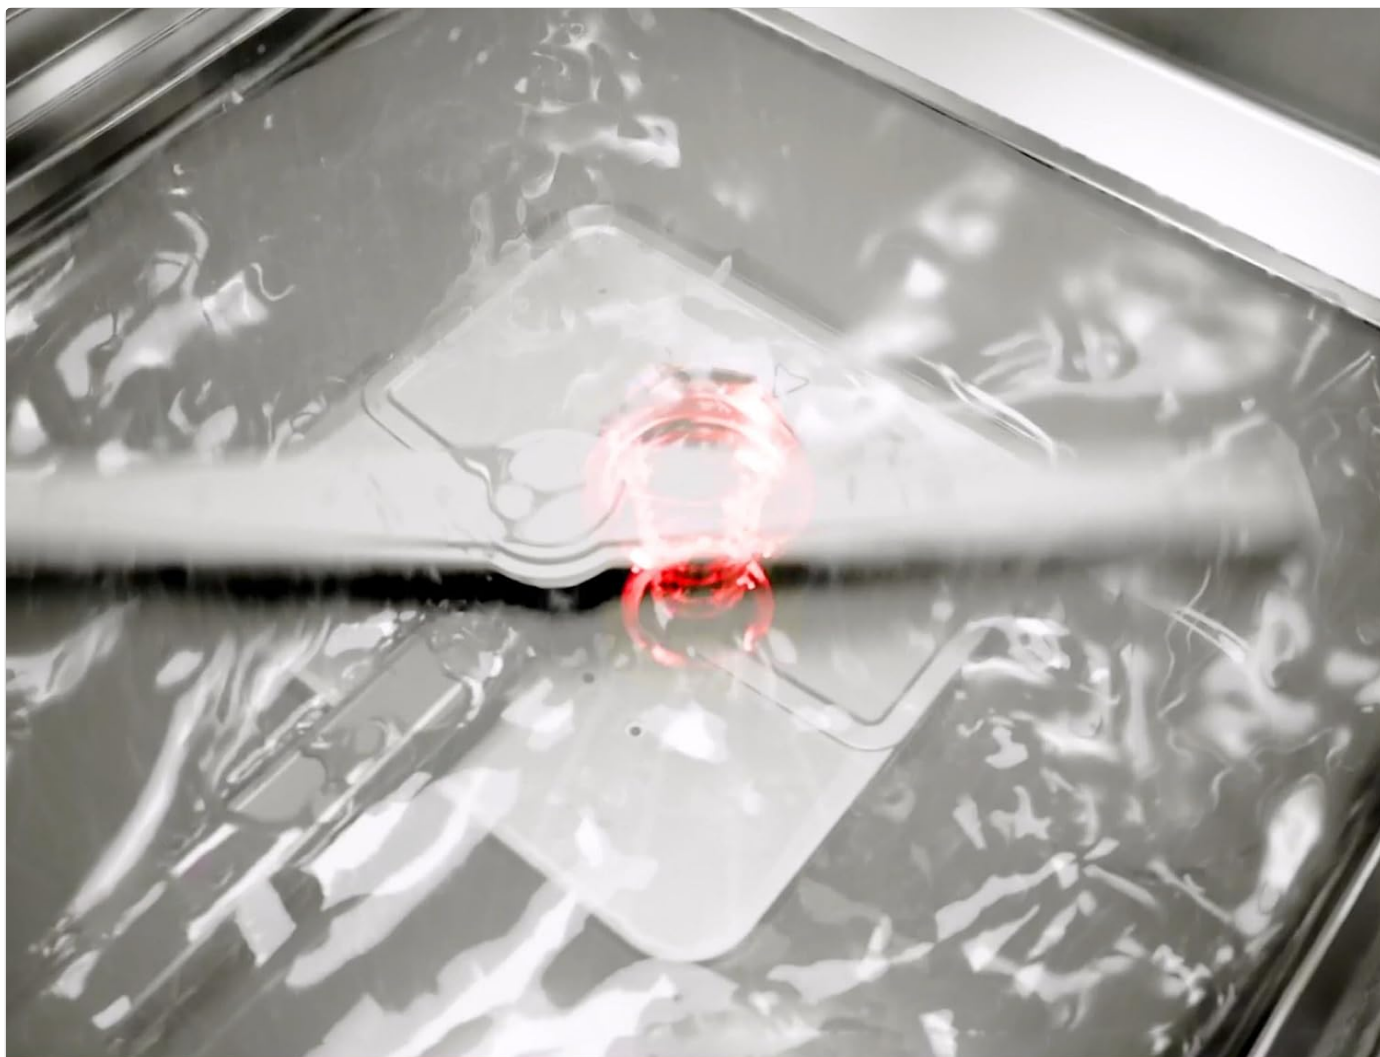

SmartWash® Cycle

Sensor technology delivers the best cleaning results for each unique load.

Figure 3: Interior view of the dishwasher with dishes properly loaded.

MoreSpace Adjustable Rack

The MoreSpace Adjustable Upper Rack can be raised, lowered, or entirely removed to accommodate large or oddly shaped items, such as pots, tall glasses, or delicate stemware. This provides flexibility to create the space you need for various dish sizes.



MoreSpace™ Adjustable Rack

Allows you to lift, lower, or remove the rack to accommodate large items.

Figure 4: Close-up of the MoreSpace Adjustable Rack, demonstrating its flexibility.

Cutlery Basket

The dishwasher includes a dedicated cutlery basket for silverware. Place forks and spoons with handles up, and knives with handles down for safety. Ensure items are separated to allow for thorough cleaning.



Figure 5: The removable cutlery basket for organizing silverware.

Cycle Selection and Options

Your dishwasher offers various cycles and options to suit different cleaning needs. The control panel is located on the top edge of the door.



Figure 6: The control panel displaying various cycles and options.

- **SmartWash Cycle:** This sensor-based cycle detects soil levels in the water and automatically adjusts water temperature, pressure, and cycle time for optimal cleaning.
- **Express Cycle:** Designed for full loads that need to be cleaned quickly, typically in about 50 minutes.
- **Half Load Option:** Ideal for smaller loads, allowing you to save water and energy when the dishwasher is not full.



Half Load Option

The perfect solution when you have just a few dishes to clean.

Figure 7: The Half Load option is perfect for smaller dish quantities.

- **Extra Dry Option (SmartDry Technology):** Uses hot water to promote condensation and dry dishes quickly, ensuring items come out cabinet-ready.



SmartDry™ System

Uses hot water to promote the condensation of moisture in the tub for ready-to-use dishes.

Figure 8: SmartDry Technology ensures dishes, including delicate glassware, are thoroughly dried.

- **Sani Rinse Option:** A UL-certified option that uses high temperature to sanitize dishes.
- **Delay Start:** Allows you to program the dishwasher to begin a cycle 1 to 24 hours later.

Starting a Cycle

To start a cycle, select your desired wash cycle and any additional options. Close the dishwasher door firmly. The touch controls on the top panel will illuminate. Press the 'Start' button to begin the cycle. The dishwasher operates quietly, minimizing disruption.



Quiet Dishwashers

Operates at 57 dBA* for quiet cycles that make it easy to enjoy after-dinner chats.

*Per IEC Standards

Figure 9: The Kenmore dishwasher is designed for quiet operation, blending seamlessly into your home environment.

Video 1: Official product video showcasing the Kenmore 24" Built-In Stainless Steel Tub Dishwasher and its features.

MAINTENANCE

3-Stage UltraWash Filter

The 3-stage UltraWash Filter captures particles as small as fine sand, preventing them from redepositing on dishes. For optimal performance, the filter should be removed and cleaned monthly. Refer to the detailed instructions in the full product manual for filter removal and cleaning procedures.

General Cleaning

The dishwasher features a fingerprint-resistant stainless steel exterior, making it easy to maintain its appearance. Wipe down the exterior with a soft, damp cloth and mild detergent as needed. For the interior, periodically clean with a dishwasher cleaner or a mixture of vinegar and baking soda to remove mineral deposits and odors.



Multiple Finishes

Available in white, black and fingerprint resistant stainless steel.



Flush Pocket Handle

Brings an elevated style to any kitchen and digital display gives at-a-glance information.

Figure 10: The dishwasher is available in multiple finishes, including fingerprint resistant stainless steel for easy cleaning.

Detergent and Rinse Aid

Always use automatic dishwasher detergent, not liquid dish soap. Fill the main wash dispenser according to the detergent manufacturer's recommendations. Ensure the rinse aid dispenser is filled to improve drying performance and prevent water spots.

TROUBLESHOOTING

If your dishwasher is not operating as expected, check the following common issues before contacting service:

- **Dishwasher not starting:** Ensure the door is fully closed and latched, and the 'Start' button has been pressed. Check if the circuit breaker has tripped.
- **Dishes not clean:** Verify proper loading, ensure spray arms are not blocked, check detergent levels, and clean the UltraWash filter.
- **Dishes not drying:** Ensure the rinse aid dispenser is full and the Extra Dry option is selected if desired.
- **Unusual noises:** Check for foreign objects in the pump area or spray arms.

- **Leak detection:** The built-in leak detection system will automatically drain the tub and alert you if a problem is detected. If this occurs, contact customer support.

For more detailed troubleshooting steps, refer to the complete user manual or contact Kenmore customer support.

SPECIFICATIONS

Feature	Specification
Brand	Kenmore
Model Name	Built-In Stainless Steel Tub Dishwasher
Model Number	2214585
Installation Type	Built-In
Product Dimensions (DxWxH)	24.61"D x 23.55"W x 33.88"H
Item Weight	90.4 pounds
Capacity	14 Place Settings
Noise Level	57 dB
Inner Material	Stainless Steel
Controls Type	Touch
Voltage	115 Volts
Annual Energy Consumption	239 Kilowatt Hours Per Year
Certification	Energy Star
Included Components	Cutlery Basket
UPC	843086105371

WARRANTY AND SUPPORT

For warranty information, technical support, or to schedule service, please contact Kenmore customer support. Keep your purchase receipt and model number handy for faster assistance. You can find contact information on the Kenmore official website or in the full product documentation that came with your appliance.

© 2024 Kenmore. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CFPN518X>

More documents and user manuals: <https://manuals.plus/>