

[Manuals.plus](#) /

› [Kenmore](#) /

› Kenmore 24" Built-In Stainless Steel Tub Dishwasher User Manual

Kenmore 24" Built-In Stainless Steel Tub Dishwasher

Kenmore 24" Built-In Stainless Steel Tub Dishwasher User Manual

Model: 2214592

Brand: Kenmore

INTRODUCTION

This user manual provides comprehensive instructions for the Kenmore 24" Built-In Stainless Steel Tub Dishwasher. It covers installation, operation, maintenance, and troubleshooting to ensure optimal performance and longevity of your appliance. This dishwasher is designed to provide powerful and efficient cleaning for your dishes, featuring advanced technologies such as SmartWash, UltraWash, SmartDry Plus, and a flexible MoreSpace Adjustable Rack system.



Figure 1: Kenmore 24" Built-In Stainless Steel Tub Dishwasher (White Model)

SAFETY INFORMATION

Always read and follow all safety instructions before using this appliance to reduce the risk of fire, electric shock, or injury. Keep this manual for future reference.

- Ensure the dishwasher is properly grounded.
- Do not operate the dishwasher unless all enclosure panels are properly in place.
- Use only detergents and rinse agents recommended for dishwashers.
- Do not touch the heating element during or immediately after use.
- Supervise children when they are near the dishwasher.
- Do not wash plastic items unless marked "dishwasher safe".
- Load sharp items so they are not likely to damage the door seal or tub.
- The Leak Detect System monitors water flow and will automatically drain the tub if a problem is sensed.

SETUP AND INSTALLATION

Proper installation is crucial for the performance and safety of your Kenmore dishwasher. It is highly recommended to have this appliance installed by a qualified professional.

Pre-Installation Checks:

- Verify electrical, water supply, and drain connections meet local codes and manufacturer specifications.
- Ensure the installation area provides adequate space for the dishwasher (Product Dimensions: 24.61"D x 23.55"W x 33.88"H).



Figure 2: Dishwasher Dimensions (Front View)

Connecting Utilities:

Connect the dishwasher to a dedicated 115 Volt electrical circuit. Ensure proper water supply and drain hose connections to prevent leaks. Refer to the detailed installation guide provided with your appliance for step-by-step instructions.


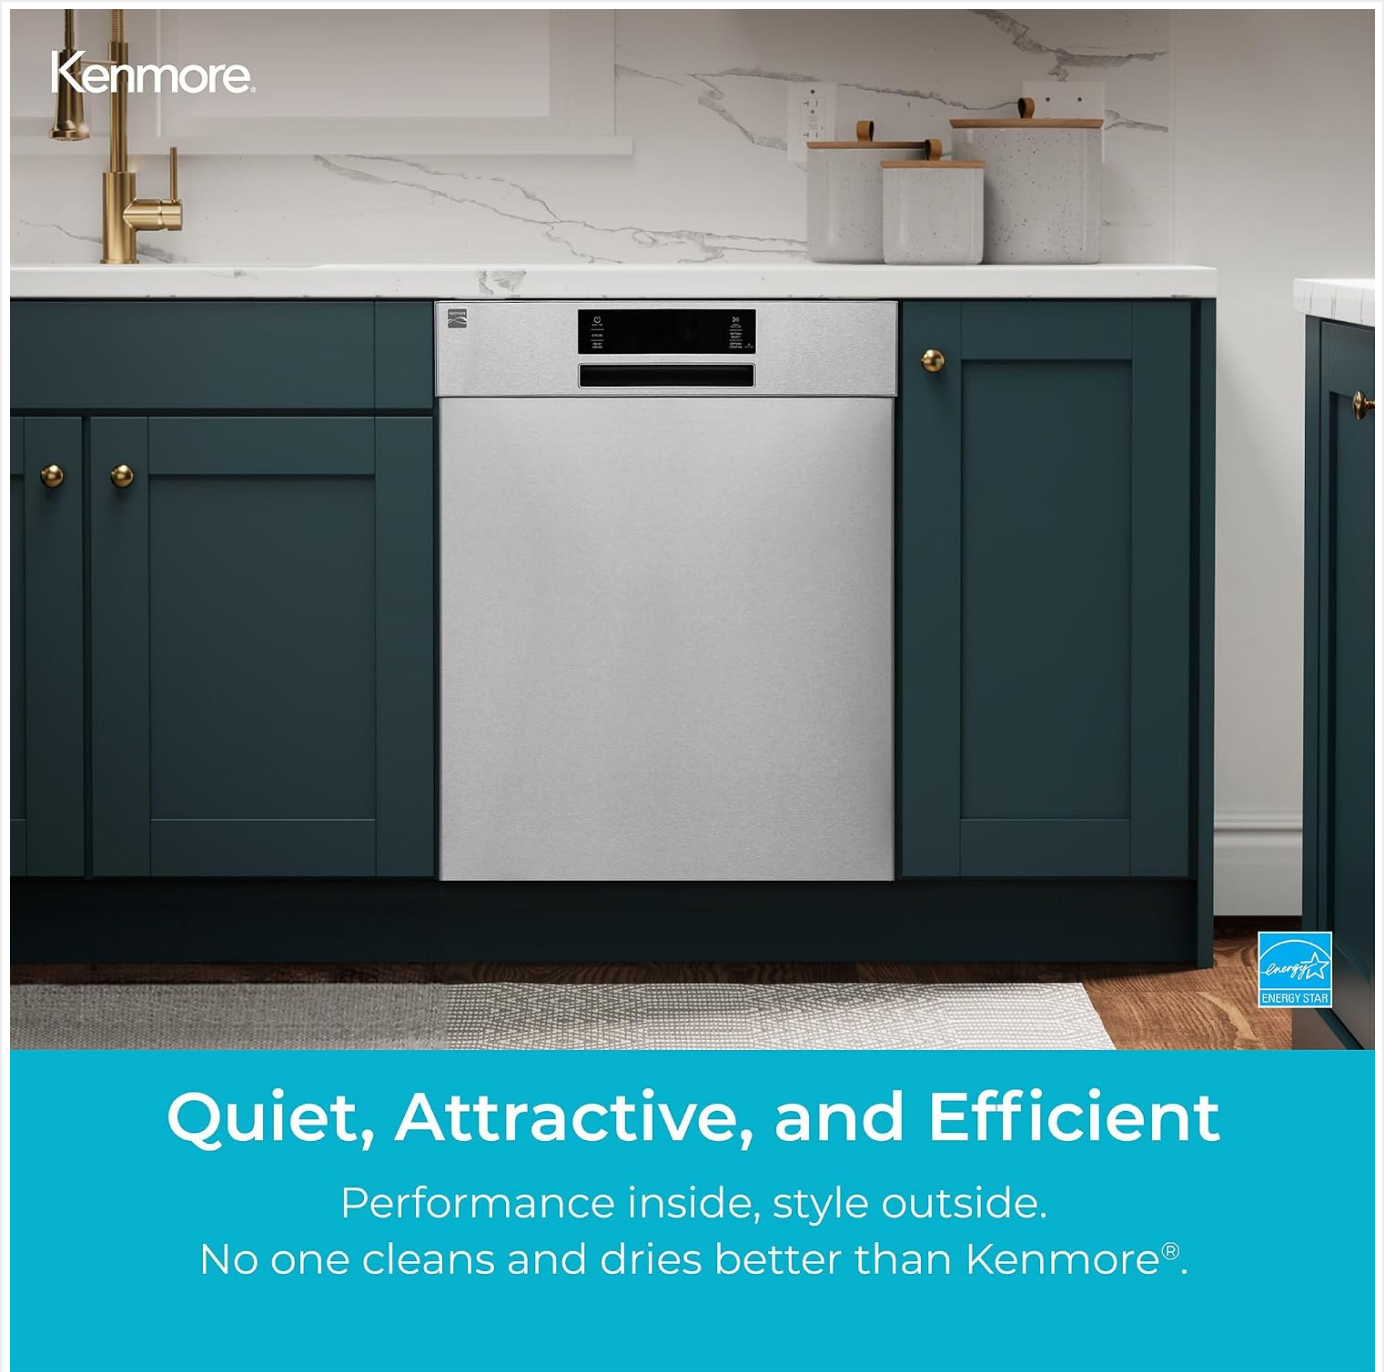


Figure 3: Dishwasher Side View

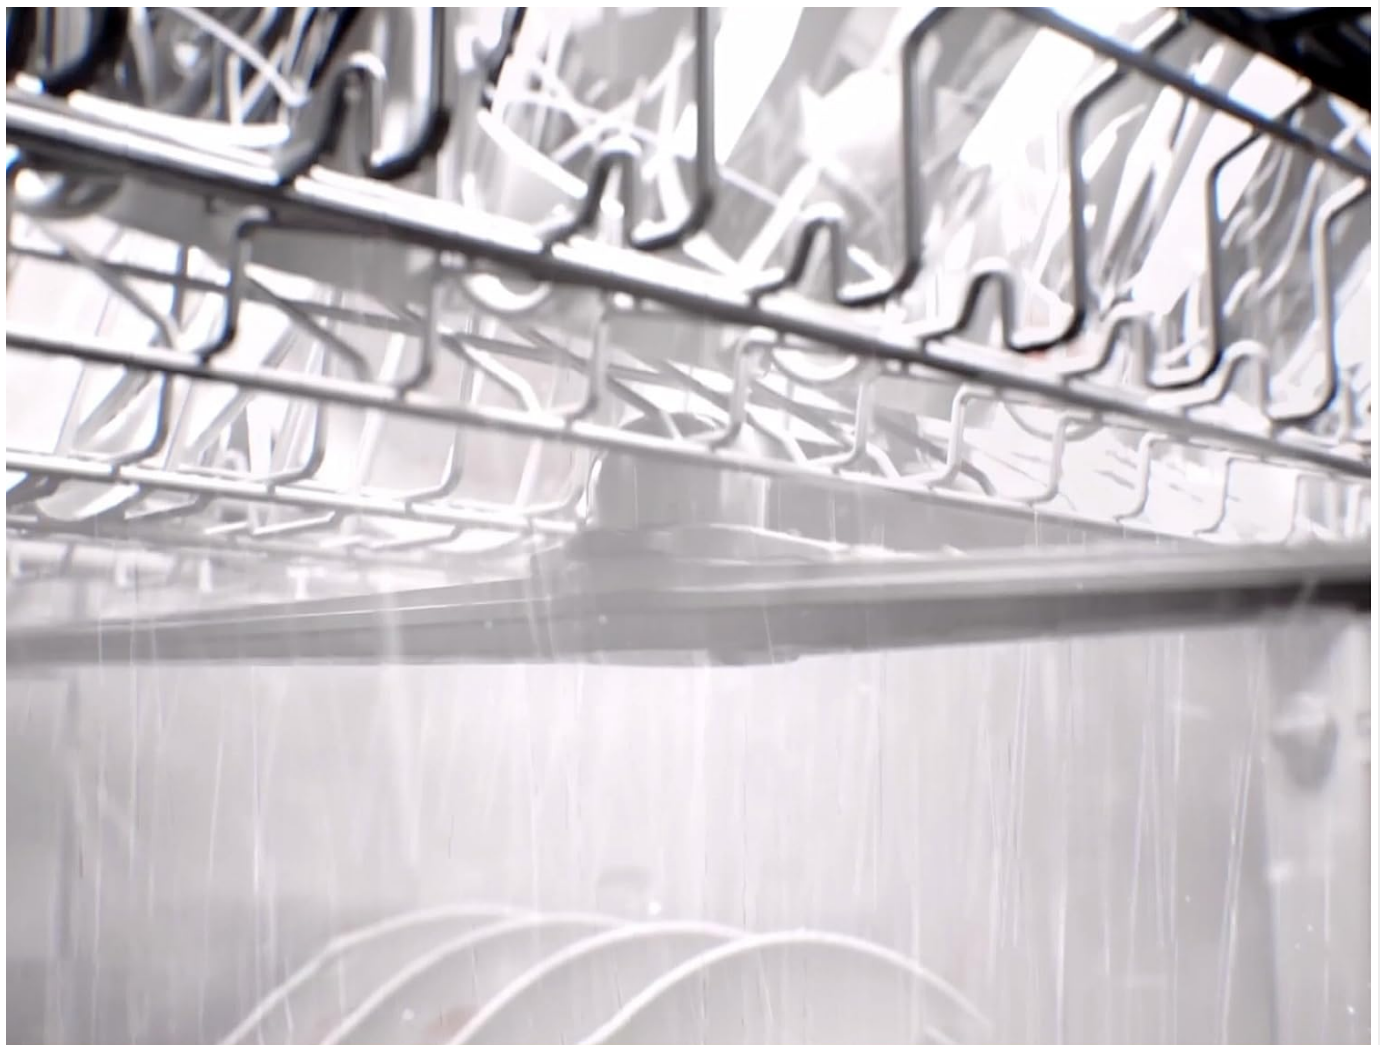

UltraWash® System

Uses 2 pressurized spray nozzles to blast off stuck-on foods so you don't have to soak, scrub or scrape.


Figure 4: Dishwasher Rear View with Utility Connections

OPERATING INSTRUCTIONS

This section details how to effectively use your Kenmore dishwasher for optimal cleaning results.

Loading the Dishwasher:

 Proper loading ensures all items receive adequate water and detergent. Scrape off large food particles before loading. Avoid overcrowding the racks.

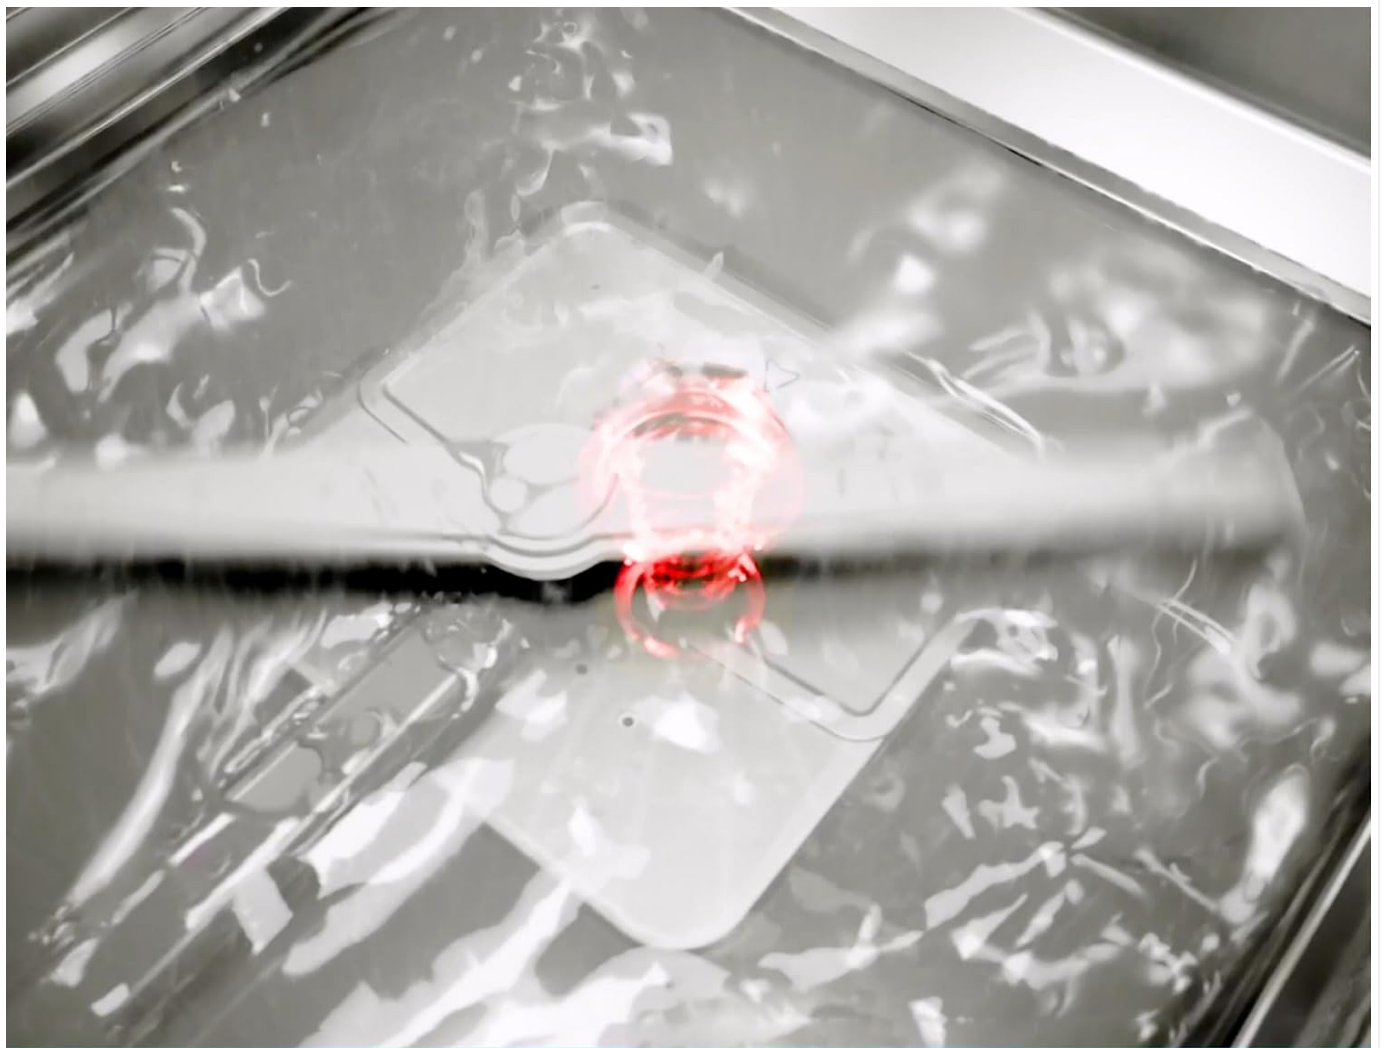

SmartWash® Cycle

Sensor technology delivers the best cleaning results for each unique load.

Figure 5: Properly Loaded Dishwasher Interior

MoreSpace Adjustable Rack:

The MoreSpace Adjustable Upper Rack can be lifted, lowered, or entirely removed to accommodate larger items such as pots, tall glasses, or delicate stemware. This provides flexibility for various load sizes and item types.



MoreSpace™ Adjustable Rack

Allows you to lift, lower, or remove the rack to accommodate large items.

Figure 6: MoreSpace Adjustable Upper Rack

Cutlery Basket:

The included cutlery basket can be used as a single unit or split into two separate bins for flexible placement. Place silverware with handles down for best cleaning, except for knives which should be handle up for safety.

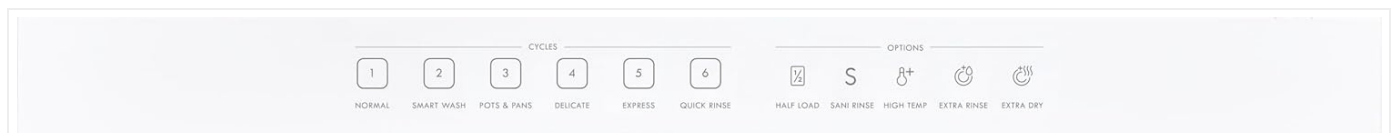


Figure 7: Removable Cutlery Basket

Adding Detergent and Rinse Aid:

Use only automatic dishwasher detergent. Fill the detergent dispenser according to the manufacturer's instructions and the soil level of your dishes. Add rinse aid to the dispenser to improve drying performance and reduce water spots.

Selecting a Wash Cycle:

The dishwasher features a touch control panel with various wash cycles and options. Press the "Cycles" button to cycle through available programs.

- **Normal:** For daily use with normal soil.
- **SmartWash:** Sensor technology detects soil levels and automatically adjusts water temperature, pressure, and cycle time for optimal cleaning.
- **Pots & Pans:** For heavily soiled dishes and cookware.
- **Express Cycle:** Cleans a full load in just 50 minutes, ideal when you need dishes fast.
- **Quick Rinse:** For rinsing dishes that will be washed later.



Half Load Option

Can be used for smaller loads in only the upper or lower rack for maximum efficiency.

Figure 8: SmartWash Sensor in action



SmartDry™ Plus Drying System

Uses hot water and larger condensation channels to move moisture down the drain so dishes get a more complete dry.

Figure 9: UltraWash System with Dual Spray Arms

Wash Options:

Customize your wash cycle with these options:

- **Half Load:** For smaller loads, allowing you to wash items in only the upper or lower rack for maximum efficiency.
- **Sanitize Rinse:** A UL-certified option that uses high temperature to sanitize dishes, ideal for baby bottles and cutting boards.
- **High Temp:** Increases water temperature for enhanced cleaning.
- **Extra Rinse:** Adds an additional rinse cycle.
- **Extra Dry:** Boosts heat and drying time, especially useful for plastics and hard-to-dry items.
- **Delay Start:** Allows you to set the dishwasher to start a cycle 1 to 24 hours later, convenient for off-peak hours.



Quiet Dishwashers

With a 51 dBA* sound level, this dishwasher will fade into the background.

*Per IEC Standards

Figure 10: Half Load Option in Use

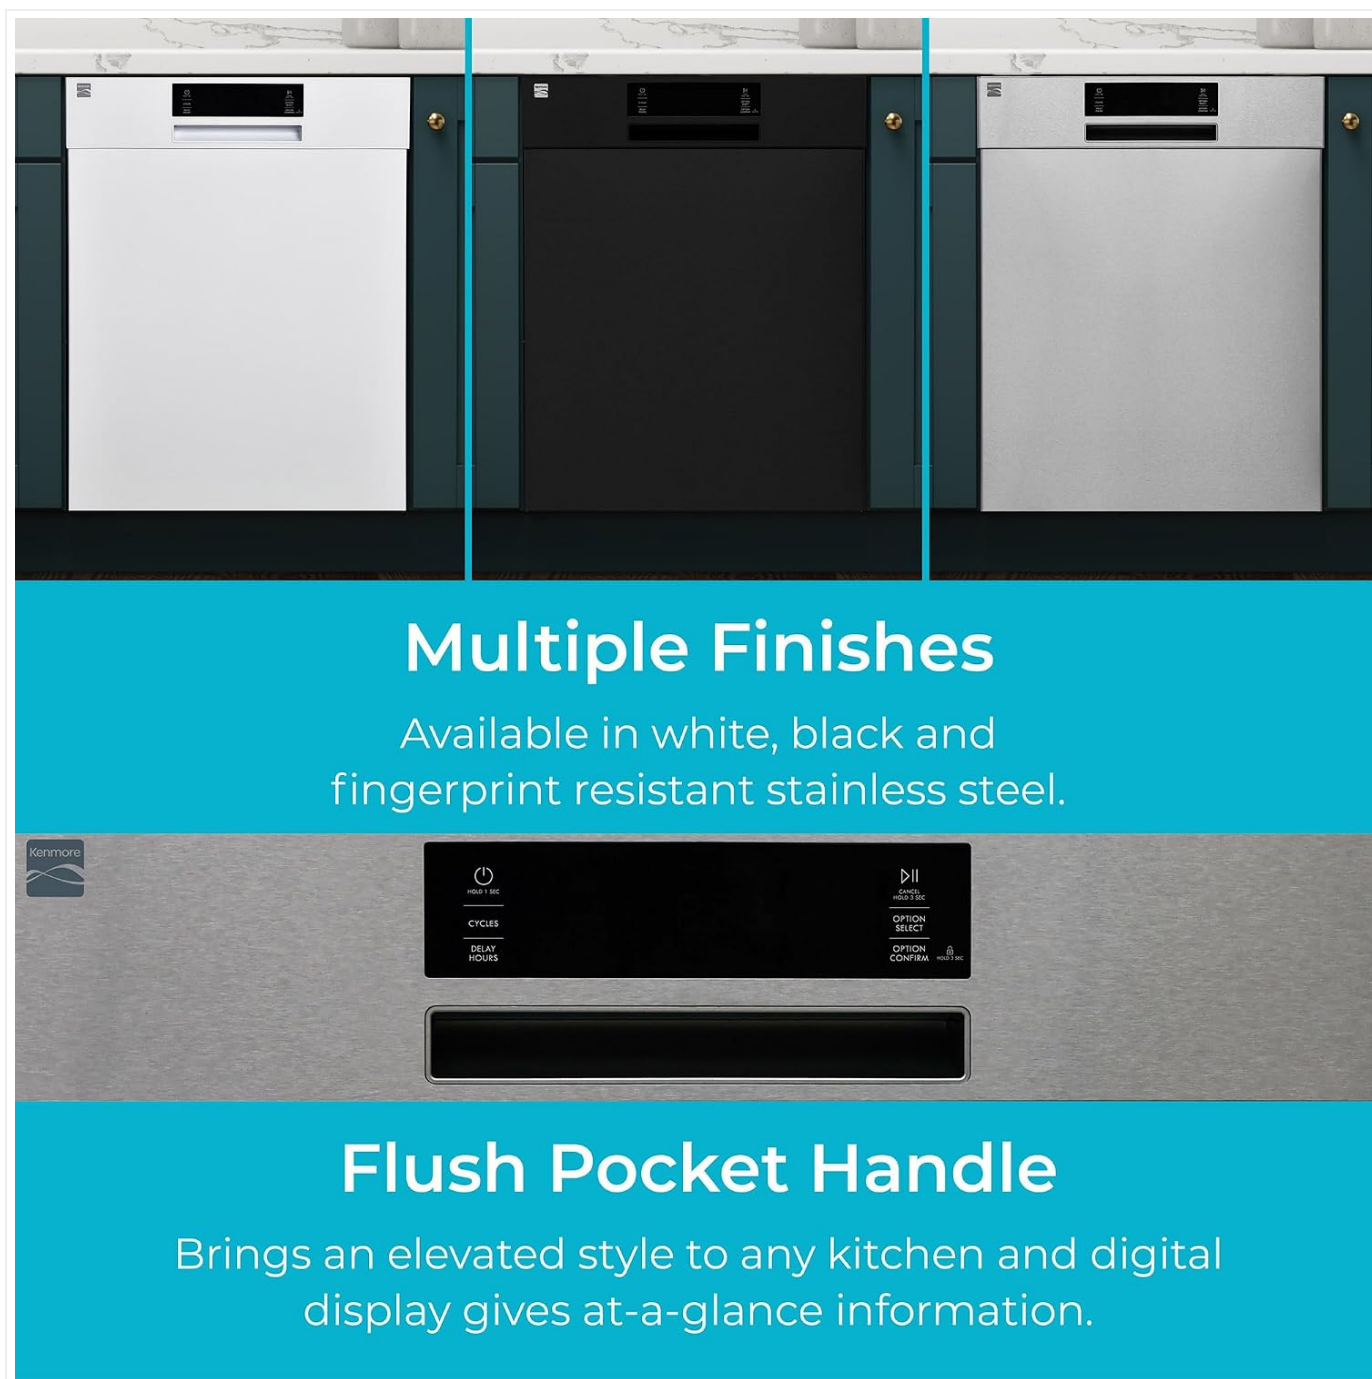


Figure 11: SmartDry Plus Drying System

Starting a Cycle:

After loading dishes and selecting your desired cycle and options, press the Start button. Close the dishwasher door firmly. The dishwasher operates quietly with a noise level of 51 dB.



Figure 12: Quiet Operation of the Dishwasher

Official Product Video:



Video 1: Kenmore 24" Built-In Stainless Steel Tub Dishwasher Overview. This video provides a visual demonstration of the dishwasher's key features and benefits, including the UltraWash system, SmartWash cycle, SmartDry Plus, and adjustable racks.

MAINTENANCE AND CLEANING

Regular maintenance ensures your dishwasher continues to perform efficiently.

- **Cleaning the Filter:** The 3-stage UltraWash Filter captures food particles. It should be removed and cleaned monthly to prevent debris from redepositing on dishes.

- **Cleaning the Interior:** Periodically clean the interior with a dishwasher cleaner or a mixture of vinegar and baking soda to remove mineral buildup and odors.
- **Cleaning the Exterior:** Wipe down the exterior with a soft, damp cloth. For stainless steel finishes, use a specialized stainless steel cleaner to maintain its appearance.

TROUBLESHOOTING

Before calling for service, review these common issues and their solutions:

Problem	Possible Cause	Solution
Dishes not clean	Improper loading, clogged filter, insufficient detergent, low water temperature.	Reload dishes correctly, clean UltraWash filter, use recommended detergent amount, select High Temp option.
Dishes not drying	No rinse aid, Extra Dry option not selected, plastic items.	Refill rinse aid dispenser, select Extra Dry option, allow extra time for plastics.
Dishwasher not starting	Door not closed properly, power supply issue, cycle not selected.	Ensure door is latched, check circuit breaker, select a wash cycle and press Start.
Unusual noise	Items interfering with spray arm, foreign object in pump.	Rearrange dishes, inspect and remove any foreign objects.
Leakage	Improper installation, damaged door seal, Leak Detect System activated.	Check connections, inspect door seal for damage, refer to Leak Detect System alerts.

SPECIFICATIONS

- **Brand:** Kenmore
- **Model Name:** Built-In Stainless Steel Tub Dishwasher
- **Model Number:** 2214592
- **Installation Type:** Built-In
- **Color:** White
- **Material:** Stainless Steel (Tub, Basket, Rack)
- **Capacity:** 14 Place Settings
- **Product Dimensions (DxWxH):** 24.61" x 23.55" x 33.88"
- **Item Weight:** 90.4 Pounds
- **Noise Level:** 51 dB
- **Voltage:** 115 Volts
- **Annual Energy Consumption:** 239 Kilowatt Hours Per Year
- **Certification:** Energy Star Certified
- **Special Features:** Adjustable Rack, Leakage Protection
- **Controls Type:** Touch
- **Included Components:** Cutlery Basket
- **UPC:** 843086105388

WARRANTY AND SUPPORT

For specific warranty details, please refer to the warranty card included with your product or visit the official Kenmore website. Kenmore provides customer support for product inquiries, technical assistance, and service scheduling.

Customer Support: For assistance, please contact Kenmore Customer Service. Information regarding service and support can typically be found on the Kenmore brand website or within your product packaging.

Returns: This product is eligible for 30-day easy returns through Amazon.com.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question