

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Yabano](#) /

› [Yabano SW2090B Belgian Waffle Maker Instruction Manual](#)

Yabano SW2090B

Yabano SW2090B Belgian Waffle Maker Instruction Manual

Model: SW2090B

1. INTRODUCTION

Thank you for choosing the Yabano SW2090B Belgian Waffle Maker. This appliance is designed to create delicious Belgian waffles with ease. Please read this manual thoroughly before use to ensure safe and efficient operation. Keep these instructions for future reference.

2. IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions before operating the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Contact customer support for assistance.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- To disconnect, turn any control to 'off', then remove plug from wall outlet.

- Do not use appliance for other than intended use.

3. PRODUCT OVERVIEW

The Yabano SW2090B Belgian Waffle Maker features a rotating design for even cooking and non-stick plates for easy release. It is designed to make two waffles simultaneously.

Components:

- **Waffle Plates:** Non-stick cooking surfaces for Belgian waffles.
- **Cool-Touch Handle:** For safe rotation and opening/closing.
- **Removable Drip Tray:** Catches excess batter for easy cleanup.
- **Indicator Lights:** Signal preheating and readiness.
- **Rotation Mechanism:** Allows for 180-degree rotation for even batter distribution.



Image 3.1: The Yabano SW2090B Belgian Waffle Maker, showing its dual waffle plates and rotating design.

Authentic Belgian Waffle Experience

Classic thick, grid-like structure, suitable for hold more toppings like syrup, fruits, or ice Cream.

◦ ◦ ◦

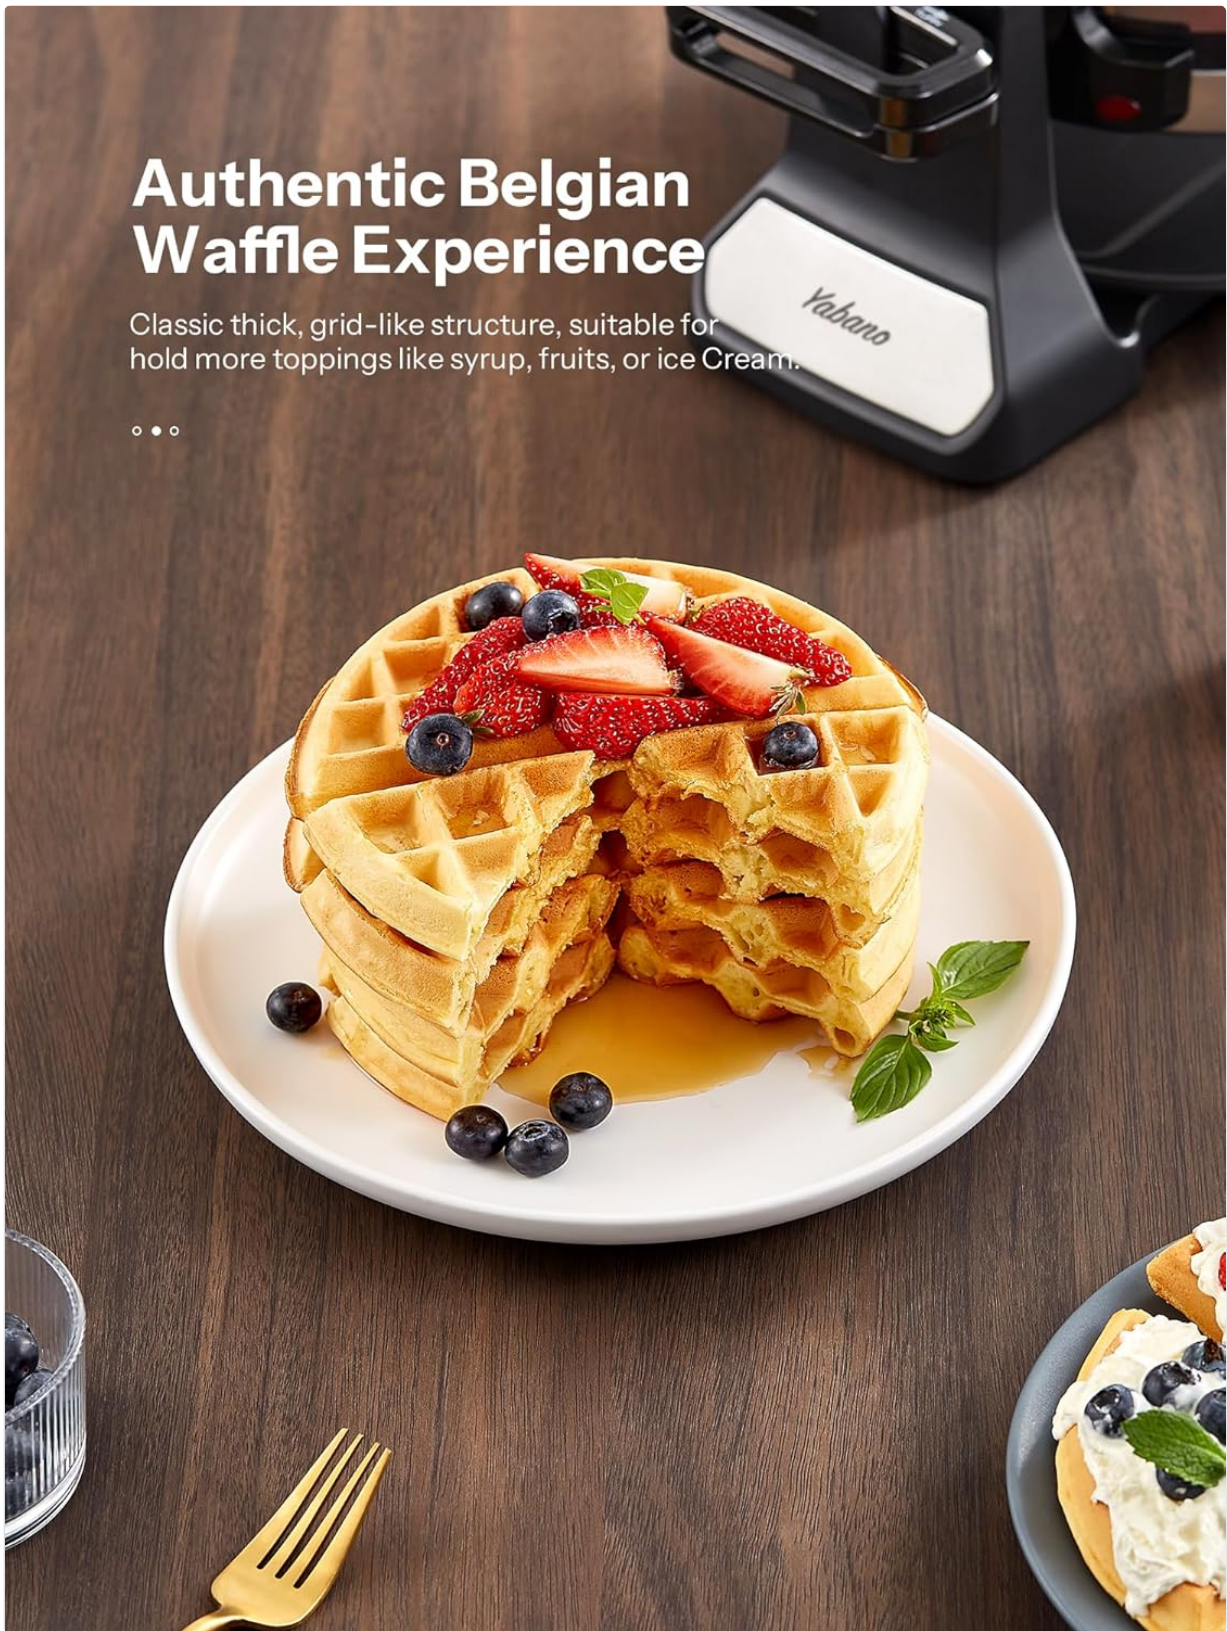


Image 3.2: The removable drip tray, designed to catch any overflow of batter.

4. SETUP

1. **Unpack:** Carefully remove the waffle maker and all packaging materials.
2. **Clean:** Wipe the non-stick cooking plates with a damp cloth or sponge. Ensure the drip tray is clean and properly inserted.
3. **Placement:** Place the waffle maker on a stable, heat-resistant surface. Ensure there is adequate ventilation around the appliance.

4. **Power:** Plug the power cord into a standard 120V AC electrical outlet.

5. OPERATING INSTRUCTIONS

Follow these steps to prepare perfect Belgian waffles:

1. **Preheat:** Close the waffle maker and plug it in. The red indicator light will illuminate, signaling that the appliance is preheating. Wait until the green indicator light illuminates, indicating the waffle maker has reached the optimal cooking temperature.
2. **Prepare Batter:** While the waffle maker preheats, prepare your favorite Belgian waffle batter.
3. **Pour Batter:** Open one side of the waffle maker. Pour approximately 1 cup of batter onto the center of the lower waffle plate. Close the lid.
4. **Rotate:** Immediately rotate the waffle maker 180 degrees using the cool-touch handle. This ensures even distribution of batter and uniform cooking.
5. **Cook:** The indicator light will turn red again as cooking begins. Once the green indicator light illuminates, the waffle is ready. Cooking time may vary based on batter consistency and desired crispness.
6. **Repeat for Second Waffle:** If making a second waffle, open the other side of the waffle maker and repeat steps 3-5.
7. **Remove Waffles:** Once cooked, carefully open the waffle maker and remove the waffles using a non-metallic utensil to avoid damaging the non-stick coating.
8. **Unplug:** After use, unplug the waffle maker from the outlet and allow it to cool completely before cleaning.

Ready Indicators Light

LED indicator will let you know exactly when to start cooking (batter-ready) and when to stop (perfectly done).

• • •



Preheating



Ready



Removable Drip Tray

Catch excess batter during cooking process, making cleanup easier.

• • •



Image 5.1: Indicator lights show when the waffle maker is preheating (red) and ready to cook (green).

Double Belgian Waffle Maker

No more waiting – enjoy
double the waffles in half the time!

◦ ◦ ◦



Image 5.2: The rotating mechanism ensures even batter distribution and cooking.

Your browser does not support the video tag.

Video 5.1: A demonstration of pouring batter, closing the lid, and rotating the Yabano Double Plate Waffle Maker for cooking.

6. CLEANING AND MAINTENANCE

Proper cleaning and maintenance will extend the life of your waffle maker.

1. **Cool Down:** Always ensure the appliance is unplugged and completely cool before cleaning.

2. **Clean Waffle Plates:** Wipe the non-stick cooking plates with a soft, damp cloth or sponge. For stubborn residue, a small amount of cooking oil can be applied to soften it before wiping. Do not use abrasive cleaners or metal scouring pads, as these can damage the non-stick coating.
3. **Clean Drip Tray:** Remove the drip tray and wash it in warm, soapy water. Rinse thoroughly and dry completely before reinserting.
4. **Exterior:** Wipe the exterior of the waffle maker with a damp cloth. Do not immerse the appliance in water or any other liquid.
5. **Storage:** Store the waffle maker in a clean, dry place.



Non-Stick Plates

Easy release and quick cleanup.

• • •

Image 6.1: The non-stick plates are designed for easy food release and cleaning.

7. TROUBLESHOOTING

- **Waffles sticking:** Ensure plates are clean and lightly greased if necessary (though non-stick, a little oil can help). Do not use too much batter.
- **Waffles not cooking evenly:** Ensure the waffle maker is properly preheated before adding batter. Rotate the unit 180 degrees immediately after pouring batter to distribute it evenly.
- **Indicator lights not working:** Check if the appliance is properly plugged in and powered on. If the issue persists, contact customer support.

8. SPECIFICATIONS

Feature	Specification
Model	SW2090B
Brand	Yabano
Wattage	1400 watts
Voltage	120 Volts
Material	Nonstick
Product Dimensions	6.5"D x 13.19"W x 10.91"H
Item Weight	7.61 pounds (3.46 Kilograms)
Special Feature	Non Stick Coating, Rotating Design, Removable Drip Tray, Cool Touch Handle, Indicator Light

9. WARRANTY AND SUPPORT

The Yabano SW2090B Belgian Waffle Maker comes with a Limited Warranty. For detailed warranty information or customer support, please refer to the product packaging or contact Yabano customer service directly. You can also visit the official Yabano store for more information: [Yabano Store](#).