



[Manuals.plus](#) /

> [Kenmore](#) /

> Kenmore 22-14625 24" Built-In Dishwasher - Quiet Tub with TurboDry, Leak, & SmartWash Soil Detection

Kenmore 22-14625

Kenmore 22-14625 24" Built-In Dishwasher User Manual

Model: 22-14625 | Brand: Kenmore

INTRODUCTION

This manual provides comprehensive instructions for the Kenmore 22-14625 24" Built-In Dishwasher. Designed for efficiency and quiet operation, this appliance features advanced cleaning technologies like UltraWash Plus and SmartWash soil detection, along with convenient drying options such as TurboDry. It offers a spacious interior accommodating up to 15 place settings and includes built-in leak detection for enhanced home protection. Please read this manual thoroughly before installation and operation to ensure safe and optimal performance.



Figure 1: Front view of the Kenmore 24-inch Built-In Dishwasher in fingerprint resistant stainless steel.

KEY FEATURES

- **UltraWash Plus Power Cleaning:** Utilizes three pressurized spray arms and filtered water for thorough cleaning, eliminating the need for pre-rinsing. The Accela Wash option provides a quick clean for urgent needs.

- **SmartWash Soil Detection:** Sensor technology automatically adjusts water temperature, pressure, and cycle time based on soil levels, ensuring an optimized clean for every load.
- **TurboDry System:** A built-in fan and heating element work together to pull moisture and warm air out of the dishwasher, resulting in dry, spot-free dishes, including plastics.
- **Spacious & Adjustable Interior:** Accommodates up to 15 place settings. The MoreSpace Adjustable Upper Rack can be raised or lowered to fit larger items, and a Half Load option is available for smaller washes.
- **Quiet Wash Operation:** Designed for peaceful performance with a low noise level of 49 dBA, making it suitable for open-concept living spaces.
- **Built-in Leak Detection:** Senses and drains excess water to prevent potential water damage to your home.
- **ENERGY STAR Certified:** Ensures energy and water efficiency, contributing to lower utility bills.



Figure 2: Illustration of Kenmore dishwasher's advanced cleaning and drying technologies.

Designed for Ease — Smarter Touch, Smarter Storage

Loading and starting your dishwasher has never been simpler.

Lower, lift or remove the **MoreSpace Adjustable** Upper Rack with ease, while empty, to accommodate large and oddly shaped items. 2 different levels give you flexibility to create the space you need

Time Remaining Display keeps you informed with at-a-glance information

Easy-to-use push button controls



Figure 3: Interior design highlighting adjustable racks and user-friendly controls.

SETUP & INSTALLATION

Proper installation is crucial for the optimal performance and longevity of your Kenmore dishwasher. It is recommended that installation be performed by a qualified technician. Ensure all local codes and ordinances are followed.

Tools and Parts Required/Included:

Tools Required:

Parts Needed:



Parts Included:

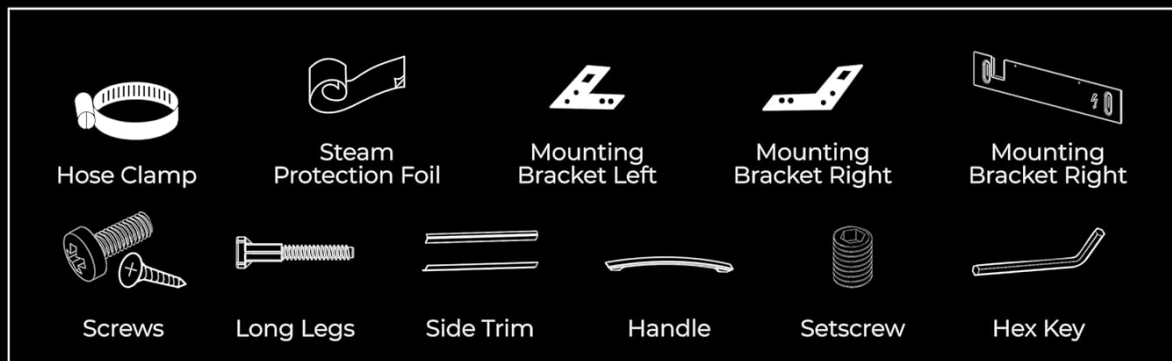


Figure 4: Visual guide for necessary tools and included components for installation.

- **Hot Water Supply Line:** Essential for connecting the dishwasher to your home's hot water system.
- **Metallic Strain & Compression Hose:** Used for secure and leak-free water connections.
- **Power Cord Kit:** Typically includes a power cord, metallic strain relief, grommet, and twist-on wire connectors for electrical hookup.
- **Mounting Brackets & Screws:** For securing the dishwasher to the underside of your countertop.
- **Steam Protection Foil:** Applied to the underside of the countertop to protect against steam damage.
- **Side Trim & Handle:** For finishing the exterior appearance.

For detailed step-by-step installation instructions, please refer to the comprehensive installation guide provided with your appliance. This section provides an overview of the components involved.

OPERATING INSTRUCTIONS

Your Kenmore dishwasher offers a variety of cycles and options to ensure optimal cleaning for different types of loads. The controls are conveniently located on the top edge of the door for a sleek, integrated look.

Loading the Dishwasher:

Arrange dishes to allow water to reach all surfaces. Avoid overcrowding. The MoreSpace Adjustable Upper Rack can be adjusted to accommodate taller items. The removable third rack is ideal for large utensils and cutlery.



Complete Clean Control — Cycles & Options for Every Need

- **8 Wash Cycles:** Normal, Smart Wash, Heavy Duty, Pots & Pans, Light, Delicate, Express, Quick Rinse
- **6 Options:** Half Load, Extra Dry, Sanitize Rinse, High Temp, Accela Wash, Quiet Wash

From fast washes to sanitizing baby bottles — choose what fits your load.

Figure 5: Dishwasher interior with various cycles and options displayed on the control panel.

Selecting a Cycle:

Choose the appropriate cycle based on the soil level and type of dishes. Available cycles include:

- **Normal:** For regularly soiled dishes.
- **Smart Wash:** Automatically detects soil levels and adjusts settings.
- **Heavy Duty:** For heavily soiled pots and pans.
- **Pots/Pans:** Specialized for cookware.
- **Light Wash:** For lightly soiled items.
- **Delicate:** Gentle cleaning for fragile items.
- **Express:** A faster wash cycle.
- **Quick Rinse:** For rinsing dishes that will be washed later.

- **Accela Wash:** For quick cleaning when in a hurry.

Selecting Options:

Enhance your wash cycle with additional options:

- **Half Load:** For smaller loads, saving water and energy.
- **Extra Dry:** Provides enhanced drying performance.
- **Sani Rinse:** Uses high temperature to sanitize dishes, certified by UL.
- **High Temp:** Increases water temperature for improved cleaning.
- **Quiet Wash:** Reduces operational noise levels.

After selecting your desired cycle and options, press the "Start" button and close the dishwasher door firmly. The dishwasher will begin its cycle.

Official Product Video:

Your browser does not support the video tag.

Video 1: An official overview of Kenmore 24" Built-In Dishwashers, demonstrating key features and operational aspects.

MAINTENANCE

Regular maintenance ensures your Kenmore dishwasher continues to perform efficiently and extends its lifespan.

Cleaning the Interior:

- Periodically wipe down the interior with a damp cloth to remove any food residue or mineral buildup.
- For stubborn stains or odors, run an empty cycle with a dishwasher cleaner or a cup of white vinegar placed in the bottom rack.
- The durable stainless-steel tub resists stains and odors, simplifying cleaning.



Designed for Peace of Mind

Durable stainless-steel tub resists stains and odors

Built-in Leak Detection system for peace of mind

Figure 6: The stainless steel interior is designed for durability and ease of cleaning.

Filter Maintenance:

The 3-stage UltraWash Filter captures food particles. Regularly check and clean the filter to prevent blockages and ensure optimal cleaning performance. Refer to your full user manual for specific instructions on how to access and clean the filter.

TROUBLESHOOTING

Before contacting customer support, review the following common issues and their potential solutions:

- **Dishes not clean:** Ensure proper loading, check that spray arms are not blocked, and clean the filter. Select a more intensive wash cycle if needed.
- **Dishwasher not starting:** Check if the door is fully closed and latched. Ensure the power supply is connected and the circuit breaker has not tripped.
- **Water remaining in the tub:** Check for drain hose kinks or blockages. Ensure the filter is clean.
- **Unusual noises:** Verify that dishes or utensils are not interfering with the spray arms.
- **Leakage:** The built-in leak detection system should prevent major leaks. If water is observed, check hose connections

and door seal.

For more detailed troubleshooting steps or error codes, please consult the complete user manual or contact Kenmore customer support.

SPECIFICATIONS

Specification	Detail
Brand	Kenmore
Model Number	22-14625
Form Factor	Built-In
Finish Type	Fingerprint Resistant Stainless Steel
Product Dimensions	24.61"D x 23.55"W x 33.88"H
Item Weight	90.39 Pounds
Capacity	15 Place Settings
Noise Level	49 dB
Voltage	115 Volts
Annual Energy Consumption	234 Kilowatt Hours Per Year
Certification	ENERGY STAR
Special Features	Adjustable Rack, Leakage Protection
Included Components	Cutlery Basket
Cycle Options	Pots/Pans, Light Wash, Delicate, Normal, Smart Wash, Heavy Duty, Express, Quick Rinse, Half Load, Extra Dry, Sani Rinse, High Temp, Accela Wash, Quiet Wash

WARRANTY & SUPPORT

For warranty information, service, or technical support, please refer to the warranty card included with your Kenmore dishwasher or visit the official Kenmore website. You can also contact Kenmore customer service for assistance with any product-related inquiries.

For additional resources and product information, visit the [Kenmore Store on Amazon](#).