

Bingozones B7 Pro.

Bingozones B7 Pro Wireless Headphones User Manual

Model: B7 Pro.

INTRODUCTION

Thank you for choosing the Bingozones B7 Pro Wireless Headphones. These over-ear headphones are designed to provide a superior audio experience with extended playtime, deep bass, and comfortable wear. Featuring advanced Bluetooth 5.5 technology, they offer stable transmission, lower latency, and dual-device connectivity for seamless audio enjoyment across various devices. This manual will guide you through the setup, operation, and maintenance of your new headphones.

WHAT'S IN THE BOX



Your Bingozones B7 Pro Wireless Headphones package includes the following items:

- Bingozones B7 Pro Bluetooth Headset
- 3.5mm Audio Cable
- USB Charging Cable
- User Manual

Please ensure all components are present before proceeding with setup.

PRODUCT FEATURES




Design and Comfort

The B7 Pro headphones feature an over-ear design with soft memory foam earmuffs, providing exceptional comfort for extended listening sessions. Their lightweight construction (11.2 ounces) and compact dimensions (6.8 x 6.2 x 2.2 inches) ensure portability and ease of wear. The foldable structure allows for convenient storage and transport, making them ideal for travel, work, or home use.



Extended Playtime

Enjoy up to 65 hours of music time on a single charge. A quick 5-minute charge provides 3 hours of playtime, and the headphones boast an impressive 950 hours of standby time, ensuring they are always ready when you are.

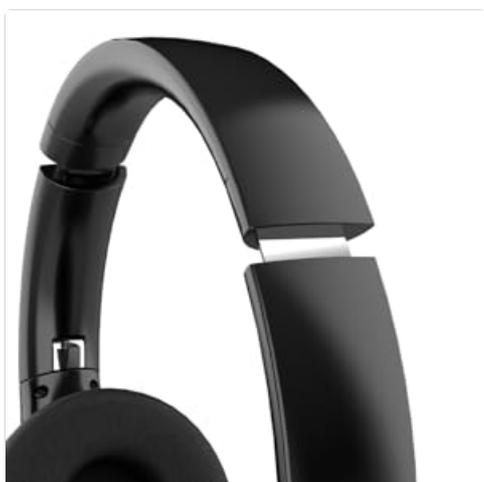

Intuitive Controls

The headphones feature easily accessible controls for volume adjustment, track navigation (long press for next/previous), and play/pause. A dedicated power switch and indicator light are also present for clear operational status. The 3.5mm jack and Type-C charging port are conveniently located.



Versatile Connectivity

Equipped with Bluetooth 5.5 technology, the B7 Pro headphones offer stable and low-latency wireless connections with a range of up to 33 feet. They also support dual-device connectivity, allowing you to seamlessly switch between two paired devices. For non-Bluetooth devices, a traditional 3.5mm audio jack connection is available.



Audio Quality

Experience high-fidelity stereo sound with deep bass, delivering a rich and immersive audio experience. The built-in microphone ensures clear communication for calls and voice commands.

Official Product Video

Your browser does not support the video tag.

This video provides an overview of the Bingozones B7 Pro Wireless Headphones, showcasing their key features, design, and connectivity options. It highlights the extended battery life, comfortable fit, and versatile usage scenarios.

SETUP GUIDE

Charging the Headphones

1. Connect the provided USB charging cable to the Type-C port on the headphones.
2. Plug the other end of the USB cable into a compatible USB power adapter (not included) or a computer's USB port.
3. The indicator light will illuminate during charging and turn off when fully charged.
4. A full charge typically takes approximately 2-3 hours.

Bluetooth Pairing

1. Ensure the headphones are fully charged.
2. Slide the power switch to the "ON" position. The indicator light will flash, indicating pairing mode.
3. On your device (smartphone, tablet, laptop), enable Bluetooth and search for available devices.
4. Select "B7 Pro" from the list of found devices.
5. Once connected, the indicator light will stop flashing and remain solid blue.
6. If prompted for a password, enter "0000".

Wired Connection (3.5mm Audio Cable)

1. Insert one end of the 3.5mm audio cable into the headphone's 3.5mm jack.
2. Insert the other end into the audio output jack of your device.
3. In wired mode, the headphone's built-in controls (volume, track skip) may not function, and you will need to control audio directly from your connected device.

OPERATING INSTRUCTIONS

Headphone Controls Overview

Button/Function	Action	Description
Power Switch	Slide	Turns the headphones ON/OFF.
Play/Pause Button (▶ /)	Click	Play or pause current audio track. Answer/End calls.
Volume Up (+)	Click	Increase volume.
Next Track (▶ ▶)	Long Press (+)	Skip to the next audio track.
Volume Down (-)	Click	Decrease volume.
Previous Track (◀ ▶)	Long Press (-)	Go back to the previous audio track.
Built-in Microphone	N/A	For hands-free calls and voice commands.

Call Management

- **Answering a Call:** Click the Play/Pause button.
- **Ending a Call:** Click the Play/Pause button.
- **Rejecting a Call:** Long press the Play/Pause button.

MAINTENANCE AND CARE

- Keep the headphones dry. Do not expose them to extreme temperatures or humidity.
- Clean the earmuffs and headband with a soft, dry cloth. Avoid using harsh chemicals or abrasive materials.
- Store the headphones in a cool, dry place, preferably in their original packaging or a protective case, especially when traveling.
- Avoid dropping or subjecting the headphones to strong impacts.
- Do not attempt to disassemble or repair the headphones yourself, as this will void the warranty.

TROUBLESHOOTING

Common Issues and Solutions

- **Headphones won't turn on:** Ensure the headphones are fully charged. Connect them to a power source and allow them to charge for at least 30 minutes before attempting to power on again.
- **Cannot pair with device:**
 - Ensure the headphones are in pairing mode (indicator light flashing).
 - Make sure Bluetooth is enabled on your device.
 - Move the headphones closer to your device (within 33 feet).
 - Turn off Bluetooth on other nearby devices that might be interfering.

- Forget "B7 Pro" from your device's Bluetooth settings and try pairing again.
- Restart both the headphones and your device.

- **No sound or low volume:**

- Check the volume levels on both the headphones and your connected device.
- Ensure the headphones are properly connected via Bluetooth or the 3.5mm cable.
- If using Bluetooth, try disconnecting and reconnecting.
- If using the 3.5mm cable, ensure it is fully inserted into both jacks.

- **Sound quality is poor:**

- Ensure there are no obstructions between the headphones and your Bluetooth device.
- Move away from other wireless devices that might cause interference.
- Check if the audio source quality is high.

SPECIFICATIONS

Model Name: B7 Pro.

Brand: Bingozones

Connectivity Technology: Wireless (Bluetooth 5.5)

Headphones Jack: 3.5 mm Jack

Ear Placement: Over Ear

Form Factor: On Ear

Noise Control: Sound Isolation

Material: Acrylonitrile Butadiene Styrene (ABS)

Item Weight: 11.2 ounces

Product Dimensions: 6.8 x 6.2 x 2.2 inches

Batteries: 1 Lithium Ion battery required (included)

Control Type: Volume Control

Control Method: Voice

Cable Feature: Detachable

Water Resistance Level: Water Resistant

Compatible Devices: Cellphones, Desktops, Gaming Consoles, Laptops, Music Production Equipment, Tablets, Telephones, Motorcycles, Car Audio Systems

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the contact details provided on the product packaging or visit the official Bingozones website. Keep your purchase receipt for warranty claims.