

PRETTYCARE V3

PRETTYCARE V3 Cordless Stick Vacuum Cleaner User Manual

Brand: PRETTYCARE | Model: V3

1. INTRODUCTION

Thank you for choosing the PRETTYCARE V3 Cordless Stick Vacuum Cleaner. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new vacuum cleaner. Please read it thoroughly before first use and keep it for future reference.

The PRETTYCARE V3 is a powerful and lightweight cordless vacuum cleaner designed for versatile cleaning. It features a strong 45,000 Pa suction power, a 560W brushless motor, and a long-lasting battery providing up to 60 minutes of runtime in automatic mode. Its smart LCD control panel and multi-stage filtration system ensure a thorough and hygienic cleaning experience.




Overview of the PRETTYCARE V3 Cordless Stick Vacuum Cleaner, highlighting its 45KPa max suction, 560W brushless motor, detachable battery, dust detection, auto mode, and bendable straw design.

2. PACKAGE CONTENTS

Carefully unpack all components and check against the list below. If any items are missing or damaged, please

contact customer support.

- Main Motor Unit
- Power Adapter
- Detachable Battery
- 2 x HPC Filter Screens
- Wall Mount
- Adjustable Metal Tube
- Powerful Brush (Floor Brush Head)
- 2-in-1 Brush
- Crevice Nozzle

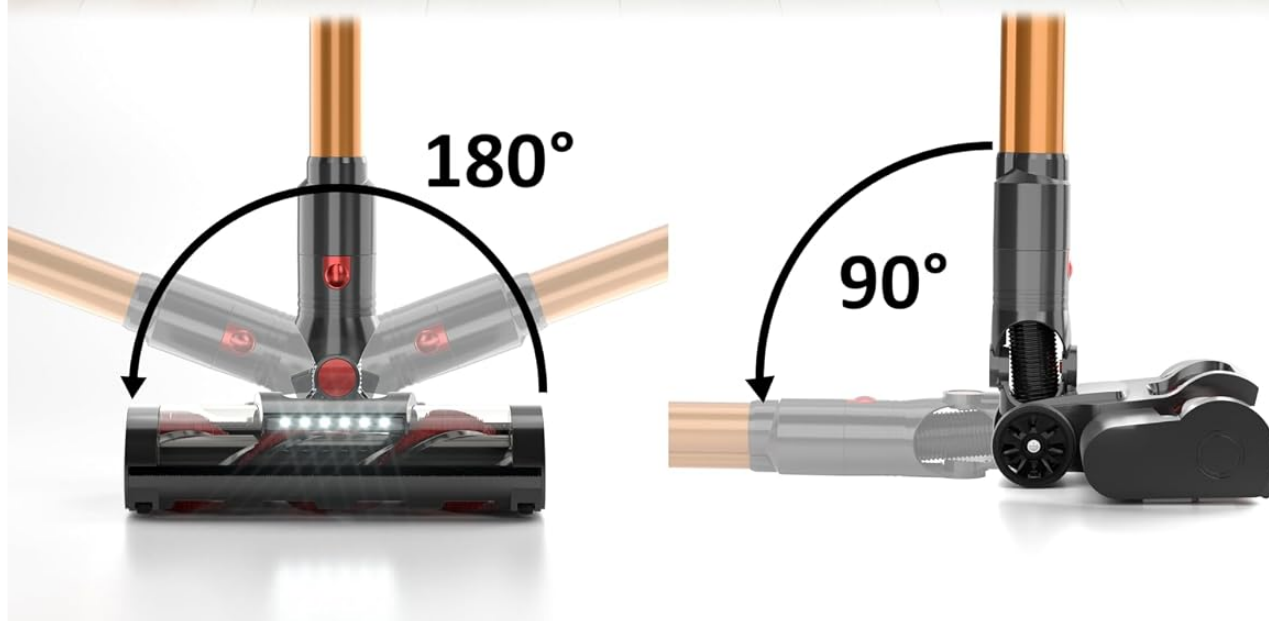

Detailed diagram showing all included components of the PRETTYCARE V3 Cordless Stick Vacuum Cleaner, including the main unit, power adapter, battery, filters, wall mount, extension tube, and various attachments.

3. ASSEMBLY AND SETUP

3.1 Assembly

1. Attach the adjustable metal tube to the main motor unit until it clicks into place.
2. Connect the powerful brush (floor brush head) to the other end of the metal tube.

3. Ensure the detachable battery is securely inserted into the main motor unit.
4. For specific cleaning tasks, attach the 2-in-1 brush or crevice nozzle directly to the main motor unit or the metal tube.

3.2 Charging the Battery

Before first use, fully charge the battery. The battery can be charged while attached to the vacuum or separately.

- Connect the power adapter to a wall outlet and to the charging port on the battery or the main unit.
- The LCD display will indicate charging status. A full charge typically takes 4-5 hours.
- A fully charged battery provides up to 60 minutes of runtime in automatic mode.

8*2500mAh

Detachable Battery

4~5H

Fast Charging

60 mins

Running Time

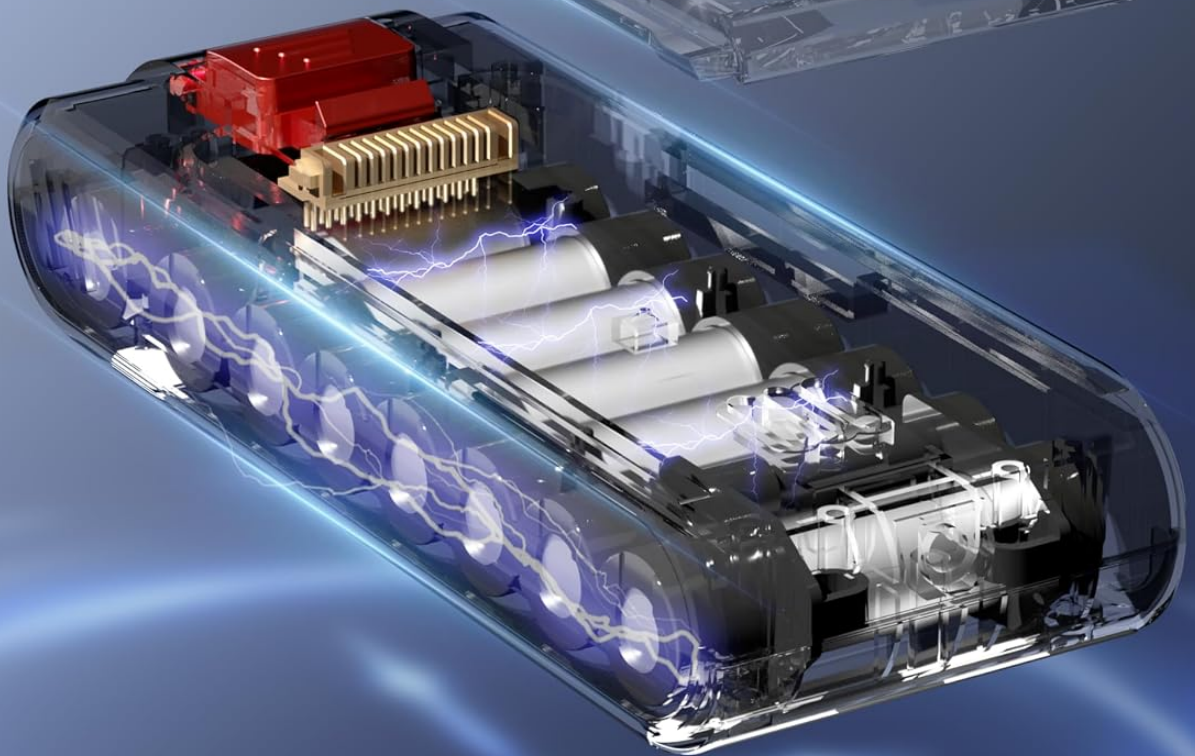


Image illustrating the detachable 8*2500mAh battery, indicating a fast charging time of 4-5 hours and a running time of 60 minutes.



Zwei Lademethoden



Staubentfernung
mit einem Klick



Abnehmbarer
Bodenbürstenkopf



Filter ist waschbar

Demonstration of two charging methods: directly charging the vacuum on its wall mount, or charging the detachable battery separately.

4. OPERATION

4.1 Power On/Off and Mode Selection

Press the power button to turn the vacuum on or off. Use the smart touch display to select your desired cleaning mode.

Remove 99.99% of Allergens to 0.1 Microns

5 Stage Filtration System

High-Density Filtration System

Sponge Filter

Dust Separation Technology

Stainless Steel Honeycomb Filter

Cyclone Centrifugation Technology



Close-up of the smart touch display, showing battery percentage, auto mode indicator, and controls for adjusting suction power.

- **Automatic Mode:** The vacuum automatically adjusts suction power based on the detected dirt level, optimizing efficiency and battery life.
- **Manual Modes:** Select from three manual suction levels (25kPa, 35kPa, 45kPa) for specific cleaning needs.



Illustration of the automatic mode, demonstrating how the vacuum adjusts suction power when transitioning from carpet to hard floor for optimal cleaning.

Drei Saugleistungen im manuellen Modus



Visual representation of the three manual suction power levels (25kPa, 35kPa, 45kPa) available for different cleaning intensities.

4.2 Maneuverability

The PRETTYCARE V3 is designed for easy maneuverability and reaching difficult areas.

- **180° Bendable Straw:** The adjustable metal tube can bend at 180 degrees, allowing you to clean under furniture without bending down.
- **Flexible Brush Head with LED Light:** The floor brush head can swivel 90° and 180°, making it easy to navigate around obstacles and clean corners. The integrated LED lights illuminate dark areas, revealing hidden dust.

One-touch Emptying

1.2L washable Dust Bucket



Image demonstrating the vacuum's ability to bend at 180 degrees for cleaning under low furniture and the 270-degree adjustable floor brush for enhanced maneuverability.

Flexibler Bürstenkopf mit LED-Licht

Um 90° + 180° verstellbarer Bürstenkopf, damit Sie jede Ecke problemlos reinigen können

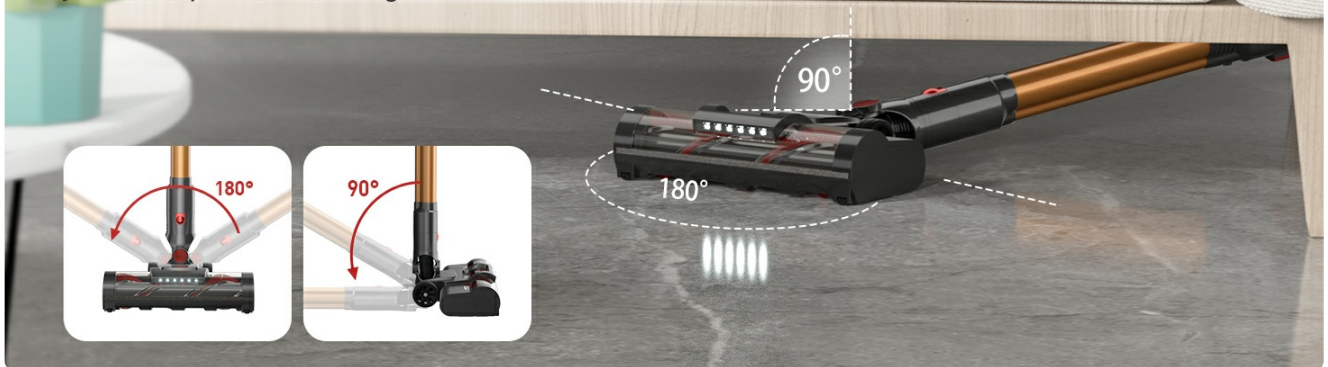


Illustration of the flexible brush head's movement, showing its 90-degree and 180-degree adjustability, along with the integrated LED lights for improved visibility.

5. MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your vacuum cleaner.

5.1 Emptying the Dust Bin

The 1.2L dust bin features a one-touch emptying mechanism for hygienic disposal of collected debris.

- Position the dust bin over a trash can.
- Press the release button to open the bottom flap and empty the contents.
- Close the flap securely after emptying.

Smart Touch Display with LED Indicator

Show the Remaining Power and Make the Plan Reasonable



Image demonstrating the simple one-touch mechanism for emptying the 1.2L washable dust bucket directly into a trash can.

5.2 Cleaning the Filter System

The PRETTYCARE V3 features a 5-stage filtration system with a purification rate of up to 99.99%. Regular cleaning of the filters is crucial for maintaining suction power and air quality.

- Remove the dust bin from the main unit.
- Carefully remove the internal filter components, including the high-density filtration system, sponge filter, stainless steel honeycomb filter, and dust separation technology components.

- Wash the washable filter components under running water. Ensure they are completely dry before reassembling.
- Tap off any dust from non-washable components.
- Reassemble all filter components and reattach the dust bin to the main unit.

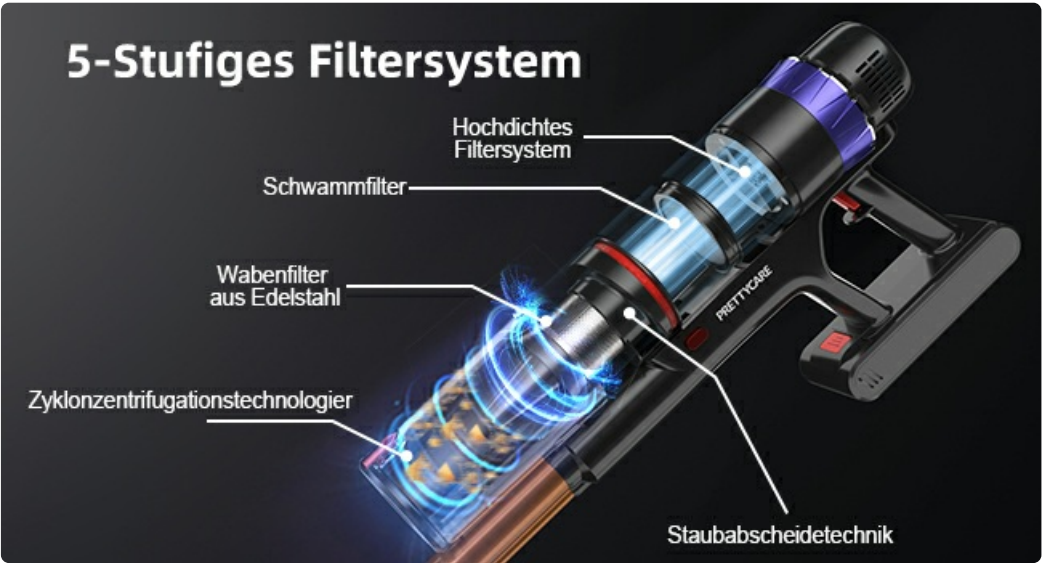


Diagram illustrating the components of the 5-stage filtration system: High-Density Filtration System, Sponge Filter, Dust Separation Technology, Stainless Steel Honeycomb Filter, and Cyclone Centrifugation Technology.

5.3 Cleaning the Brush Head

Periodically check the brush head for tangled hair or debris and remove them to ensure effective cleaning.

- Detach the floor brush head from the metal tube.
- Locate the brush roll release mechanism (if applicable) and remove the brush roll.
- Use scissors or a cleaning tool to cut and remove any tangled hair or fibers.
- Clean any debris from the brush head casing.
- Reinsert the brush roll and reattach the brush head.

6. TROUBLESHOOTING

If you encounter issues with your PRETTYCARE V3 vacuum cleaner, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Vacuum does not turn on	Battery is not charged; Battery not properly installed; Power button not pressed correctly.	Charge the battery fully; Ensure battery is securely clicked into place; Press the power button firmly.
Reduced suction power	Dust bin is full; Filters are clogged; Brush head is blocked; Tube or nozzle is blocked.	Empty the dust bin; Clean all filters thoroughly; Remove any blockages from the brush head; Check and clear any blockages in the tube or nozzles.
Short runtime	Battery not fully charged; Using high suction mode continuously; Battery degradation.	Ensure battery is fully charged before use; Use automatic or lower suction modes for longer runtime; Contact support if battery life significantly decreases.

Problem	Possible Cause	Solution
Brush head not rotating	Brush roll is tangled; Brush head is blocked; Connection issue.	Clean hair and debris from the brush roll; Check for and remove any blockages in the brush head mechanism; Ensure the brush head is securely attached.

If the problem persists after attempting these solutions, please contact PRETTYCARE customer support for further assistance.

7. SPECIFICATIONS

Feature	Specification
Brand	PRETTYCARE
Model Number	V3
Color	Gold
Power	530 Watts (Motor), 560 Watts (Brushless Motor)
Voltage	220 Volts
Suction Power	Up to 45,000 Pa
Dust Bin Capacity	1.2 Liters
Runtime	Up to 60 minutes (in Auto Mode)
Noise Level	80 dB
Filter Type	HEPA Filter (5-stage filtration system)
Item Weight	4.3 Kilograms
Special Features	Lightweight, Pet Hair Brush, Hard Floor Brush, Smart LCD Display, Bendable Tube
Power Source	Battery Powered (1 Lithium-ion battery required)

8. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your purchase or contact the seller directly. The seller for this product is PRETTYCARE-EU.

For any questions regarding product operation, maintenance, or troubleshooting not covered in this manual, please reach out to the official PRETTYCARE customer service channels.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question