

[Manuals.plus](#) /

> [Midea](#) /

> Midea 29L 2-in-1 Microwave Oven with Grill User Manual

Midea EG9P032MX

Midea 29L 2-in-1 Microwave Oven with Grill User Manual

Model: EG9P032MX

INTRODUCTION

Thank you for choosing the Midea 29L 2-in-1 Microwave Oven with Grill. This appliance combines microwave and grilling functions, offering versatility for your cooking needs. Please read this manual thoroughly before operating the appliance to ensure safe and efficient use. Keep this manual for future reference.

IMPORTANT SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of burns, electric shock, fire, injury to persons, or exposure to excessive microwave energy.

- Read all instructions before using the appliance.
- Do not attempt to operate this oven with the door open as this can result in harmful exposure to microwave energy.
- Do not place any object between the oven front face and the oven door or allow soil or cleaner residue to accumulate on sealing surfaces.
- Do not operate the oven if it is damaged. It is particularly important that the oven door closes properly and that there is no damage to the: (1) door (bent), (2) hinges and latches (broken or loosened), (3) door seals and sealing surfaces.
- The oven should not be adjusted or repaired by anyone except properly qualified service personnel.
- Ensure proper ventilation around the appliance.
- Do not use corrosive chemicals or vapors in this appliance.
- Supervise children closely when the appliance is in use.
- Do not heat liquids or other foods in sealed containers since they are liable to explode.

PRODUCT OVERVIEW

The Midea 29L 2-in-1 Microwave Oven with Grill features a sleek design and intuitive controls for various cooking functions.



Front view of the Midea 29L 2-in-1 Microwave Oven with Grill, showing the digital control panel, door handle, and interior with food being heated.

Full Glass Finish



The Midea 29L 2-in-1 Microwave Oven with Grill showcasing its full glass finish, blending seamlessly into a modern kitchen countertop.

Product Dimension



Diagram illustrating the product dimensions of the Midea 29L 2-in-1 Microwave Oven with Grill: 495mm width, 395mm depth, and 290mm height, with a 29L capacity and 288mm turntable diameter.

SETUP AND INSTALLATION

Unpacking

Carefully remove the microwave oven from its packaging. Remove all packing materials, including the turntable, roller ring, and grill rack (if included). Inspect the oven for any damage, such as dents or a misaligned door. Do not operate the oven if it is damaged.

Placement

- Place the oven on a flat, stable surface that can support its weight (approximately 13.6 kg).

- Ensure there is adequate ventilation space: at least 20 cm (8 inches) above the oven, 10 cm (4 inches) at the rear, and 5 cm (2 inches) on each side.
- Do not block air vents. Blocking vents can damage the oven and affect cooking results.
- Keep the oven away from heat sources and water.

Electrical Connection

Plug the oven into a properly grounded electrical outlet. Ensure the voltage and frequency match the specifications on the rating label of the oven.

OPERATING INSTRUCTIONS

Control Panel Overview

11 Pre-programmed Menus

Microwave

PARATHA | SOUP | BEVERAGE |
POTATO | POPCORN | REHEAT

Grill

PIZZA | LASANHA | COMBI.

Defrost

MEAT | CHICKEN | FISH

Close-up view of the digital touch control panel of the Midea 29L 2-in-1 Microwave Oven with Grill, highlighting the various pre-programmed menu options and numerical keypad.

The digital touch control panel allows for precise setting of cooking time, power level, and access to pre-programmed menus.

Basic Microwave Operation

1. Place food in a microwave-safe container on the turntable.
2. Close the oven door securely.
3. Press the "Microwave" button or select a power level.
4. Use the numerical keypad to enter the desired cooking time.
5. Press "Start" to begin cooking.

Grill Function

The grill function is ideal for browning and crisping food. Use the included grill rack for best results.

1. Place food on the grill rack, then place the rack on the turntable.
2. Press the "Grill" button.
3. Enter the desired grilling time.
4. Press "Start".

2-in-1 Microwave Oven

Micro. Grill



Visual representation of the 2-in-1 functionality of the Midea Microwave Oven, showing both microwave and grill capabilities for different food types like baked potatoes and pizza.

Pre-programmed Menus

The oven features 11 pre-programmed menus for common food items, simplifying cooking. These include:

- **Microwave:** Paratha, Soup, Beverage, Potato, Popcorn, Reheat
- **Grill:** Pizza, Lasagna, Combi (Combination cooking)
- **Defrost:** Meat, Chicken, Fish

Deodorizer



An illustration detailing the 11 pre-programmed menus available on the Midea 29L 2-in-1 Microwave Oven, categorized into Microwave, Grill, and Defrost functions with examples of food items.

Defrost Function

The manual defrost feature allows for defrosting by weight or time.

1. Press the "Defrost" button.
2. Select defrost by weight or time using the corresponding buttons.
3. Enter the weight (e.g., 0.5 kg) or time.
4. Press "Start".



Image showing the defrost by weight/time function, with a hand placing frozen meat into the microwave oven.

Child Safety Lock

To activate the child safety lock, press the "LOCK" button (or the corresponding button indicated on the display) 3 times. The display will show "LOCK". To deactivate, press the same button 3 times again.



Illustration demonstrating the child safety lock feature on the Midea Microwave Oven's control panel, showing the "LOCK + 3S" instruction.

Express Start (+30s)

For quick heating, press the "+30s Express Start" button. Each press adds 30 seconds of cooking time at full power.



Image highlighting the "+30s Express Start" function on the control panel, indicating quick cooking increments.

MAINTENANCE AND CLEANING

General Cleaning

- Always unplug the oven before cleaning.
- Clean the interior and exterior with a damp cloth and mild detergent. Avoid abrasive cleaners.
- Remove the turntable and roller ring for separate cleaning in warm, soapy water.
- Wipe the door seals and sealing surfaces regularly to prevent food residue buildup.

Deodorizer Function

The oven includes a deodorizer function to remove odors after cooking. Refer to the control panel for specific instructions on activating this feature.



Image illustrating the deodorizer function, showing air circulating within the microwave oven to remove odors.

TROUBLESHOOTING GUIDE

Problem	Possible Cause	Solution
Oven does not start	Power cord not plugged in; Door not closed properly; Fuse blown or circuit breaker tripped.	Ensure plug is securely in outlet; Close door firmly; Check household fuse/circuit breaker.
Food not heating	Incorrect cooking time/power level; Door not closed properly.	Adjust time/power; Ensure door is fully latched.
Sparking inside oven	Metal in oven; Food residue on walls.	Remove all metal objects; Clean oven interior thoroughly.
Turntable not rotating	Turntable not properly seated; Obstruction under turntable.	Re-seat turntable and roller ring; Remove any obstructions.

If the problem persists after attempting these solutions, please contact customer support.

PRODUCT SPECIFICATIONS

Feature	Detail
Brand	Midea
Model Number	EG9P032MX
Capacity	29 Liters
Microwave Power	900 Watts
Product Dimensions (D x W x H)	49.5 x 39.5 x 29 cm
Item Weight	13.6 kg
Installation Type	Countertop
Control Type	Digital Touch Control
Special Features	Timer, Defrost, Child Safety Lock, 11 Pre-programmed Menus
Material Type	Glass (Full Glass Finish)
Color	Silver

WARRANTY AND SUPPORT

Warranty Information

This Midea appliance comes with a standard manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions, including warranty period and coverage details. Keep your purchase receipt as proof of purchase.

Customer Support

For technical assistance, troubleshooting beyond this guide, or warranty claims, please contact Midea customer support. Contact information can typically be found on the Midea official website or on the product packaging. You may also visit the [Midea Store on Amazon](#) for additional product information and support resources.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CFQBQ789>

More documents and user manuals: <https://manuals.plus/>