

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Cherry](#) /
- › [Cherry KW 3000 Wireless Keyboard User Manual](#)

## Cherry JK-3000EU-2

# Cherry KW 3000 Wireless Keyboard User Manual

Model: JK-3000EU-2

## INTRODUCTION

---

Thank you for choosing the Cherry KW 3000 Wireless Keyboard. This full-size keyboard is designed for quiet and comfortable typing, featuring 2.4 GHz wireless technology for reliable connectivity with Windows and Mac operating systems. This manual provides essential information for setting up, operating, and maintaining your keyboard.



Image: The Cherry KW 3000 Wireless Keyboard, a full-size black keyboard, is shown on a light-colored desk mat. A laptop and an external monitor are visible in the background, indicating a typical office or home workspace setup. A computer mouse is also next to the keyboard.

## PACKAGE CONTENTS

Please check the package for the following items:

- Cherry KW 3000 Wireless Keyboard
- USB Nano Receiver (dongle)
- 2 x AAA Batteries
- Quick Start Guide (this document)

## SETUP

Follow these steps to set up your Cherry KW 3000 Wireless Keyboard:

1. **Insert Batteries:** Locate the battery compartment on the underside of the keyboard. Open the cover and insert the two AAA batteries, ensuring correct polarity (+/-). Close the battery cover securely.



Image: The underside of the keyboard is shown, highlighting the battery compartment. The adjustable feet are also visible in their extended position.

2. **Connect USB Receiver:** Plug the USB nano receiver into an available USB-A port on your computer (Windows or Mac). The operating system will automatically detect and install the necessary drivers.



Image: A small black USB nano receiver, labeled 'CHERRY', is shown on a light-colored surface, ready to be plugged into a computer's USB port.

3. **Start Typing:** Your keyboard is now ready for use. There is no on/off switch; the keyboard enters a power-saving sleep mode automatically when not in use and wakes up with any key press.

## OPERATING INSTRUCTIONS

---

### Basic Use

The Cherry KW 3000 features a standard full-size QWERTY layout, including a numeric keypad and function keys. Simply begin typing as you would with any standard keyboard.

### Hotkeys

The keyboard includes four dedicated hotkeys for quick access to common functions:

- **Calculator:** Opens the calculator application.
- **E-mail:** Launches your default email client.
- **Browser:** Opens your default web browser.
- **Sleep Mode:** Puts your computer into sleep mode.



Image: A close-up view of the upper right section of the keyboard, showing the four dedicated hotkeys with icons for calculator, email, web browser, and sleep mode.

## Adjustable Feet

For ergonomic comfort, the keyboard is equipped with stable fold-out feet on the underside. You can extend these feet to adjust the typing angle to your preference. The keyboard also features a non-slip bottom for stability.



Image: A side profile of the Cherry KW 3000 keyboard, illustrating its slim design and the adjustable feet extended to provide an elevated typing angle.

## FEATURES

---

- **2.4 GHz Wireless Technology:** Provides a stable and reliable connection with a range of up to 10 meters.
- **Full-Size Layout:** Includes a numeric keypad and cursor keys for comprehensive functionality.
- **Quiet Membrane Keys:** Designed for low-noise typing, ideal for office and home environments.
- **Durable Design:** Built for longevity with a keystroke lifespan of up to 10 million actuations.
- **Hotkeys:** Four convenient hotkeys for quick access to essential applications.
- **Adjustable Ergonomics:** Fold-out feet allow for customizable typing angles.
- **Plug & Play:** Easy installation without the need for complex software.



Image: A close-up of the keyboard keys, emphasizing their low-profile design and durable lettering, indicative of a quiet and long-lasting typing experience.

## MAINTENANCE

---

### Cleaning

To clean your keyboard, disconnect the USB receiver from your computer. Use a soft, lint-free cloth slightly dampened with water or a mild cleaning solution. Avoid excessive moisture and do not spray cleaners directly onto the keyboard. For cleaning between keys, use compressed air or a small brush.

### Battery Replacement

When the keyboard's performance degrades or it stops responding, it's likely time to replace the batteries. Open the battery compartment on the underside, remove the old AAA batteries, and insert new ones, observing the correct polarity. Dispose of old batteries responsibly according to local regulations.

## TROUBLESHOOTING

---

- **Keyboard not responding:**

- Ensure the USB receiver is securely plugged into a working USB port on your computer.
- Check the batteries. Replace them if they are low or depleted.
- Move the keyboard closer to the USB receiver to rule out range issues.
- Try plugging the USB receiver into a different USB port.

- **Keys are sticky or unresponsive:**

- Clean the keyboard as described in the Maintenance section to remove any debris that might be affecting key presses.

- **Intermittent connection:**

- Ensure there are no large metal objects or other wireless devices causing interference between the keyboard and the receiver.
- Try using the keyboard in a different location to check for environmental interference.

## SPECIFICATIONS

---

| Feature                 | Detail                                    |
|-------------------------|---|
| Model Number            | JK-3000EU-2                               |
| Connectivity Technology | 2.4 GHz Wireless (USB-A receiver)         |
| Keyboard Description    | Membrane                                  |
| Compatible Devices      | Mac, Windows                              |
| Special Features        | Durable, Hotkeys and Media Keys, Wireless |
| Color                   | Black                                     |
| Material                | Plastic                                   |

| Feature            | Detail  |
|--------------------|---|
| Product Dimensions | 18.03 x 6.69 x 0.79 inches (45.8 x 17 x 2 cm) |
| Item Weight        | 1.11 pounds (0.5 kg)                          |
| Batteries          | 2 AAA batteries (included)                    |
| Manufacturer       | CHERRY  |

## WARRANTY AND SUPPORT

---

Cherry products are manufactured to high-quality standards. This product comes with a standard manufacturer's warranty against defects in materials and workmanship. For specific warranty terms, duration, and to access customer support, please refer to the official Cherry website or contact their customer service directly. Keep your proof of purchase for warranty claims.

## SAFETY INFORMATION

---

- Do not expose the keyboard to liquids or excessive moisture.
- Avoid extreme temperatures.
- Do not attempt to disassemble or modify the keyboard. This will void the warranty.
- Keep batteries out of reach of children. If swallowed, seek immediate medical attention.
- Dispose of batteries and electronic waste responsibly.