

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [ALLIMITY](#) /

› [ALLIMITY Replacement Remote Control for AKAI TV AKTV Series - Instruction Manual](#)

## ALLIMITY QYSY-AKTV3923S-QYSY

# ALLIMITY Replacement Remote Control for AKAI TV AKTV Series - Instruction Manual

Model: QYSY-AKTV3923S-QYSY

## INTRODUCTION

This manual provides instructions for the ALLIMITY replacement remote control, designed for various AKAI TV models. This remote control is a direct replacement and requires no programming for immediate use. Please read this manual carefully to ensure proper operation and longevity of your remote control.

## COMPATIBLE AKAI TV MODELS

This remote control is compatible with the following AKAI TV models:

- AKTV 3923S SMART
- AKTV 704S
- AKTV 6536S
- AKTV 5836
- AKTV 5537S
- AKTV 5536S
- AKTV 5036S
- AKTV 4622S
- AKTV 4336S

Also compatible with models: AKTV3923S-SMART, AKTV704S, AKTV6536S, AKTV5836, AKTV5537S, AKTV5536S, AKTV5036S, AKTV4622S, AKTV4336S.

## SETUP

### 1. Battery Installation

The remote control requires alkaline batteries for operation. No programming is needed; simply insert the batteries correctly, and the remote will be ready to use.

1. Locate the battery compartment cover on the back of the remote control.

2. Slide the cover downwards or press the latch to open it.
3. Insert two new alkaline batteries (AAA, not included) into the compartment, ensuring the positive (+) and negative (-) terminals match the diagrams inside the compartment.
4. Replace the battery compartment cover, sliding it back into place until it clicks securely.



Figure 1: Front view of the ALLIMITY replacement remote control. This image shows the layout of all buttons, including power, source, navigation, volume, channel, and number keys.

## OPERATING INSTRUCTIONS

This remote control is designed to cover all functions of your original AKAI TV remote. Point the remote control directly at your AKAI TV's infrared sensor for optimal performance.

### Key Functions Overview

- **POWER:** Turns the TV on or off.
- **SOURCE:** Selects input sources (HDMI, AV, etc.).
- **Number Buttons (0-9):** Directly select channels.
- **VOL +/-:** Adjusts the volume level.
- **CH +/-:** Changes channels up or down.

- **MUTE:** Mutes or unmutes the TV sound.
- **MENU:** Accesses the TV's main menu.
- **Navigation Buttons (Up, Down, Left, Right):** Navigates through menus and options.
- **ENTER:** Confirms selections in menus.
- **EXIT:** Exits the current menu or function.
- **HOME:** Returns to the TV's home screen (for Smart TV models).
- **BROWSER/WWW:** Opens the web browser (for Smart TV models).
- **SMART TV Specific Buttons:** Buttons like "SMART", "MIX", "TXT", "SUBTITLE", "AUDIO", "SCREENSHOT", "INDEX", "HOLD", "REVEAL", "CANCEL", "SUBPAGE", "ASPECT", "FREEZE", "FAV" are available for specific Smart TV functionalities. Refer to your AKAI TV's original manual for detailed use of these advanced features.
- **SLEEP:** Sets the sleep timer.
- **DISPLAY:** Shows current channel information.
- **P-MODE:** Changes picture modes.
- **S-MODE:** Changes sound modes.
- **MOUSE:** Activates mouse pointer function (if supported by TV).



Figure 2: Angled view of the ALLIMITY replacement remote control, highlighting the ergonomic design and button placement for easy access.

## Cleaning

To clean the remote control, use a soft, dry cloth. Do not use liquid cleaners, sprays, or abrasive materials, as these can damage the remote's surface or internal components.

## Battery Replacement

Replace batteries when the remote control's response becomes sluggish or stops working. Always replace both batteries at the same time with new alkaline batteries of the same type. Do not mix old and new batteries, or different types of batteries.

## Storage

Store the remote control in a cool, dry place away from direct sunlight and extreme temperatures. If the remote will not be used for an extended period, remove the batteries to prevent leakage and potential damage.

## TROUBLESHOOTING

- **Remote not responding:**
  - Check if the batteries are inserted correctly with the correct polarity.
  - Replace the batteries with new ones.
  - Ensure there are no obstructions between the remote control and the TV's infrared sensor.
  - Make sure you are within the effective operating range (up to 10 meters).
- **Some buttons not working:**
  - This remote is designed to cover all functions. If specific buttons are not working, ensure your TV model supports that particular function (e.g., Smart TV features on a non-Smart TV).
  - Clean the remote control, especially around the non-responsive buttons, to remove any dirt or debris.
- **Intermittent operation:**
  - Weak batteries are often the cause. Replace them.
  - Ensure no strong light sources (like direct sunlight or bright fluorescent lights) are interfering with the infrared signal.

## SPECIFICATIONS

Feature	Detail
Brand	ALLIMITY
Model Number	QYSY-AKTV3923S-QYSY
Connectivity Technology	Infrared
Special Feature	Ergonomic design
Compatible Devices	AKAI TV models: AKTV 3923S SMART, AKTV 704S, AKTV 6536S, AKTV 5836, AKTV 5537S, AKTV 5536S, AKTV 5036S, AKTV 4622S, AKTV 4336S, and their variations.
Maximum Range	10 Meters

<b>Number of Buttons</b>	30
<b>Battery Description</b>	Alkaline (AAA, not included)
<b>Manufacturer</b>	ALLIMITYQYSY
<b>Country of Origin</b>	China

---

© 2023 ALLIMITY. All rights reserved.