

[Manuals.plus](#) /

› [MEUBLE COSY](#) /

› MEUBLE COSY Extensible Dining Table User Manual (Model 120-160x80x75cm)

MEUBLE COSY 120-160x80x75cm

MEUBLE COSY Extensible Dining Table User Manual

Model: 120-160x80x75cm

INTRODUCTION

Thank you for choosing the MEUBLE COSY Extensible Dining Table. This manual provides essential information for the assembly, operation, and maintenance of your new dining table. Please read these instructions carefully before use to ensure proper setup and longevity of the product.

This versatile dining table features an industrial style design, a robust metal frame, and an engineered wood top. It is designed to comfortably seat 4 to 6 people, making it suitable for various living spaces including dining rooms, kitchens, and offices.



Image 1: The MEUBLE COSY Extensible Dining Table in its compact form, set up in a dining area with chairs.

SETUP AND ASSEMBLY

Before beginning assembly, ensure all components are present and undamaged. It is recommended to assemble the table on a soft, clean surface to prevent scratches.

Components Checklist:

- Tabletop (Engineered Wood)
- Table Legs (Metal Frame)
- Reinforcement Bar
- Assembly Hardware (Screws, Allen Key, etc.)

Assembly Instructions:

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out. Verify against the components checklist.
2. **Attach Legs to Tabletop:** Position the tabletop upside down on a protected surface. Align the metal table legs with the pre-drilled holes on the underside of the tabletop. Secure each leg using the provided screws and Allen key. Do not overtighten.
3. **Install Reinforcement Bar:** Attach the reinforcement bar between the leg frames as indicated in the diagram (if provided in physical manual) to enhance stability. Secure with appropriate hardware.
4. **Tighten All Fasteners:** Once all components are loosely assembled, gently tighten all screws and bolts to ensure a stable and secure structure.
5. **Upright the Table:** With assistance, carefully turn the table upright and place it in its desired location.



Image 2: A close-up view of the table's surface and frame, illustrating the material and construction.

OPERATING THE EXTENSIBLE FEATURE

The MEUBLE COSY dining table is designed for easy extension and retraction, allowing you to adjust its size to accommodate 4 to 6 people.

To Extend the Table:

1. **Unlock Mechanism:** Locate any locking mechanisms under the tabletop (if present) and release them.
2. **Pull Apart Table Halves:** Gently pull the two halves of the tabletop apart. The extension leaf is typically stored underneath or needs to be inserted.
3. **Insert Extension Leaf:** Place the extension leaf into the gap created between the two table halves. Ensure it is properly seated and aligned.
4. **Push Halves Together:** Carefully push the two main table halves back together until they meet the extension leaf and form a continuous surface.
5. **Lock Mechanism:** Engage any locking mechanisms to secure the table in its extended position (160 x 80 x 75 cm).

To Retract the Table:

1. **Unlock Mechanism:** Release any locking mechanisms.
2. **Pull Apart Table Halves:** Gently pull the two halves of the tabletop apart to create a gap.
3. **Remove Extension Leaf:** Carefully lift and remove the extension leaf. Store it safely according to the product design (e.g., underneath the table or separately).
4. **Push Halves Together:** Push the two main table halves back together until they meet, forming the compact table (120 x 80 x 75 cm).
5. **Lock Mechanism:** Engage any locking mechanisms to secure the table in its retracted position.



Image 3: Visual representation of the table's extension mechanism, showing the table closed, partially open, and fully open with the leaf inserted.

MAINTENANCE AND CARE

Proper care will help maintain the appearance and extend the lifespan of your MEUBLE COSY dining table.

- **Cleaning:** Wipe the table surface and frame with a soft, damp cloth. Use only non-aggressive, mild detergents if necessary. Avoid abrasive cleaners, harsh chemicals, or solvents that could damage the finish.
- **Spills:** Clean up spills immediately to prevent staining or damage to the engineered wood surface.
- **Heat and Moisture:** Avoid placing hot items directly on the tabletop. Use coasters or placemats to protect the surface from heat and moisture.
- **Sunlight:** Prolonged exposure to direct sunlight may cause fading or discoloration. Position the table away from direct, intense sunlight if possible.
- **Stability Check:** Periodically check all screws and bolts to ensure they are tight. Retighten if necessary to maintain

stability.



Image 4: A detailed view of the table's surface, showing its texture and finish, emphasizing the area to be maintained.

TROUBLESHOOTING

This section addresses common issues you might encounter with your dining table.

- **Table Wobbles:**

- Ensure all assembly screws and bolts are securely tightened.
- Check if the table is on an even surface. Adjust floor glides if available.

- **Extension Mechanism Stiff:**

- Ensure no debris is obstructing the sliding mechanism.
- Apply a small amount of silicone-based lubricant to the sliding tracks if necessary (avoid oil-based lubricants on wood).

• **Surface Scratches:**

- Minor scratches on engineered wood can sometimes be minimized with furniture repair markers or waxes matching the finish.
- Always use placemats and coasters to prevent future scratches.

SPECIFICATIONS

Feature	Detail
Brand	MEUBLE COSY
Model	Extensible Dining Table
Dimensions (Closed)	120 cm (Length) x 80 cm (Width) x 75 cm (Height)
Dimensions (Extended)	160 cm (Length) x 80 cm (Width) x 75 cm (Height)
Item Weight	22.2 Kilograms
Maximum Weight Recommendation	100 Kilograms
Frame Material	Metal
Top Material Type	Engineered Wood
Color	Black
Recommended Uses	Dining Room, Living Room, Kitchen, Office



Image 5: Dimensional diagram of the table, indicating its length (120-160cm), width (80cm), and height (75cm).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question