

WOCKODER R612

WOCKODER R612 Record Player User Manual

Model: R612 | Brand: WOCKODER

IMPORTANT SAFETY INSTRUCTIONS

To ensure safe operation and prolong the lifespan of your WOCKODER R612 Record Player, please read and adhere to the following safety guidelines:

- Do not expose the unit to rain, moisture, or excessive humidity.
- Avoid placing the unit near heat sources such as radiators, heat registers, stoves, or other heat-producing appliances.
- Ensure proper ventilation. Do not block any ventilation openings.
- Only use attachments/accessories specified by the manufacturer.
- Unplug the unit during lightning storms or when unused for long periods.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- 1 x WOCKODER R612 Turntable Unit
- 2 x External Stereo Speakers
- 1 x Power Adapter
- 1 x User Manual (this document)
- 1 x 45-RPM Adapter

PRODUCT OVERVIEW

The WOCKODER R612 Record Player is a versatile audio system designed for vinyl enthusiasts and modern music listeners. It features a vintage design with dual stereo speakers, supporting multiple playback options.

Key Features:

- **Multi-functional Playback:** Supports Phono (vinyl), Wireless (Bluetooth), Aux-in, and USB playback.
- **3-Speed Turntable:** Compatible with 33 1/3, 45, and 78 RPM records (7", 10", and 12" sizes).
- **Dual External Speakers:** Provides full and dynamic sound for an immersive listening experience.
- **RCA Output:** Allows connection to external amplifiers or powered speakers for enhanced audio.
- **Removable Dust Cover:** Protects the turntable and records from dust while allowing playback with the cover closed.
- **Auto Stop Function:** User-selectable auto-stop feature for convenience.

Component Identification:

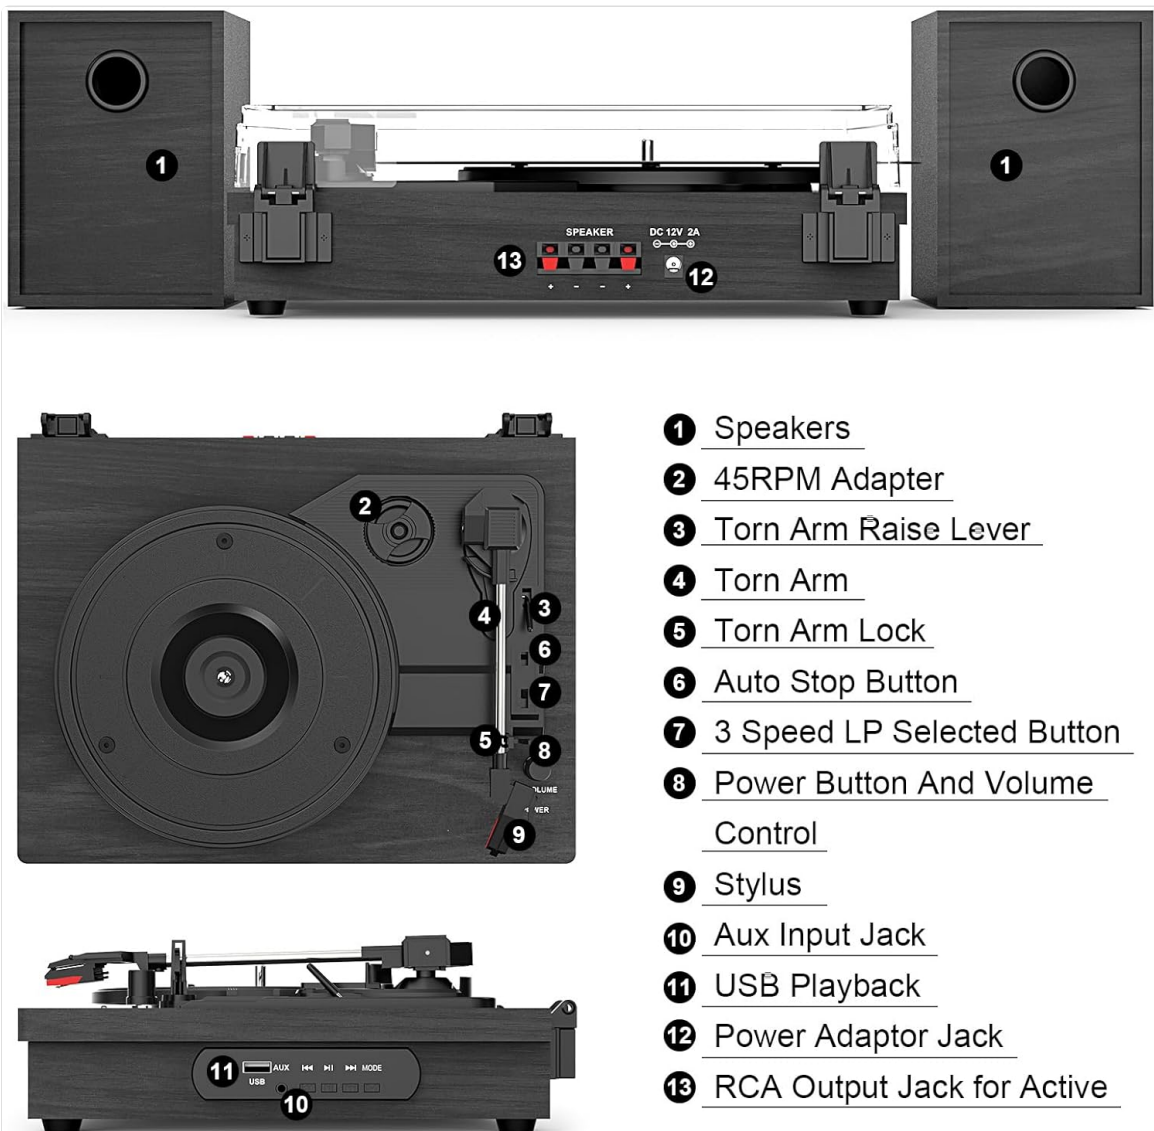


Figure 1: Front and Rear View of the WOCKODER R612 Record Player with labeled parts.

This image displays the various parts of the record player and its speakers, including the turntable, tonearm, stylus,

control buttons, and input/output ports. Key components are numbered for easy identification, such as speakers (1), 45RPM adapter (2), Tonearm Raise Lever (3), Tonearm (4), Tonearm Lock (5), Auto Stop Button (6), 3 Speed LP Selected Button (7), Power Button and Volume Control (8), Stylus (9), Aux Input Jack (10), USB Playback (11), Power Adaptor Jack (12), and RCA Output Jack for Active Speakers (13).

SETUP

1. **Unpacking:** Carefully remove all components from the packaging. Retain the packaging for future transport or storage.
2. **Placement:** Place the turntable unit on a stable, level surface away from direct sunlight, heat sources, and excessive dust. Position the external speakers on either side of the turntable for optimal stereo separation.
3. **Speaker Connection:** Connect the included speaker wires from the main turntable unit to the corresponding terminals on the back of each external speaker. Ensure correct polarity (red to red, black to black).
4. **Power Connection:** Insert the DC plug of the power adapter into the DC 12V jack on the back of the turntable unit. Plug the AC adapter into a standard wall outlet.
5. **Dust Cover:** Place the removable dust cover onto the turntable unit.



Figure 2: The WOCKODER R612 Record Player with its two external speakers, ready for setup.

This image shows the main record player unit with a vinyl record on the platter, and two separate black stereo speakers positioned on either side. The clear dust cover is open, revealing the tonearm and stylus. This illustrates the typical setup configuration.

OPERATING INSTRUCTIONS

Playing Vinyl Records:

1. **Power On:** Turn the Power/Volume knob (8) clockwise to power on the unit and adjust the

volume.

2. **Select Speed:** Choose the appropriate speed (33 1/3, 45, or 78 RPM) using the 3 Speed LP Selected Button (7) to match your vinyl record. For 45 RPM records, place the 45-RPM adapter (2) on the center spindle.
3. **Place Record:** Carefully place your vinyl record on the turntable platter.
4. **Unlock Tonearm:** Release the Tonearm Lock (5) to free the tonearm.
5. **Lift Tonearm:** Use the Tonearm Raise Lever (3) to gently lift the tonearm.
6. **Position Stylus:** Manually move the tonearm over the desired starting groove of the record.
7. **Lower Tonearm:** Slowly lower the Tonearm Raise Lever (3) to allow the stylus (9) to descend onto the record. Playback will begin.
8. **Adjust Volume:** Adjust the volume using the Power/Volume knob (8).
9. **Auto Stop:** The Auto Stop Button (6) can be set to ON or OFF. When ON, the turntable will automatically stop spinning when the record finishes. When OFF, it will continue to spin.
10. **End Playback:** At the end of the record, or when you wish to stop, use the Tonearm Raise Lever (3) to lift the tonearm, return it to its rest, and secure it with the Tonearm Lock (5). Turn the Power/Volume knob (8) counter-clockwise to power off.



Vinyl Record Player

Support 3-Size of 7/10/12" records
and 3-Speed of 33/45/78 RMP
playing speeds.

Figure 3: Illustration of the record player's compatibility with 7", 10", and 12" records and 3 speeds.

This image highlights the record player's ability to play vinyl records of different sizes (7-inch, 10-inch, and 12-inch) and at three different speeds (33 1/3, 45, and 78 RPM), emphasizing its versatility for various vinyl collections.

Wireless (Bluetooth) Connection:

1. **Switch to Wireless Mode:** Power on the unit. The unit will automatically enter Wireless mode if no record is playing. The indicator light will flash, indicating it's ready for pairing.
2. **Enable Bluetooth on Device:** On your smartphone, tablet, or other Bluetooth-enabled device, enable Bluetooth and search for "WOCKODER R612".
3. **Pair Device:** Select "WOCKODER R612" from the list of available devices to pair. Once connected, the indicator light will stop flashing and remain solid.
4. **Play Music:** You can now stream audio from your device to the record player's speakers.



Figure 4: The record player demonstrating wireless music streaming from a smartphone.

This image shows the record player with its speakers, and a hand holding a smartphone displaying a music playback interface. Wireless signals are depicted emanating from the phone to the speakers, illustrating the Bluetooth streaming functionality of the device.

Aux-in and USB Playback:

- **Aux-in:** Connect an external audio device (e.g., MP3 player, CD player) to the Aux Input Jack (10) using a 3.5mm audio cable. The unit will automatically switch to Aux-in mode.
- **USB Playback:** Insert a USB flash drive into the USB socket (11). The unit will automatically detect and play compatible audio files from the drive. Use the control buttons near the USB port to navigate tracks.

MAINTENANCE

- **Cleaning the Unit:** Wipe the exterior of the unit with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Cleaning the Stylus:** Gently brush the stylus (needle) from back to front with a soft brush designed for stylus cleaning. Avoid touching the stylus with your fingers.
- **Dust Cover:** Keep the dust cover closed when the unit is not in use to prevent dust accumulation on the platter and stylus. Clean the dust cover with a soft, damp cloth.
- **Record Care:** Keep your vinyl records clean and free of dust to ensure optimal sound quality and prolong the life of your stylus.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Power adapter not connected or power outlet is faulty.	Ensure the power adapter is securely connected to the unit and a working power outlet. Check the Power/Volume knob is turned ON.
No sound from speakers	Volume is too low; speakers not connected properly; incorrect mode selected.	Increase volume. Check speaker wire connections. Ensure the correct input mode (Phono, Wireless, Aux, USB) is selected.
Record skipping	Record is dirty or scratched; stylus is worn or dirty; unit is not level.	Clean the record. Clean the stylus. Ensure the record player is on a stable, level surface. Consider replacing the stylus if worn.
Bluetooth not connecting	Device is out of range; Bluetooth not enabled on device; unit not in pairing mode.	Move device closer to the unit. Ensure Bluetooth is enabled on your device. Confirm the record player is in Wireless (Bluetooth) pairing mode (flashing indicator).

SPECIFICATIONS

- **Model Name:** R612
- **Brand:** WOCKODER
- **Color:** Black
- **Material:** Wood
- **Connectivity Technology:** Bluetooth
- **Maximum Rotational Speed:** 78 RPM

- **Playback Speeds:** 33 1/3, 45, 78 RPM
- **Included Components:** 1* turntable, 2* speakers, 1* adapter, 1* user manual
- **Special Feature:** AUX Input
- **Item Weight:** 9.53 pounds (4.33 Kilograms)
- **Package Dimensions:** 15.31 x 12.01 x 11.38 inches

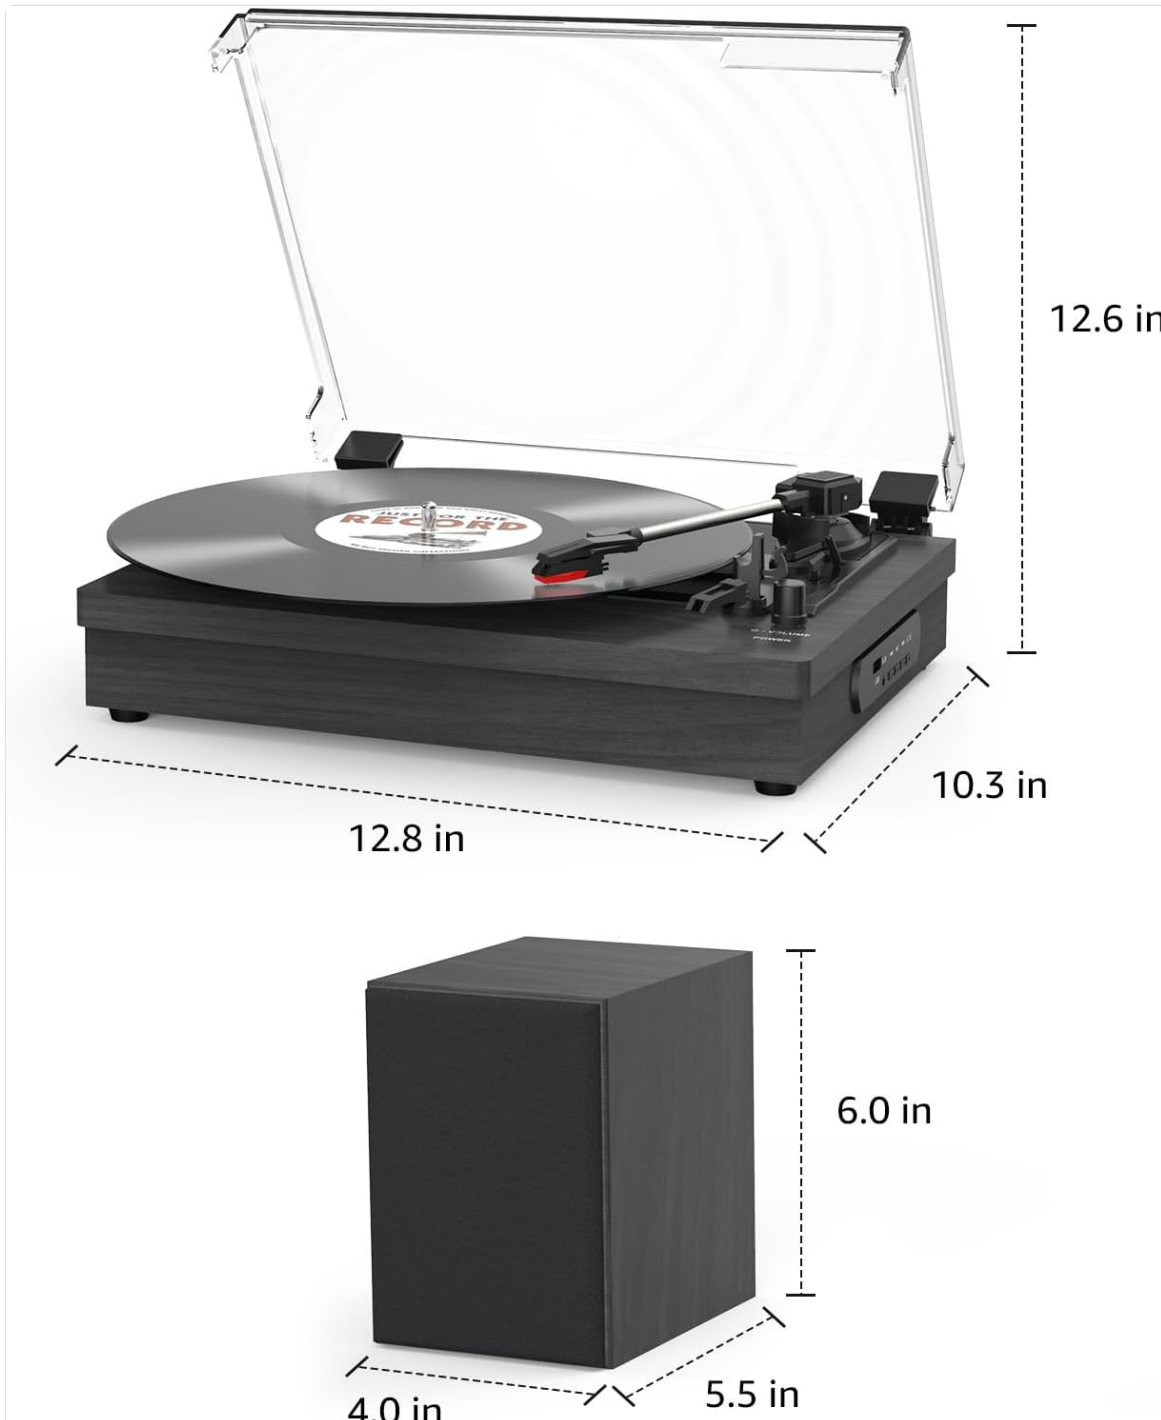


Figure 5: Detailed dimensions of the record player and its speakers.

This image provides a visual representation of the dimensions of the WOCCODER R612 record player and its accompanying speakers. The turntable unit measures approximately 12.8 inches in width, 10.3 inches in depth, and 12.6 inches in height (with the dust cover open). Each speaker measures approximately 4.0 inches in width, 5.5 inches in depth, and 6.0 inches in height.

For warranty information and technical support, please refer to the warranty card included with your product or contact WOCKODER customer service directly. Contact details are typically available on the manufacturer's official website or on the product packaging.

Additional protection plans may be available for purchase from your retailer to extend coverage beyond the standard manufacturer's warranty.