

COSTWAY 2.5KG/42L 850W Front Load

COSTWAY Compact Electric Dryer User Manual

Model: 2.5KG/42L 850W Front Load

1. INTRODUCTION

Thank you for choosing the COSTWAY Compact Electric Dryer. This manual provides essential information for the safe and efficient operation, installation, and maintenance of your new appliance. Please read this manual thoroughly before use and retain it for future reference.

This compact electric dryer is designed for convenience and efficiency, featuring a 2.5kg capacity, 4 drying modes, and a durable stainless steel drum. Its quiet operation and versatile installation options make it suitable for various living spaces.

2. SAFETY INSTRUCTIONS

To reduce the risk of fire, electric shock, or injury, follow these basic precautions:

- Read all instructions before using the appliance.
- Ensure the dryer is properly grounded.
- Do not dry articles that have been previously cleaned in, washed in, soaked in, or spotted with gasoline, dry-cleaning solvents, or other flammable or explosive substances.
- Do not allow children to play on or in the appliance. Close supervision is necessary when the appliance is used near children.
- Do not reach into the appliance if the drum is moving.
- Do not install or store this appliance where it will be exposed to the weather.
- Do not tamper with controls.
- Clean the lint filter before or after each load.
- Do not repair or replace any part of the appliance or attempt any servicing unless specifically recommended in this manual.
- The dryer will automatically stop when the door is opened during operation.

3. PRODUCT OVERVIEW

3.1 Components Included

- 1 x COSTWAY Compact Electric Dryer
- 2 x Hanging Brackets
- 2 x Plastic Spacers
- 1 x Exhaust Connector
- 1 x User Guide (This document)

3.2 Key Features

- **Efficient Drying:** Stainless steel drum with reverse tumbling action to prevent tangling and reduce wrinkles.
- **Multiple Drying Modes:** Four distinct modes (Cold, Warm, Very Warm, Air Dry) for various fabric types and drying needs.
- **Adjustable Heat Levels:** Two heat settings (High, Low) for delicate items or larger loads.
- **Compact Design:** Space-saving dimensions suitable for apartments, dorms, RVs, or small laundry areas.
- **Quiet Operation:** Operates at less than 44 dB, minimizing disturbance.
- **Safety Features:** Automatic stop function when the door is opened.
- **Easy Maintenance:** Removable and reusable 3-layer filtration system for lint collection.



Figure 1: Front view of the COSTWAY Compact Electric Dryer.



Figure 2: Detailed view of dryer features, including the automatic stop mechanism when the door opens, the transparent visual window, the practical handle, the durable stainless steel inner drum, and the air inlet filter.

4. SETUP AND INSTALLATION

The COSTWAY Compact Electric Dryer offers flexible installation options to suit your space:

- **Freestanding:** Place the dryer on a stable, level surface.
- **Wall-Mounted:** Use the included hanging brackets and plastic spacers to mount the dryer securely to a wall. Ensure the wall can support the dryer's weight.
- **Stacked:** Position the dryer on top of a compatible washing machine. Ensure proper stability and ventilation.

Ensure adequate ventilation around the dryer. Connect the exhaust connector to allow proper air circulation.



Figure 3: Dryer dimensions and included installation accessories (hanging brackets, plastic spacers, exhaust connector).



Figure 4: Example of the dryer stacked on a washing machine.

5. OPERATING INSTRUCTIONS

5.1 Loading the Dryer

- Ensure clothes are properly spun to remove excess water.
- Do not overload the dryer. The maximum capacity is 2.5 kg of wet laundry.
- Close the door firmly before starting the drying cycle.

5.2 Control Panel Overview



Figure 5: Control panel with Heat and Timer settings.

The control panel features a heat selector and a timer dial:

- **Heat Settings:**

- **High:** Suitable for bulky items or large quantities of laundry.
- **Low:** Ideal for delicate items such as silk, nylon, or linen.

- **Timer/Drying Modes:**

- **Air Dry (0-80 minutes):** For refreshing clothes with cool air.
- **Cool Down (0-20 minutes):** To cool down clothes and reduce wrinkles after a heated cycle.
- **Warm (20-120 minutes):** For general drying, leaving clothes wrinkle-free.
- **Very Warm (120-200 minutes):** For drying large quantities or bulky items thoroughly.

5.3 Starting a Drying Cycle

1. Load the laundry into the drum.
2. Close the dryer door securely.
3. Select the desired heat setting (High or Low) based on fabric type.
4. Turn the timer dial to the desired drying mode and duration. The dryer will begin operation.
5. The dryer will automatically stop when the set time expires or if the door is opened during operation.

Action de Culbutage Inversée

- Pas d'enchevêtrement, temps de séchage plus court
- Économie d'énergie, prolonge la durée de vie du produit

Capacité maximale : 2,5 kg (linge humide)



Figure 6: Reverse tumbling action prevents clothes from tangling.

6. MAINTENANCE AND CLEANING

Regular maintenance ensures optimal performance and extends the lifespan of your dryer.

6.1 Cleaning the Lint Filter

The dryer features a 3-layer filtration system to collect lint and fibers. Clean the filters before or after each load for best drying results and to prevent fire hazards.

1. Open the dryer door.
2. Locate the filter assembly inside the drum.
3. Carefully remove the filter components (exhaust cover, lint filter, exhaust filter).
4. Remove accumulated lint and debris from each filter. A soft brush or vacuum cleaner can be used.
5. Reassemble the filters and place them back into the dryer securely.

Système de Filtration à 3 Couches

Remarque : pour les nettoyer, il suffit de les détacher et de les essuyer avec une brosse douce

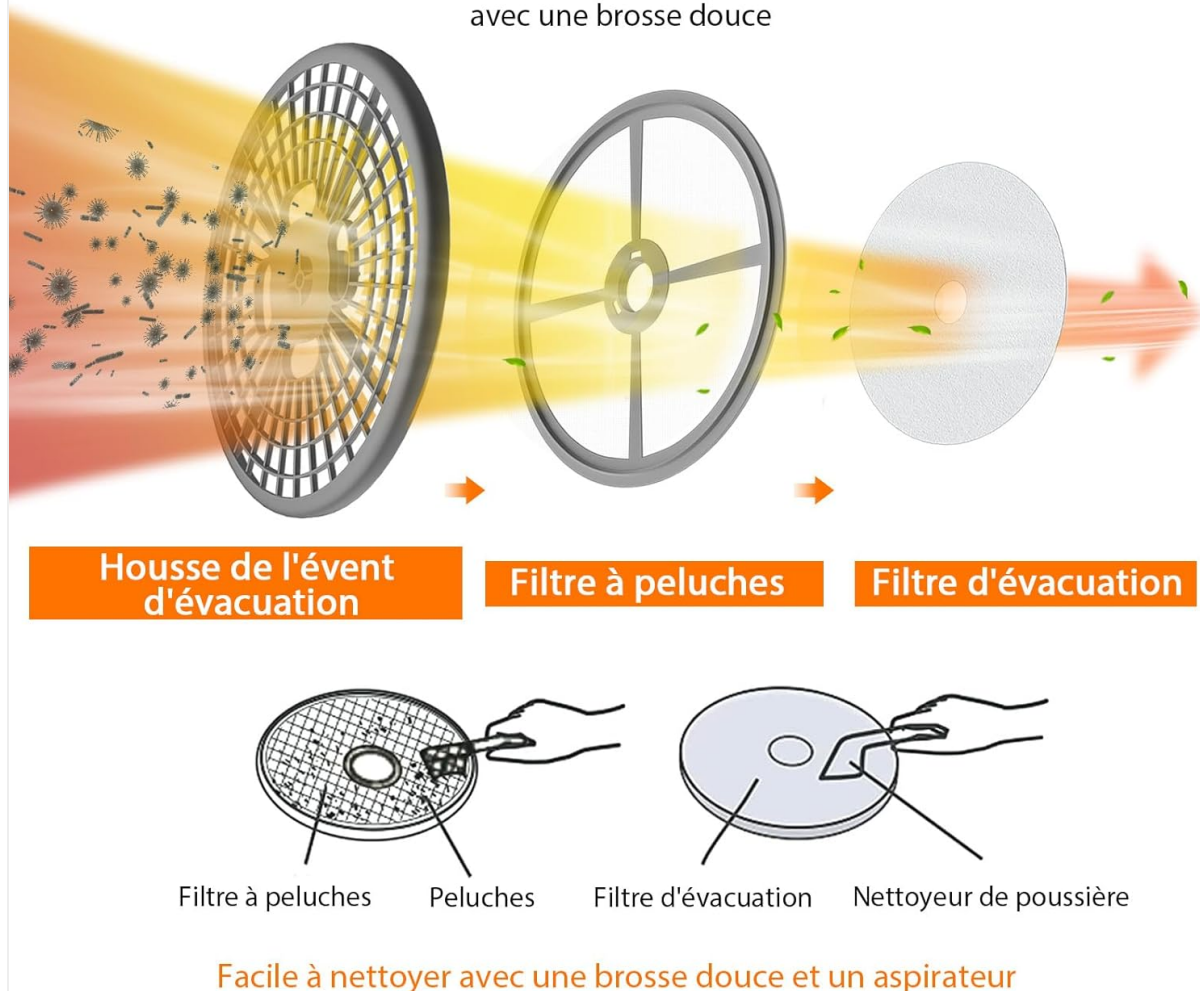


Figure 7: The 3-layer filtration system and cleaning instructions.

6.2 Exterior Cleaning

Wipe the exterior of the dryer with a soft, damp cloth. Do not use abrasive cleaners or solvents.

7. TROUBLESHOOTING

If you encounter issues with your dryer, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Dryer does not start	Power cord unplugged; Door not closed properly; Timer not set.	Ensure power cord is securely plugged in; Close the door firmly; Set the timer dial.
Clothes not drying properly	Lint filter clogged; Overloaded dryer; Incorrect drying mode/time selected.	Clean the lint filter; Reduce load size; Select appropriate drying mode and time.
Unusual noise during operation	Foreign objects in the drum; Dryer not level.	Check the drum for loose items; Ensure the dryer is on a stable, level surface.
Dryer stops unexpectedly	Door opened during cycle; Overheating protection activated.	Close the door to resume; Allow dryer to cool down, then restart. Check ventilation.

If the problem persists after attempting these solutions, please contact customer support.

8. SPECIFICATIONS

Feature	Specification
Brand	COSTWAY
Model	2.5KG/42L 850W Front Load
Overall Dimensions (L x W x H)	49.5 x 42 x 61 cm (19.5 x 16.5 x 24 inches)
Voltage	220-240 V
Frequency	50 Hz
Rated Power	850 W
Capacity	2.5 kg / 42 L
Noise Level	< 44 dB
Net Weight	17 kg (37.5 lbs)
Material	Stainless Steel (Drum)
Drying Modes	Cold, Warm, Very Warm, Air Dry
Heat Levels	High, Low

9. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation provided at the time of purchase or contact your retailer. You may also visit the official COSTWAY brand store for additional product information and support resources.

COSTWAY Brand Store: [Visit COSTWAY Store](#)