



[Manuals.plus](#) /

› [Play-Doh](#) /

› Play-Doh Pizza Delivery Scooter Playset User Manual

Play-Doh F8803

Play-Doh Pizza Delivery Scooter Playset User Manual

Model: F8803

INTRODUCTION

Welcome to the world of Play-Doh Pizza Delivery! This playset combines the fun of a ride-on scooter with a creative Play-Doh kitchen, allowing children to imagine and create their own pizza delivery adventures. This manual provides essential information for assembly, operation, and care to ensure a safe and enjoyable experience.

SAFETY INFORMATION

WARNING: Small parts may be generated. Not for children under 3 years.

Always supervise children during play. Ensure all parts are securely assembled before use. Keep Play-Doh compound away from carpets and fabrics as it may stain. Play-Doh compound is not intended to be eaten.

WHAT'S INCLUDED

Before beginning assembly, please verify that all components are present:

- Unassembled scooter playset
- 2 pizza boxes
- Pretend cell phone
- Pretend credit card
- Pizza paddle
- Pizza cutter
- Cup with lid
- Ice cream mold
- Ice cream cone
- Pressing tool
- Spatula



Figure 2: The scooter's rear kitchen unit, showing open compartments and the pizza oven.

4. **Install Accessories:** Place the various Play-Doh tools and accessories into their designated storage areas or attach them to the scooter as shown in the diagrams.
5. **Prepare Play-Doh:** Open the cans of Play-Doh modeling compound. For best results, knead the compound slightly before first use.



Figure 3: The ten included cans of Play-Doh modeling compound.

OPERATING INSTRUCTIONS

The Play-Doh Pizza Delivery Scooter offers multiple ways to play:

Riding the Scooter

- The scooter is kid-powered and designed for children aged 3-5 years, with a maximum weight capacity of 50 pounds (22.6 kilograms).
- Children can sit on the seat and use their feet to propel the scooter forward.
- The scooter features a horn button on the handlebars. Press the yellow button to activate the pretend horn sound.



Figure 4: Pressing the horn button on the scooter's handlebars.

Making Play-Doh Pizzas

- **Pizza Crust:** Use brown Play-Doh (or any color) to create a pizza crust. The toy oven at the back of the scooter has a stamp and spin action to help shape the crust.



Figure 5: Placing Play-Doh into the pizza oven for shaping.

- **Toppings:** Utilize the various molds located on the scooter's compartments to create different toppings like mushrooms, pepperoni, and vegetables.



Figure 6: Adding Play-Doh toppings to a pizza.



Figure 7: Examples of Play-Doh food molds available on the scooter.

- **Slicing:** Use the included pizza cutter to slice your finished Play-Doh pizza.



Figure 8: Slicing a Play-Doh pizza with the included cutter.

Delivery and Checkout

- **Pizza Box:** Place your Play-Doh pizza into one of the included pizza boxes.
- **Delivery Slot:** Slide the pizza box into the designated slot on the side of the scooter for pretend delivery.



Figure 9: Inserting a pizza box into the delivery slot.

- **Pretend Phone:** Use the pretend cell phone for taking orders or communicating during deliveries.



Figure 10: Using the pretend cell phone.

- **Checkout:** The scooter features a checkout station with a pretend credit card reader and molds to create Play-Doh money.



Figure 11: Using the pretend credit card reader and Play-Doh money.

MAINTENANCE AND CARE

- **Cleaning Play-Doh:** To clean Play-Doh from surfaces, allow it to dry completely, then scrape it off. For small pieces, use a stiff brush or vacuum cleaner.
- **Storing Play-Doh:** Always return Play-Doh compound to its airtight containers after use to prevent it from drying out. If Play-Doh becomes dry, a few drops of water can help restore its pliability.
- **Cleaning Scooter:** Wipe the scooter and accessories with a damp cloth as needed. Do not immerse the scooter in water.
- **Storage:** When not in use, store the scooter and all accessories in a clean, dry place. The seat opens to provide storage for Play-Doh cans and accessories.



Figure 12: Storage compartment under the scooter seat.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Play-Doh is too hard/dry.	Exposed to air for too long.	Add a few drops of water and knead until soft. Store in airtight containers.
Play-Doh stuck in molds.	Too much Play-Doh or not enough pressure.	Use smaller amounts of Play-Doh. Ensure molds are clean before use.
Scooter does not move smoothly.	Wheels may be obstructed or on an uneven surface.	Check wheels for debris. Ensure use on a flat, smooth surface.
Compartment doors do not stay closed.	Overfilled compartments or minor misalignment.	Ensure compartments are not overfilled. Check for any obstructions in the latch mechanism.

SPECIFICATIONS

Brand: Play-Doh

Model Number: F8803

Product Dimensions: 7.99 x 24.49 x 17.01 inches (20.3 x 62.2 x 43.2 cm)

Item Weight: 14.32 pounds (6.5 kg)

Manufacturer Recommended Age: 36 months - 5 years

Maximum Weight Capacity: 50 pounds (22.6 kg)

Country of Origin: China

Manufacturer: Hasbro

WARRANTY AND SUPPORT

For information regarding product warranty, please refer to the documentation included with your purchase or visit the official Play-Doh or Hasbro website. For customer support, inquiries, or to purchase replacement parts, please contact Hasbro Consumer Care through their official channels.

You can often find support information on the manufacturer's website: www.hasbro.com

