

## BaBylissPRO FX729

# BaBylissPRO FXONE LO-PROFX Professional Cordless Trimmers User Manual

Model: FX729

## 1. INTRODUCTION

---

Thank you for choosing the BaBylissPRO FXONE LO-PROFX Professional Cordless Trimmers. This manual provides comprehensive instructions for the safe and effective use, maintenance, and troubleshooting of your new professional grooming tool. Please read this manual thoroughly before first use and retain it for future reference.

## 2. PRODUCT OVERVIEW

---

The BaBylissPRO FXONE LO-PROFX Trimmer is engineered for precision and performance, featuring an interchangeable battery system and an advanced brushless motor. Below are the main components and what's typically included in the package:



Figure 2.1: BaBylissPRO FXONE LO-PROFX Trimmer and Included Accessories

### Key Components:

- **Blue DLC/Titanium Standard-Tooth T-Blade:** Designed for precise cutting and durability.
- **FXONE Interchangeable Lithium Battery:** Provides cordless power and features a 4-stage LED ring light for battery level indication.
- **N1 Brushless Motor:** Delivers high torque and power for consistent cutting performance.
- **Ergonomic Design:** Features an ultra-low-profile metal housing with an ergonomic grip and finger rest for comfortable handling.
- **Quick Battery Release Button:** Allows for easy and rapid battery swapping.

**BaBylissPRO®**

**Blue DLC/Titanium Standard-Tooth  
T-Blade**

Great for all hair textures and skin sensitivity  
levels



Figure 2.2: Close-up of the Blue DLC/Titanium Standard-Tooth T-Blade

**BaBylissPRO®**

### **FXONE Interchangeable Battery**


- Seamlessly swap the FXONE battery into any FXONE tool
- Up to 3 hours of runtime per battery



Figure 2.3: Illustration of the FXONE Interchangeable Battery System

**BaBylissPRO**

**Ergonomic finger rest** for a comfortable grip on the tool

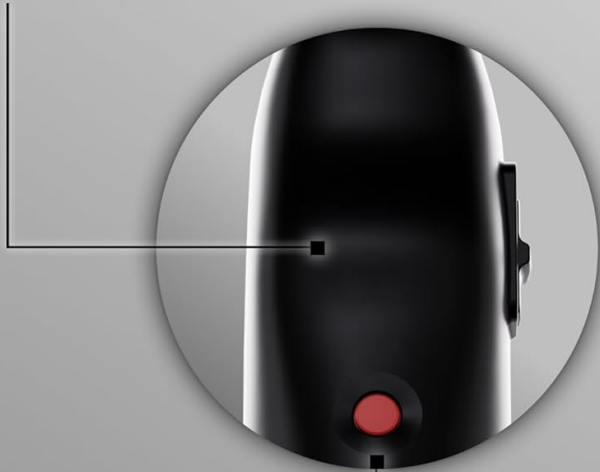

**Quick battery release button** for easy swapping of FXONE batteries



Figure 2.4: Ergonomic Finger Rest and Quick Battery Release Button

**BaBylissPRO®**

**Upgraded N1 Brushless Motor**



Higher torque and higher power



Figure 2.5: Depiction of the Upgraded N1 Brushless Motor

### 3. FEATURES

The BaBylissPRO FXONE LO-PROFX Trimmer incorporates several advanced features for professional-grade grooming:

- **FXONE Universal Battery System:** The interchangeable lithium battery (FXBB24) is compatible across all FXONE tools, offering up to 3 hours of runtime per battery. It features a 4-stage LED ring light to clearly indicate the battery level.
- **Advanced N1 Brushless Motor:** Equipped with a new N1 brushless motor with dual ball bearings for enhanced efficiency, higher torque, and increased power. It operates at 7,200 RPM / 14,400 SPM for consistent, reliable performance.
- **Precision Blue Titanium Standard-Tooth T-Blade (FX707BL):** This hypoallergenic, high-strength blade is designed to maintain a lower temperature during use and is zero-gap adjustable for ultra-precise cutting.
- **Ergonomic and Durable Design:** The trimmer features an ultra-low-profile metal housing, providing a comfortable and secure ergonomic grip for extended professional use.
- **Dual-Voltage Charger Base:** The included charger base supports both standard and USB-C charging

ports, making it convenient for travel.

Video 3.1: Official Introduction to the BaBylissPRO FXONE System, highlighting its universal battery and tool compatibility.

## 4. SETUP

---

Follow these steps to prepare your BaBylissPRO FXONE Trimmer for first use:

1. **Charge Battery:** Before initial use, fully charge the FXONE lithium battery. Connect the provided dual-voltage charger to a power outlet and place the battery into the charger base. The 4-stage LED ring light on the battery will illuminate to indicate charging status and turn solid when fully charged.
2. **Insert Battery:** Once charged, align the battery with the battery compartment at the base of the trimmer. Gently push the battery into place until you hear a click, ensuring it is securely seated.
3. **Blade Adjustment (Optional):** For specific cutting preferences, the T-blade can be zero-gap adjusted. Refer to the 'Maintenance' section for detailed instructions on how to safely adjust the blade.

## 5. OPERATING INSTRUCTIONS

---

To operate your BaBylissPRO FXONE Trimmer:

1. **Power On/Off:** Locate the power button on the trimmer. Press it once to turn the trimmer on. Press it again to turn the trimmer off.
2. **Trimming:** Hold the trimmer firmly with the ergonomic grip. Use the precision T-blade for detailed work such as crispy edge-ups, hard lines, and other intricate hair cutting tasks. Always ensure the blade is clean and properly oiled before each use for optimal performance and to prevent pulling.
3. **Battery Monitoring:** During use, observe the 4-stage LED ring light on the battery. This indicator will show the remaining battery life. Recharge the battery when the indicator signals low power to ensure uninterrupted operation.

## 6. MAINTENANCE

---

Proper maintenance ensures the longevity and optimal performance of your trimmer:

- **Cleaning Blades:** After each use, turn off the trimmer and use the included cleaning brush to remove any hair clippings from the blade. For a more thorough cleaning, press the quick release button to detach the blade. Clean the blade and the trimmer head area, then reattach the blade securely.
- **Oiling Blades:** Regularly apply a few drops of the provided clipper oil to the blades. Turn the trimmer on for a few seconds to allow the oil to distribute evenly. Oiling helps maintain blade sharpness, reduces friction, and prevents overheating.
- **Battery Care:** Store the FXONE battery in a cool, dry place away from direct sunlight and extreme temperatures. Do not attempt to disassemble or modify the battery. Always use the original BaBylissPRO charger for recharging.
- **Storage:** When not in use, store the trimmer and its accessories in a safe, dry place, preferably in its original packaging or a protective case.

## 7. TROUBLESHOOTING

---

If you encounter issues with your BaBylissPRO FXONE Trimmer, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Trimmer not turning on	Battery not charged or improperly inserted.	Ensure the battery is fully charged and securely inserted into the trimmer.
Trimmer pulling hair	Blades are dull, dirty, or not oiled. Blade alignment issue.	Clean and oil the blades. Check blade alignment and adjust if necessary (refer to maintenance). If blades are dull, consider replacement.
Battery not charging	Charger not connected, faulty charger/cable, or dirty charging contacts.	Verify the charger is properly plugged into a working outlet and the battery is correctly seated in the charger base. Clean charging contacts if necessary. Try a different outlet.
Excessive noise or vibration	Blades are not properly oiled or secured. Internal issue.	Oil the blades. Ensure the blade is securely attached. If the problem persists, contact customer support.

## 8. SPECIFICATIONS

- **Model Number:** FX729
- **Power Source:** 1 Lithium Ion battery (included)
- **Motor:** N1 Brushless Motor, 7,200 RPM / 14,400 SPM
- **Blade Type:** Blue Titanium Standard-Tooth T-Blade (FX707BL)
- **Dimensions:** 10.79 x 6.73 x 3.74 inches
- **Weight:** 1.63 Pounds
- **UPC:** 074108477613
- **Manufacturer:** BaBylissPRO

## 9. WARRANTY & SUPPORT

For detailed warranty information regarding your BaBylissPRO FXONE LO-PROFX Professional Cordless Trimmers, please refer to the official BaBylissPRO website or the warranty card included with your product. It is recommended to keep your purchase receipt as proof of purchase for any warranty claims.

For further assistance, technical support, or to inquire about replacement parts, please contact BaBylissPRO customer service through their official website or the contact information provided in your product packaging.