

manuals.plus /

> [Victiv](#) /

> [Victiv P10 70-inch Phone Tripod and Selfie Stick User Manual](#)

## Victiv P10

# Victiv P10 70-inch Phone Tripod and Selfie Stick User Manual

Model: P10 | Brand: Victiv

## 1. INTRODUCTION

Thank you for choosing the Victiv P10 70-inch Phone Tripod. This versatile accessory is designed to enhance your photography and videography experience, offering stability and flexibility for various devices. It functions as a tall tripod, a portable selfie stick, and includes a wireless remote control for convenient operation. This manual provides essential information for proper setup, operation, and maintenance of your device.

## 2. PACKAGE CONTENTS

Please verify that all items listed below are included in your package:

- 1 x Victiv P10 Phone Tripod (integrated selfie stick)
- 1 x Universal Phone Holder (with cold shoe mount)
- 1 x Wireless Remote Control
- 1 x Carrying Bag

## Complete Tripod Units



- 1 Selfie Stick Tripod
- 2 Wireless Remote
- 3 Phone Holder
- 4 Carrying Bag

Image: All components included in the Victiv P10 tripod package.

### 3. PRODUCT OVERVIEW

Familiarize yourself with the main parts of your Victiv P10 Tripod:

- **Standard 1/4" Screw:** For attaching the phone holder or other compatible devices.
- **180° Head:** Allows for flexible angle adjustments.
- **Flip Locks:** Securely extend and retract the tripod legs.
- **Aluminum Tube:** Lightweight and durable construction.
- **Base Locking Knob:** Secures the tripod legs in position.
- **Non-Slip Pads:** Provide stability on various surfaces.

# Phone Tripod



Image: Detailed diagram highlighting the key components of the Victiv P10 Phone Tripod.

## 4. SETUP INSTRUCTIONS

### 4.1 Unfolding the Tripod

1. Place the tripod on a flat, stable surface.
2. Gently pull the legs outwards until they are fully extended and stable.
3. Adjust the height by opening the flip locks on each leg section, extending the aluminum tubes to your desired height, and then closing the flip locks to secure them.

# 70" Tall Phone Tripod Stand



Image: The Victiv P10 tripod shown at various heights, from folded to fully extended, and as a selfie stick.

## 4.2 Attaching the Phone Holder

1. Locate the 1/4" screw on the tripod head.
2. Screw the universal phone holder onto the 1/4" screw until it is securely fastened.
3. Open the phone holder jaws and carefully insert your smartphone. Ensure the phone is centered and securely gripped by the rubber pads.
4. The phone holder features a cold shoe mount, allowing you to attach accessories like fill lights or microphones.

# Cold Shoe Phone Holder

Adapted to fill lights, microphones, audio recorder.

Compatible with all 2.5–3.74inch cellphones



Image: The universal phone holder with its cold shoe mount, compatible with various smartphones and accessories.

## 4.3 Pairing the Wireless Remote Control

1. Ensure the remote control has a working battery.
2. Turn on the remote control (usually by pressing and holding a button until an indicator light flashes).
3. On your smartphone, go to Bluetooth settings and search for new devices.
4. Select the device named "AB Shutter3" or similar from the list to pair.
5. Once paired, the indicator light on the remote will stop flashing, and you can use it to trigger your phone's camera shutter.


## 5. OPERATING THE TRIPOD

### 5.1 Adjusting Angles and Orientation

- The tripod head allows for 180° rotation. Loosen the knob on the side of the head to adjust the angle, then tighten it to secure.
- To switch between horizontal and vertical phone orientation, simply rotate the phone holder or the tripod head as needed.

# Phone Tripod with Flexible Head

1/4" Universal Screw

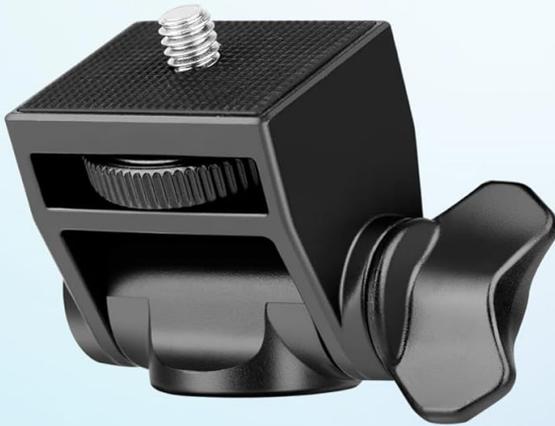

Camera



Sport Camera



Ringlight



Panel Light

## Horizontal & Vertical & Overhead Shooting



Image: The flexible tripod head with its 1/4" universal screw, compatible with cameras, sport cameras, ring lights, and panel lights.

### 5.2 Using as a Selfie Stick

1. To convert the tripod into a selfie stick, locate the two knobs on the base of the tripod legs.
2. Unscrew these knobs to detach the tripod legs from the main pole.
3. The main pole, with the phone holder attached, now functions as an extendable selfie stick.
4. Extend the selfie stick to your desired length and use the wireless remote for capturing photos or videos.
5. Remember to keep the detached tripod base parts safe to avoid losing them.



Image: Instructions for detaching the tripod base to use the main pole as a selfie stick, along with the wireless remote control.

### 5.3 Versatile Usage Scenarios

The Victiv P10 tripod is suitable for various applications:

- **Video Recording:** Stable platform for capturing smooth footage.
- **Vlogging:** Ideal for recording yourself or your surroundings.
- **Photography:** Achieve steady shots and creative angles.
- **Live Streaming:** Maintain a consistent camera position for broadcasts.
- **Traveling:** Compact and lightweight for on-the-go use.

# Selfie Stick & Tripod Stand

Compatible with Cellphone / Cameras / GoPro

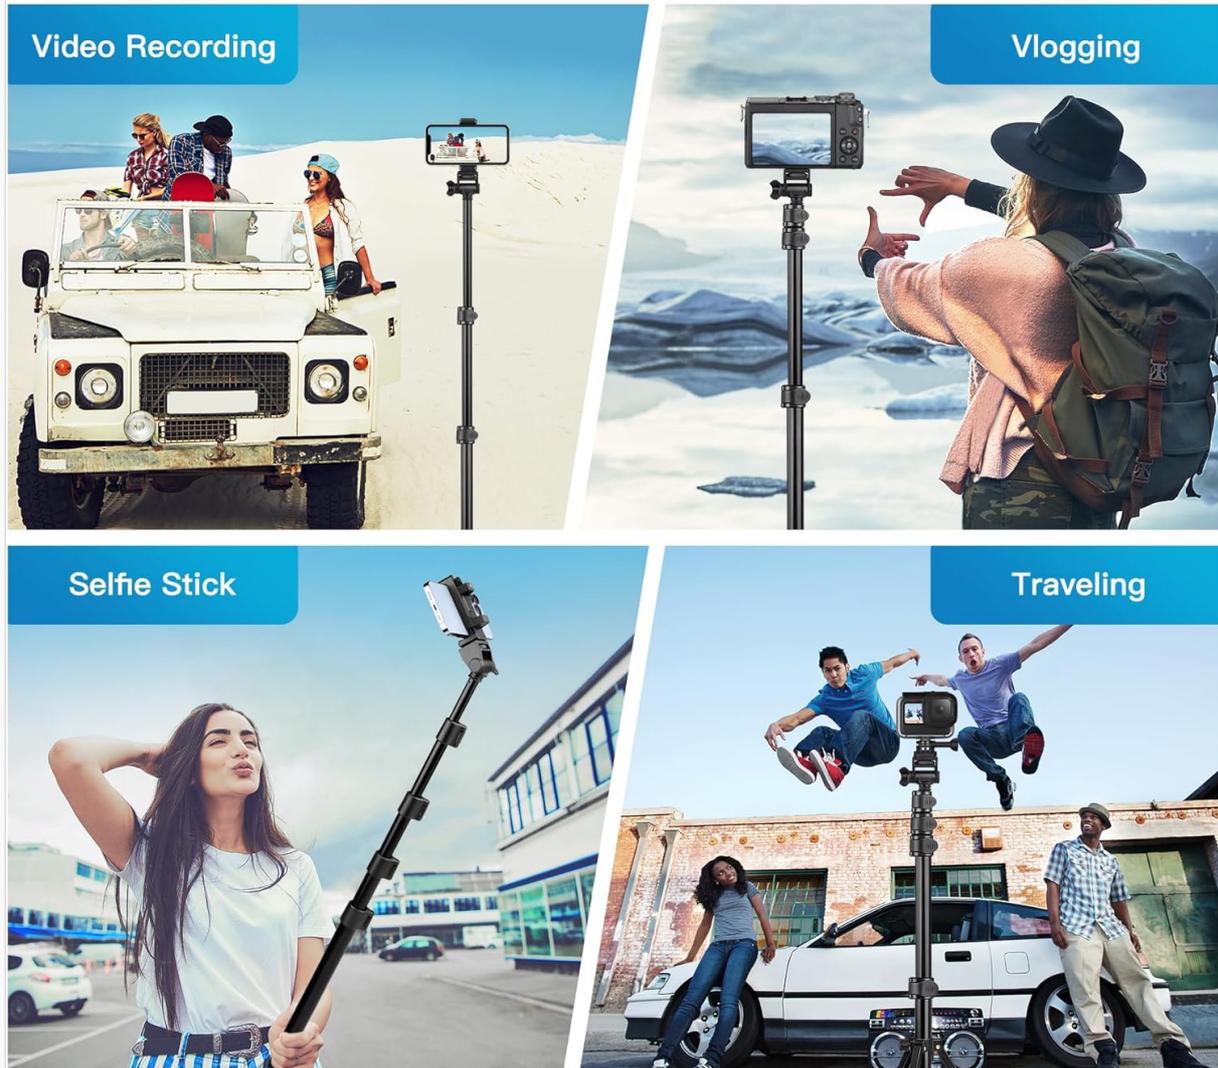


Image: Examples of the Victiv P10 tripod and selfie stick in use for video recording, vlogging, selfies, and travel photography.

## 6. MAINTENANCE AND CARE

- **Cleaning:** Wipe the tripod with a soft, dry cloth. For stubborn dirt, use a slightly damp cloth and mild soap, then dry thoroughly. Avoid harsh chemicals.
- **Storage:** Store the tripod in its carrying bag in a cool, dry place away from direct sunlight and extreme temperatures. Ensure all locks are closed and the tripod is fully retracted before storage.
- **Remote Battery:** The wireless remote uses a standard coin cell battery (e.g., CR2032). If the remote stops responding, replace the battery. Refer to the remote's specific instructions for battery replacement.
- **Avoid Overloading:** Do not exceed the recommended weight capacity of the tripod to prevent damage.

## 7. TROUBLESHOOTING

- **Remote Control Not Pairing:**
  - Ensure the remote is turned on and within range (up to 10m).
  - Check the remote's battery.

- Disable and re-enable Bluetooth on your smartphone.
  - Forget the device in your phone's Bluetooth settings and attempt to pair again.
- **Tripod Instability:**
    - Ensure all flip locks on the legs are securely closed after extending.
    - Verify the base locking knob is tightened.
    - Ensure the tripod is placed on a flat, level surface.
- **Phone Not Fitting in Holder:**
    - The phone holder is adjustable from 2.5 inches (6.3 cm) to 3.74 inches (9.5 cm). Ensure your phone's width falls within this range.
    - Remove any bulky phone cases if necessary.

## 8. SPECIFICATIONS

Feature	Specification
Brand	Victiv
Model Name	P10 Tripod
Material	Aluminum
Maximum Height	70 inches (177 cm)
Minimum Height	19 inches (48 cm)
Folded Size	18.8 inches (48 cm)
Weight	Approximately 1.7 lbs (800 g)
Number of Leg Sections	3
Tripod Head Type	Ball Head (with 1/4" universal screw)
Phone Holder Compatibility	Width 2.5" - 3.74" (6.3 cm - 9.5 cm), compatible with most smartphones (e.g., iPhone 11-17 Pro Max, Galaxy S10 and newer)
Remote Control Range	Up to 10 meters (33 feet)
Included Components	Tripod, Phone Holder, Wireless Remote, Carrying Bag

## 9. WARRANTY AND SUPPORT

For information regarding product warranty, returns, or technical support, please refer to the retailer's policy where the product was purchased. If you have any questions or require assistance with your Victiv P10 Tripod, please contact Victiv customer service through their official channels or the retailer's support system.

