

GIFZES 3595561-yesbay

GIFZES Kids Desk and Chair Set User Manual

Model: 3595561-yesbay

1. INTRODUCTION

This user manual provides important information for the safe and effective use of your GIFZES Kids Desk and Chair Set. Please read this manual thoroughly before assembly and use, and retain it for future reference.

The GIFZES Kids Desk and Chair Set is designed to provide a comfortable and ergonomic study environment for children aged 3-16 years. It features adjustable height for both the desk and chair, a spacious desktop with integrated storage, and an ergonomic design to promote proper posture and protect vision.



Image 1.1: The GIFZES Kids Desk and Chair Set, featuring a blue and white design with a spacious desktop, integrated hutch for storage, and an ergonomic chair. The set is designed for children's study and activities.

2. SAFETY INFORMATION

Please observe the following safety precautions to prevent injury or damage to the product:

- Ensure all parts are securely fastened before use.
- Do not allow children to climb on the desk or chair.
- Supervise children during initial use and when adjusting height.
- Keep small parts away from young children to prevent choking hazards during assembly.
- Place the desk and chair on a flat, stable surface.
- Do not exceed the maximum weight capacity of 150 kg (approximately 330 lbs) for the desk.

3. PACKAGE CONTENTS

Before beginning assembly, please verify that all components are present:

- 1 x Desk
- 1 x Chair

- 1 x User Manual (this document)
- Assembly Hardware (screws, bolts, tools as required)

4. SETUP AND ASSEMBLY

Assembly of the GIFZES Kids Desk and Chair Set is designed to be straightforward. All necessary assembly tools are included. Follow these general steps:

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out on a clean, soft surface to prevent scratches. Identify all components against the package contents list.
2. **Assemble Desk Base:** Attach the desk legs to the main support structure using the provided hardware. Ensure all connections are firm.
3. **Attach Desktop:** Secure the desktop to the assembled desk base. Pay attention to the orientation of the desktop, ensuring the drawer mechanism is correctly positioned.
4. **Install Hutch and Drawer:** Assemble the hutch components and attach them to the desktop. Insert the storage drawer into its designated slot.
5. **Assemble Chair Base:** Connect the chair legs to the chair's main support.
6. **Attach Chair Seat and Backrest:** Secure the seat and backrest to the chair base. Ensure the ergonomic design is correctly oriented.
7. **Initial Height Adjustment:** Before first use, adjust the desk and chair to an appropriate height for the child. Refer to the "Operating Instructions" section for detailed adjustment steps.

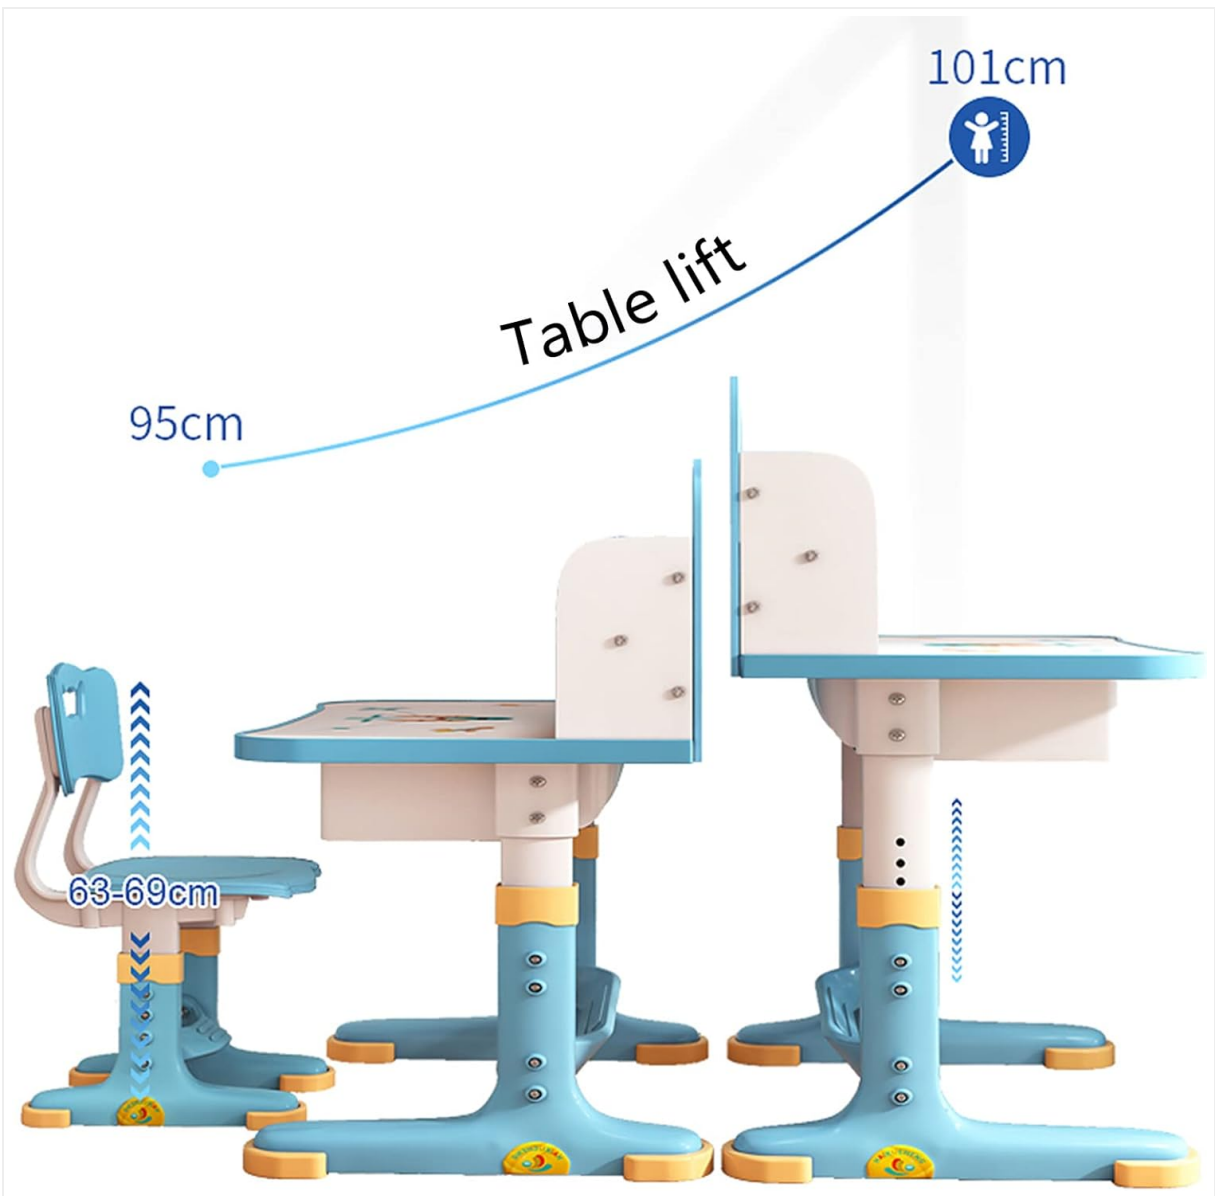 


Image 4.1: Illustration of the height adjustment range for both the desk and chair, demonstrating the mechanism for raising and lowering the components.

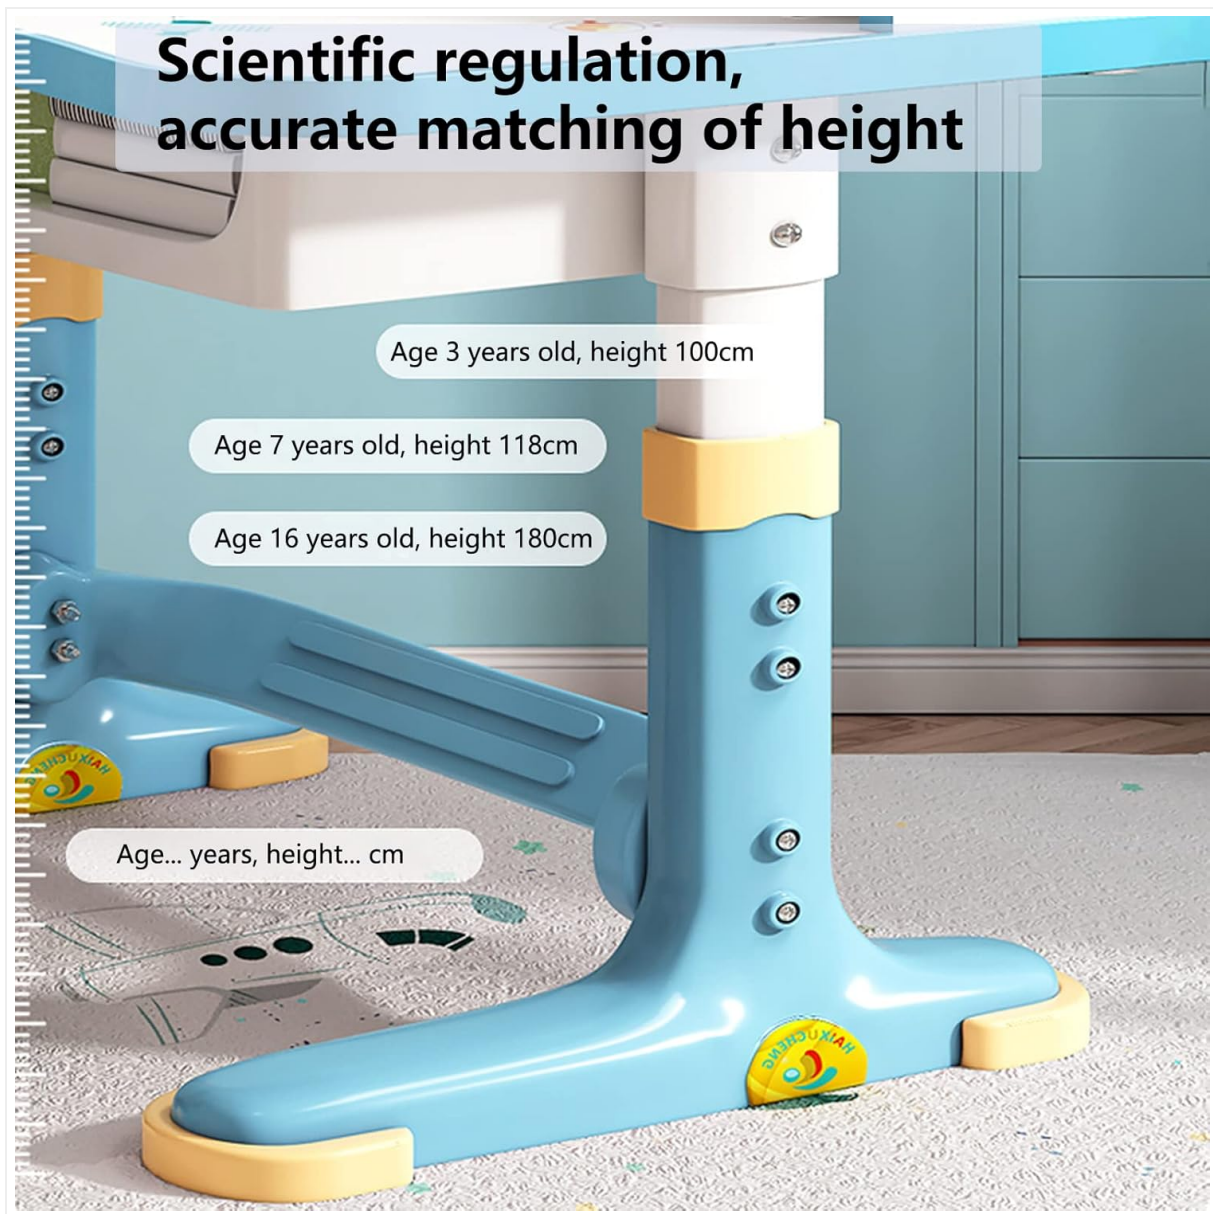


Image 4.2: Detailed view of the desk's height adjustment system, indicating recommended height settings based on a child's age and corresponding height for optimal ergonomic positioning.

5. OPERATING INSTRUCTIONS

The GIFZES Kids Desk and Chair Set is designed for ease of use and adaptability to your child's growth.

5.1. Adjusting Desk Height

The desk height can be adjusted from approximately 37.4 inches (95 cm) to 39.8 inches (101 cm). To adjust:

1. Locate the adjustment knobs or levers on the desk legs.
2. Loosen the fasteners.
3. Carefully raise or lower the desktop to the desired height. Refer to the height markings for guidance (e.g., 3 years old at 100cm, 7 years old at 118cm, 16 years old at 180cm for overall child height).
4. Ensure both sides are adjusted evenly.
5. Tighten the fasteners securely to lock the desk at the new height.

5.2. Adjusting Chair Height

The chair height can be adjusted from approximately 24.8 inches (63 cm) to 27.2 inches (69 cm). To

adjust:

1. Locate the adjustment mechanism on the chair's base or legs.
2. Loosen the fasteners.
3. Raise or lower the chair seat to the desired height.
4. Tighten the fasteners securely to lock the chair at the new height.

5.3. Promoting Proper Posture (Golden Distance Design)

The desk is designed with a "Golden Distance" concept to encourage an upright sitting posture and protect children's vision. When adjusting the desk and chair, ensure that the child's feet are flat on the floor or on the extended upright pedal, and their elbows form a right angle when resting on the desk. The desktop provides ample space for comfortable writing and reading.

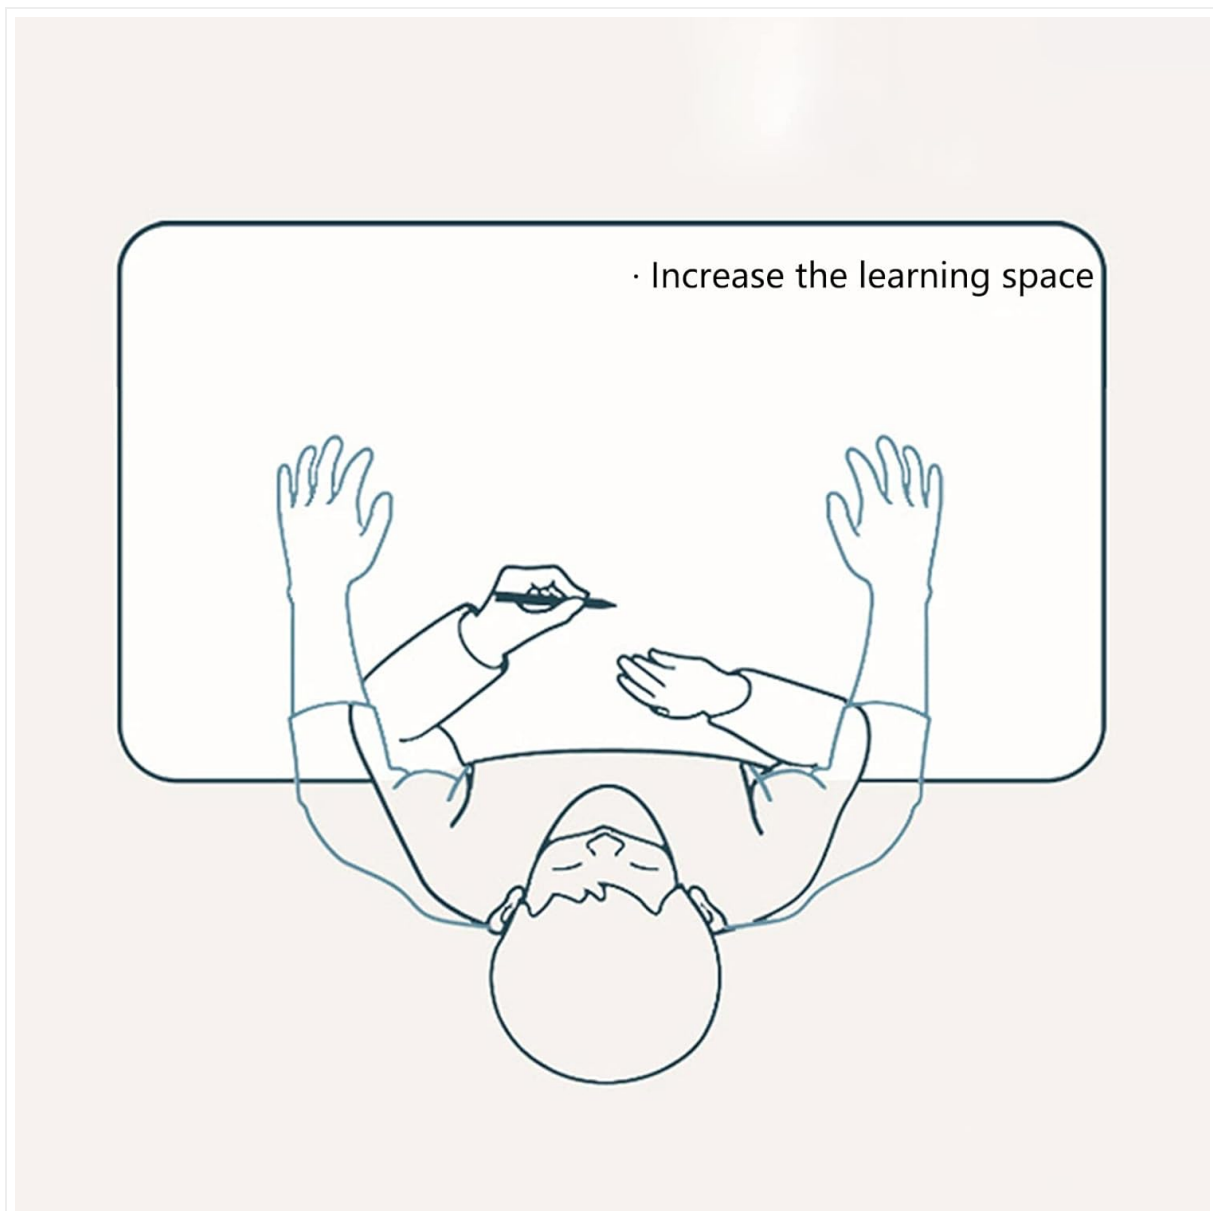 


Image 5.1: Overhead view illustrating the spacious desktop design, allowing for increased learning and working space for the child.



Image 5.2: Detail of the chair's extended upright pedal, designed to provide proper foot support and aid in maintaining correct sitting posture.

5.4. Using Storage Features

The desk includes a spacious pull-out drawer under the desktop for storing school supplies and a hutch with shelves for books and other items. Organize items neatly to maintain a tidy study area.

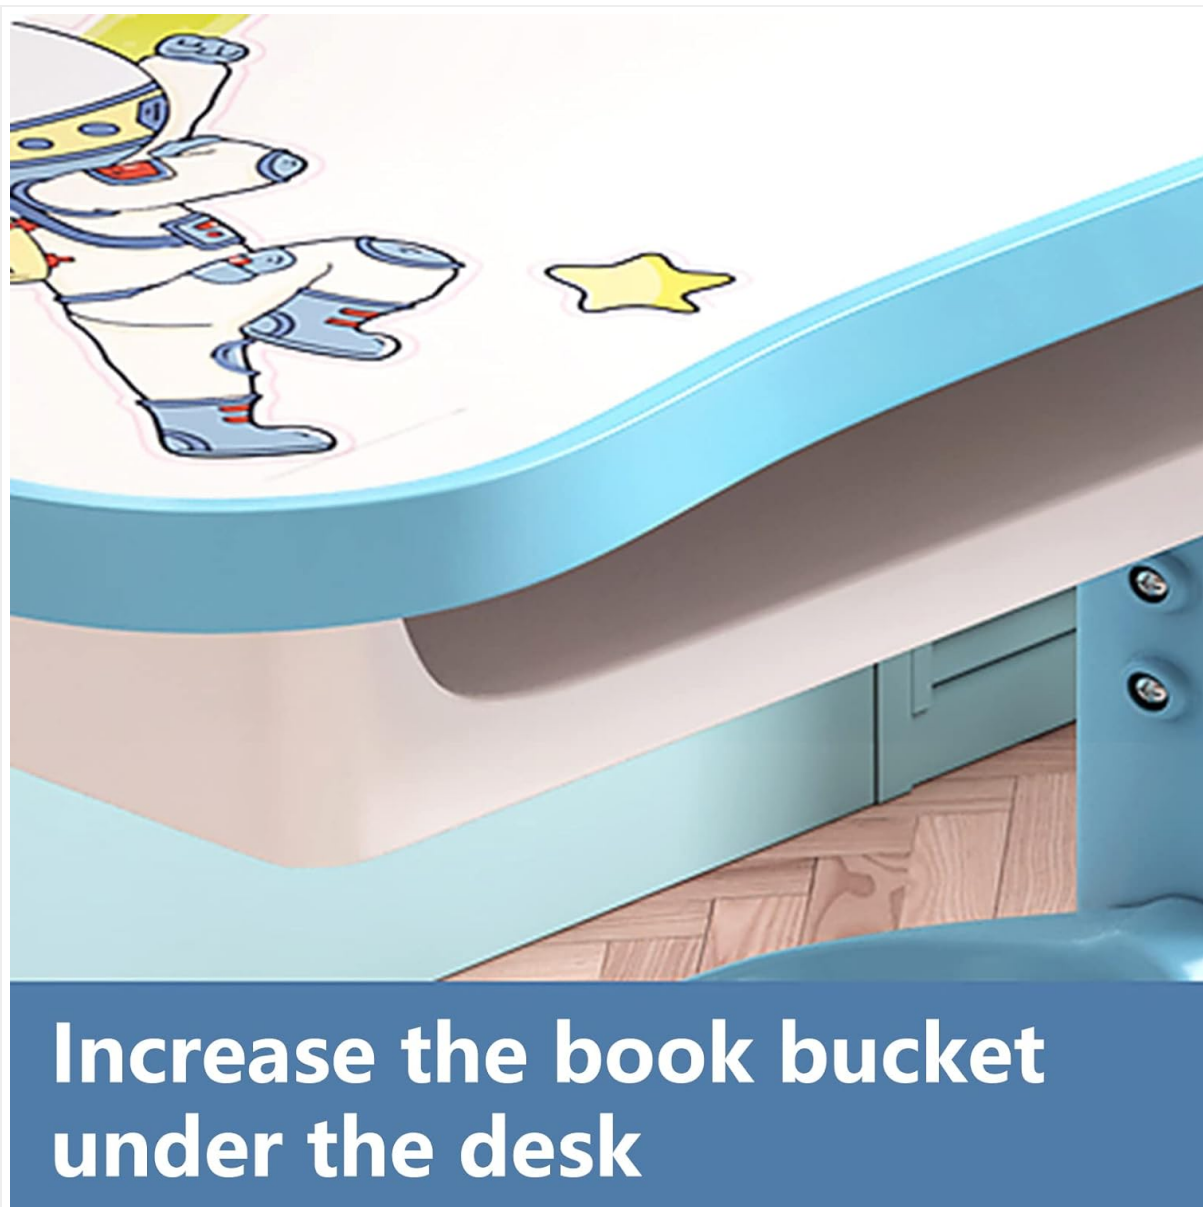


Image 5.3: View of the integrated storage solutions, including the pull-out drawer and hutch shelves, designed to maximize organization and accessibility of study materials.

6. MAINTENANCE

Regular maintenance will help prolong the life of your desk and chair set:

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals that may damage the finish.
- **Hardware Check:** Periodically check all screws and fasteners to ensure they remain tight. Retighten as necessary to maintain stability.
- **Avoid Excessive Weight:** Do not place excessively heavy items on the desk or shelves.
- **Protect from Direct Sunlight:** Prolonged exposure to direct sunlight may cause fading or material degradation.

7. TROUBLESHOOTING

If you encounter any issues with your desk and chair set, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Desk/Chair is wobbly	Loose fasteners; uneven floor.	Check and tighten all assembly screws. Ensure the set is on a flat, level surface.
Difficulty adjusting height	Fasteners not fully loosened; mechanism obstructed.	Ensure all adjustment fasteners are completely loosened. Check for any obstructions in the adjustment mechanism.
Drawer sticks or doesn't slide smoothly	Misalignment during assembly; debris in tracks.	Remove the drawer and check its alignment. Clean the drawer tracks of any dust or debris.

8. SPECIFICATIONS

Detailed specifications for the GIFZES Kids Desk and Chair Set:

- **Brand:** GIFZES
- **Model Number:** 3595561-yesbay
- **Color:** Blue
- **Materials:** Density Board, Metal Frames, PP (Polypropylene) Anti-slip Legs
- **Desk Dimensions (Approx.):** 41.34" H x 29.72" L x 19.09" W (105cm H x 75.5cm L x 48.5cm W)
- **Chair Dimensions (Approx.):** 27.19" H x 14.97" L x 12.61" W (69cm H x 38cm L x 32cm W)
- **Adjustable Desk Height Range:** 37.4" - 39.8" (95cm - 101cm)
- **Adjustable Chair Height Range:** 24.8" - 27.2" (63cm - 69cm)
- **Recommended Age:** 3-16 years old
- **Maximum Weight Capacity:** 150 kg (330 lbs)
- **Special Features:** Adjustable Height, Spacious Storage Drawer, Hutch with Shelves, Ergonomic Chair, Golden Distance Design, Extended Upright Pedal
- **Assembly Required:** Yes (All assembly tools included)



Image 8.1: Comprehensive dimensional diagram of the desk and chair set, providing exact measurements for all components.

9. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the purchase documentation or contact the retailer where the product was purchased. Keep your proof of purchase for any warranty claims. For further assistance, you may also visit the GIFZES brand website or contact their customer service directly. Details for contacting GIFZES can typically be found on the product packaging or their official online presence.