

[Manuals.plus](#) /

› [Upbooz](#) /

› Upbooz Handheld Vacuum Cleaner User Manual

Upbooz VC012

Upbooz Handheld Vacuum Cleaner User Manual

Model: VC012 | Brand: Upbooz

1. PRODUCT OVERVIEW

The Upbooz Handheld Vacuum Cleaner (Model VC012) is a versatile and powerful cordless device designed for efficient cleaning in various environments, including cars, homes, offices, and pet areas. It features a robust 14000PA suction power with two adjustable modes (ECO and MAX) to tackle different cleaning needs. This 2-in-1 unit also functions as an air duster, making it ideal for blowing away dust from crevices and inflating small items. Its ultra-lightweight and compact design ensures easy handling and storage, while the integrated LED light illuminates dark corners for thorough cleaning. The vacuum is equipped with washable and reusable filters for sustained performance and easy maintenance.



Figure 1: Upbooz Handheld Vacuum Cleaner and its components.

2. PACKAGE CONTENTS

Please check the package contents to ensure all items are present:

- 1 x Upbooz Handheld Vacuum Cleaner (Model VC012)
- 1 x Suction Nozzle with integrated brush
- 1 x Mouthpiece (for air duster function)
- 1 x USB-C Charging Cable
- 1 x Metal Filter (pre-installed)
- 2 x HEPA Filters (1 pre-installed, 1 spare)
- 1 x User Manual



Figure 2: Complete package contents of the Upbooz Handheld Vacuum Cleaner.

3. SETUP

- 1. Initial Charge:** Before first use, fully charge the vacuum cleaner. Connect the provided USB-C charging cable to the charging port on the vacuum and plug the other end into a compatible USB power adapter (not included). The LED display will show the battery level during charging. A full charge takes approximately 3.5-4 hours.
- 2. Filter Installation:** Ensure the metal filter and HEPA filter are correctly installed inside the dust collection cup. The vacuum comes with one set pre-installed and an additional HEPA filter.
- 3. Attaching Nozzles:** Select the appropriate nozzle for your cleaning task.
 - For vacuuming, attach the Suction Nozzle or the Suction Nozzle with integrated brush to the vacuum's intake port.

- For air dusting, attach the Mouthpiece or the Mouthpiece with integrated brush to the exhaust port (opposite end of the vacuum).



Figure 3: Charging the Upbooz Handheld Vacuum Cleaner.

Various Nozzles to Meet Your Needs & Air Duster 2 in 1



Suction Nozzle

Suitable for dust cleaning in various crevices such as seats, sofas, cabinet corners, drawers, etc.



Brush + Suction Nozzle

Ideal for removing dust from cushion surfaces, carpeted areas, air conditioning vents, and other surfaces.



Mouthpiece

Perfect for inflating small equipment like lifebuoys, balloons, and cleaning tiny dust particles in various crevices like car windows.



Brush + Mouthpiece

Suitable for wiping and cleaning tiny dust particles in various crevices such as windows, keyboards, etc.

Figure 4: Different nozzles for suction and air duster functions.

4. OPERATING INSTRUCTIONS

1. **Power On/Off:** Press and hold the power button for 3 seconds to turn the vacuum cleaner on or off. The LED display will activate upon powering on, showing the current battery level and selected mode.
2. **Adjusting Suction Modes:** Once powered on, briefly press the power button to switch between ECO mode (10000PA, approx. 30 minutes runtime) and MAX mode (14000PA, approx. 20 minutes runtime). Select the mode suitable for the cleaning intensity required.
3. **Using the LED Light:** Press the light button (located below the power button) to turn on the integrated LED light. This is useful for illuminating dark areas like under seats or in tight corners, ensuring no dust is missed.
4. **Vacuuming:** Use the selected suction nozzle to clean surfaces. The compact design allows for easy maneuverability in

tight spaces, such as car interiors, keyboards, and furniture crevices.

5. **Air Dusting:** Attach the appropriate mouthpiece to the exhaust port. Use the air duster function to blow away dust from delicate electronics, keyboards, or to assist with tasks like inflating balloons or starting fires.



Figure 5: Power button and LED display for mode and battery indication.

Your browser does not support the video tag.

Video 1: Demonstration of the Upbooz Handheld Vacuum Cleaner's features and usage in various scenarios.

5. MAINTENANCE

1. **Emptying the Dustbin:** The transparent dust collection cup allows you to see when it needs emptying. Press the one-click emptying button to effortlessly dispose of collected dust and debris into a trash bin.
2. **Cleaning Filters:** The metal and HEPA filters are washable and reusable.
 - To access the filters, rotate and unscrew the dust collection cup from the main body.
 - Remove the metal filter and then the HEPA filter.
 - Rinse both filters under running water until clean. Ensure they are completely dry before re-installing to maintain optimal suction power and prevent damage.
3. **Important Note:** The main body of the vacuum cleaner (fuselage) cannot be soaked in water. Only the dust collection cup and filters are washable.

WASHABLE AND REUSABLE FILTER

High filtration efficiency and easy installation.



Stainless Steel Filter

Filtering large dust particles.



HEPA Filter

Filtering tiny dust particles.



Figure 6: One-click dust removal mechanism.

Ultra-Lightweight Mini Low Noise Handheld Vacuum Cordless



Figure 7: Washing the reusable filters.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Low Suction Power	Dustbin is full; Filters are clogged; Nozzle is blocked.	Empty the dustbin; Clean or replace filters; Clear any blockages from the nozzle.
Vacuum Not Turning On	Battery is depleted; Power button not pressed correctly.	Charge the vacuum fully; Press and hold the power button for 3 seconds.
Short Runtime	Battery not fully charged; Operating in MAX mode continuously.	Ensure battery is fully charged; Use ECO mode for longer cleaning sessions.

Problem	Possible Cause	Solution
LED Light Not Working	Light button not pressed; Unit is off.	Press the light button; Ensure the vacuum is powered on.

7. SPECIFICATIONS

Feature	Detail
Brand	Upbooz
Model Name	VC012
Suction Power	ECO mode: 10000PA; MAX mode: 14000PA
Wattage	120 watts
Runtime	ECO mode: 30 minutes; MAX mode: 20 minutes
Charging Time	Approximately 3.5-4 hours
Battery Type	Lithium-Ion
Filter Type	HEPA Filter, Metal Filter
Noise Level	<75dB
Dustbin Capacity	0.15 Liters
Product Dimensions	4.33"L x 1.38"W x 0.98"H
Item Weight	1.48 pounds
Connectivity Technology	USB
Special Feature	HEPA Filtration, Cordless, 2-in-1 (Suction & Air Duster), LED Light
Recommended Uses	Car, Home, Kitchen, Pets, Office, Balloon Inflation, Outdoor Cushion Inflation, Swimming Ring Inflation
Form Factor	Handheld
Color	Black
Amperage	10 Amps
Manufacturer	DongGuan DeRuiChen Electronics Co., Ltd.
Controller Type	Push Button

Feature	Detail
Motor Horsepower	0.16 horsepower
Control Method	Touch
Number of Speeds	2
Portable	Yes
Number of Power Levels	2
Indoor/Outdoor Usage	Indoor

8. WARRANTY AND SUPPORT

The Upbooz Handheld Vacuum Cleaner is verified by Transparency, ensuring authenticity and quality. For any product-related inquiries, technical support, or warranty claims, please contact the manufacturer or seller directly through the platform where the product was purchased. Please refer to your purchase documentation for specific warranty terms and contact information.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

What does the E3 error message mean on the Upbooz VC012 Portable Car Vacuum?

The official manual for the Upbooz VC012 Handheld Vacuum Cleaner does not explicitly define an "E3" error code in its troubleshooting section. However, based on common diagnostic standards for similar cordless vacuum cleaners with...

[Read full answer](#)

What does the E3 error message mean on the Upbooz VC012 Handheld Vacuum Cleaner?

The provided manual for the Upbooz VC012 Handheld Vacuum Cleaner does not explicitly list an "E3" error code in its troubleshooting section. However, based on common industry standards for handheld vacuums with LED displays,...

[Read full answer](#)

What does the E3 error message mean on the Upbooz VC012 Handheld Vacuum Cleaner?

The provided manual for the Upbooz VC012 Handheld Vacuum Cleaner does not explicitly list an "E3" error code in its troubleshooting section. However, in many handheld vacuum cleaners with LED displays, an E3 error...

[Read full answer](#)