

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Enhulk](#) /

› [Enhulk 40V 13-Inch Cordless Snow Shovel Instruction Manual](#)

Enhulk B0CFTVF5SH

Enhulk 40V 13-Inch Cordless Snow Shovel Instruction Manual

Model: B0CFTVF5SH

1. INTRODUCTION

Thank you for choosing the Enhulk 40V 13-Inch Cordless Snow Shovel. This battery-powered snow shovel is designed to make your snow removal tasks easier and more efficient, especially for steps, patios, decks, walkways, driveways, and sidewalks. Please read this manual thoroughly before operation to ensure safe and effective use of your new tool.

What's Included:

- 1 x Enhulk Cordless Snow Shovel
- 2 x 20V 4.0Ah Batteries
- 1 x Dual Quick Charger
- 1 x User Manual

2. IMPORTANT SAFETY INSTRUCTIONS

Always follow basic safety precautions to reduce the risk of fire, electric shock, and personal injury.

- **Read All Instructions:** Familiarize yourself with the controls and proper use of the appliance.
- **Keep Area Clear:** Ensure the area to be cleared is free of objects that could be thrown by the auger.
- **Dress Appropriately:** Wear appropriate winter clothing, including non-slip footwear. Avoid loose clothing that could get caught in moving parts.
- **Maintain a Firm Grip:** Always hold the snow shovel firmly with both hands during operation.
- **Avoid Direct Contact:** Never place hands or feet near rotating parts.
- **Use in Daylight or Good Artificial Light:** Ensure adequate visibility.
- **Do Not Overreach:** Maintain proper footing and balance at all times.
- **Store Safely:** Keep the machine dry when storing.
- **Battery Temperature:** If the machine fails to start or work, check the battery temperature. Allow the battery to warm up indoors and try again.
- **Avoid Placing on Snow:** After use, avoid placing the snow shovel directly on the snow to prevent damage to the machine.

3. SETUP

3.1 Charging the Batteries

The Enhulk Cordless Snow Shovel operates on two 20V batteries, providing 40V of power. Ensure both batteries are fully charged before first use and subsequent operations.

1. Insert both 20V batteries into the dual quick charger.
2. Plug the charger into a standard electrical outlet.
3. The indicator lights on the charger will show the charging status. Once fully charged, the lights will change (refer to charger manual for specific indications).
4. Remove batteries from the charger once fully charged.



Image: Two 20V batteries and a dual charger, highlighting the 25-minute runtime.

3.2 Assembling the Snow Shovel

The Enhulk snow shovel features a detachable design for easy assembly and storage.

1. Connect the lower shaft (with the snow shovel head) to the upper shaft. Align the slots and push until it clicks into place.
2. Twist the knob to secure the connection firmly.



Image: Easy assembly of the snow shovel by connecting the shaft sections.

3.3 Attaching the Adjustable Front Handle

Attach the adjustable front handle for comfortable and ergonomic operation.

1. Slide the adjustable handle onto the upper shaft.
2. Position the handle to your preferred height and angle for comfortable use.
3. Secure the handle by tightening the screw/knob provided.

Adjustable Handle Save Your Back



Image: The adjustable handle of the snow shovel, designed for ergonomic use.

4. OPERATING INSTRUCTIONS

4.1 Starting the Unit

The Enhulk snow shovel features a 2-step quick start process for safety.

1. **Step 1:** Press the safety lock button located on the side of the handle with your thumb.
2. **Step 2:** While holding the safety lock, press and hold the main trigger switch on the handle to start the motor. Release the safety lock once the motor is running.



Image: The 2-step quick start mechanism for safe operation.

4.2 Clearing Snow

This cordless snow blower is powerful enough to clear paths up to 13 inches wide and 8 inches deep in a single pass. It is specifically designed for handling fluffy snow.

- Push the snow shovel forward at a steady pace, allowing the auger to clear the snow.
- Overlap each pass slightly to ensure complete snow removal.
- The unit can throw snow up to 26.5 feet, depending on snow conditions.

13.2IN CLEARING
WIDTH MAX

8 IN CLEARING
DEPTH MAX



Image: Snow shovel demonstrating its 13.2-inch clearing width and 8-inch clearing depth.

26.5FT THROW DISTANCE MAX



Image: Snow shovel in action, showing its maximum throw distance of 26.5 feet.

4.3 Adjusting Snow Direction

The snow deflector can be rotated +/- 30 degrees, making snow dispersal easily manageable.

- Locate the directional plate adjustment lever on the snow shovel head.
- Move the lever to adjust the angle of the deflector, directing the snow to the left, right, or straight ahead.

3 POSITION ADJUSTABLE PLATE



EQUIPPED WITH ROTATING CHUTE
AND ADJUSTABLE THROWING

Image: The 3-position adjustable plate for controlling snow throwing direction.

4.4 Ergonomics

The ergonomic handle is adjustable to accommodate your usage preferences, ensuring easy, comfortable, and efficient snow removal without straining your back.

4.5 Suitable Surfaces

The Enhulk snow shovel is suitable for various terrains, including wooden floors, cement floors, and gravel roads. It is not recommended for cobblestone surfaces.

NOT AFRAID OF BUMP SUITABLE FOR ALL TERRAINS



WOODEN FLOOR



CEMENT FLOOR



GRAVEL ROAD

(EXCEPT COBBLESTONE SURFACES)

Image: Illustration of suitable surfaces for the snow shovel, excluding cobblestone.

5. MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your snow shovel.

- **Cleaning:** After each use, clean the snow shovel head and auger thoroughly. Remove any snow, ice, or debris.
- **Drying:** Ensure the unit is completely dry before storing to prevent corrosion and damage.
- **Battery Storage:** Store batteries in a cool, dry place away from direct sunlight and extreme temperatures. Do not store batteries in the snow shovel for extended periods.
- **General Inspection:** Periodically check all nuts, bolts, and fasteners for tightness. Replace any worn or damaged parts.

6. TROUBLESHOOTING

If you encounter issues with your Enhulk Cordless Snow Shovel, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Unit does not start	Battery not charged or too cold	Ensure batteries are fully charged. Allow cold batteries to warm up indoors before use.
Reduced snow clearing performance	Heavy/wet snow, or excessive snow depth	This unit is designed for fluffy snow. For heavy/wet snow or depths exceeding 8 inches, take smaller passes or consider manual shoveling.
Unit stops during operation	Overload or battery depletion	Reduce load on the auger. Check battery charge level and replace with fully charged batteries if needed.

7. SPECIFICATIONS

Feature	Specification
Brand	Enhulk
Power Source	Battery Powered (2 x 20V)
Voltage	40 Volts
Item Weight	14.3 pounds (without batteries) / 44 pounds (shipping weight)
Clearing Width	13 Inches
Ideal Snow Depth	8 Inches
Throw Distance	Up to 26.5 feet
Run Time	Up to 25 minutes (with 2 x 20V 4.0Ah batteries)
Engine Type	Electric
Color	Blue

8. WARRANTY AND CUSTOMER SUPPORT

For any product inquiries, warranty information, or assistance, please do not hesitate to reach out to Enhulk customer support. We are here to assist you with any questions or concerns you may have regarding your cordless snow shovel.

Please refer to the contact information provided in your product packaging or visit the official Enhulk website for further details.