



Manuals.plus /

› Olelica /

› Olelica 5L Automatic Pet Feeder User Manual

## Olelica 5L Automatic Pet Feeder

# Olelica 5L Automatic Pet Feeder User Manual

Model: 5L Automatic Pet Feeder

## INTRODUCTION

---

This manual provides detailed instructions for the safe and efficient operation of your Olelica 5L Automatic Pet Feeder. Please read this manual thoroughly before use and retain it for future reference. This feeder is designed to provide scheduled meals for cats and small to medium-sized dogs, ensuring consistent feeding habits.

## SAFETY PRECAUTIONS

---

- Use only dry pet food with a diameter between 0.19 and 0.47 inches (5-12mm).
- Keep the feeder out of reach of children and pets when not in use or during assembly.
- Ensure the feeder is placed on a stable, level surface to prevent tipping.
- Do not immerse the main unit or power adapter in water or other liquids.
- Unplug the feeder from the power outlet before cleaning.
- Do not attempt to repair the unit yourself. Contact customer support for assistance.
- Always ensure the lid is securely locked to prevent pets from accessing the food hopper.

## PRODUCT OVERVIEW

---

Familiarize yourself with the components of your Olelica Automatic Pet Feeder.

### Components

- Food Hopper (Transparent container for dry food)
- Main Unit Base (Contains control panel, motor, and battery compartment)
- Stainless Steel Food Bowl
- Lid with Twist-Lock Mechanism
- Control Panel with LCD Display and Buttons

- Power Adapter



**Figure 1:** The Olelica 5L Automatic Pet Feeder, showcasing its transparent food hopper, control panel, and stainless steel food bowl.

# SETUP

---

## 1. Unpacking

Carefully remove all components from the packaging. Inspect for any damage. Retain packaging for future transport or storage.

## 2. Assembly

1. Place the main unit base on a flat, stable surface.
2. Attach the stainless steel food bowl to the designated slot at the front of the base.
3. Ensure the food hopper is clean and dry before placing it onto the main unit base.

## 3. Power Supply

The feeder supports dual power supply options: AC adapter and backup batteries.

- **AC Adapter:** Plug the power adapter into the feeder's power port and then into a standard wall outlet. This is the primary power source.
- **Battery Backup:** For power outages, install 3 D-size batteries (not included) into the battery compartment located at the bottom of the feeder. This ensures continuous operation.

# Dual Power Supply

Ensuring continuous operation even during power outages



Power Adapter



Battery



**Figure 2:** Illustration of the dual power supply system, featuring both AC adapter and battery options for uninterrupted operation.

## 4. Loading Pet Food

1. Open the lid of the food hopper by twisting it counter-clockwise.
2. Pour dry pet food into the hopper. Do not overfill. The capacity is 5 liters.
3. Securely close the lid by twisting it clockwise until it locks into place. This twist-lock design prevents pets from opening it.

# Twist-Lock Design

Prevents pets from opening and overeating



Security lock



Figure 3: The feeder's twist-lock design, engineered to prevent pets from accessing the food hopper and overeating.

## OPERATING INSTRUCTIONS

### 1. Control Panel Functions

The control panel features an LCD display and several buttons for programming:

- **SET Button:** Enters programming mode and confirms settings.
- **UP/DOWN Buttons:** Adjust values (time, meal times, portions).
- **REC Button:** Records or plays back voice messages.

- **MANUAL Button:** Dispenses one portion of food instantly.
- **LOCK Button:** Locks/unlocks the control panel to prevent accidental changes.

## 2. Setting Current Time

1. Press and hold the **SET** button until the hour digit flashes.
2. Use the **UP/DOWN** buttons to adjust the hour. Press **SET** to confirm.
3. Repeat for minutes.

## 3. Programming Feeding Schedule

You can program up to 6 meals per day, with 0 to 8 portions per meal.



**Figure 4:** The feeder's control panel and display, illustrating the programmable feeding schedule with options for 1-6 meals per day and 0-8 portions per meal.

1. Press the **SET** button repeatedly to cycle through Meal 1 to Meal 6 settings.
2. When a meal time flashes, use **UP/DOWN** to set the desired feeding time (hour and minute). Press **SET** to confirm each.
3. After setting the time, the portion number will flash. Use **UP/DOWN** to select the number of portions (1-8) for that meal. Press **SET** to confirm.
4. Repeat for all desired meals. To disable a meal, set its portion number to 0.

#### **4. Voice Recording Function**

Record a 10-second voice message to call your pet at meal times.

# Stay Connected with Your Pet

10s Voice Recording



**Figure 5:** The voice recording feature, allowing users to record a personalized 10-second message to call their pet at feeding times.

1. Press and hold the **REC** button. The microphone icon will appear on the display.
2. Speak your message clearly into the microphone for up to 10 seconds.
3. Release the **REC** button to save the message. The message will play automatically during each scheduled meal.
4. To play back the recorded message, briefly press the **REC** button.

## 5. Manual Feeding

To dispense one portion of food immediately, press the **MANUAL** button once. Each press dispenses one portion.

## 6. Control Panel Lock

To prevent accidental changes to settings, press and hold the **LOCK** button for 3 seconds to lock or unlock the control panel.

## MAINTENANCE

---

### 1. Cleaning the Feeder

Regular cleaning ensures hygiene and proper functioning. The food hopper and stainless steel bowl are detachable for easy cleaning.



**Figure 6:** The feeder's detachable components, including the food hopper and stainless steel bowl, designed for thorough cleaning to maintain food freshness.

1. Unplug the feeder from the power outlet and remove any batteries.
2. Remove the food hopper and stainless steel bowl.
3. Wash the food hopper and stainless steel bowl with mild soap and water. Rinse thoroughly.
4. Wipe the main unit base with a damp cloth. Do not immerse the base in water.
5. Ensure all parts are completely dry before reassembling and refilling with food.

## 2. Food Storage

Store dry pet food in a cool, dry place. Regularly check the food for freshness and replenish as needed.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Feeder does not power on.	No power, AC adapter unplugged, batteries depleted or incorrectly installed.	Check AC adapter connection. Replace D-size batteries if using battery power. Ensure batteries are inserted with correct polarity.
Food not dispensing.	Food hopper empty, food jammed, dispenser blocked, incorrect programming.	Refill food hopper. Check for food blockages in the dispenser mechanism. Ensure food size is appropriate. Verify meal programming.
Voice recording not playing.	No message recorded, low battery.	Record a new message. Check power supply.
Settings change unexpectedly.	Control panel unlocked, accidental button press.	Lock the control panel by pressing and holding the LOCK button for 3 seconds.

## SPECIFICATIONS

- **Model:** 5L Automatic Pet Feeder
- **Capacity:** 5 Liters (approx. 17 cups)
- **Material:** BPA-free plastic, Stainless Steel food bowl
- **Meals Per Day:** 1-6 programmable meals
- **Portions Per Meal:** 0-8 portions (approx. 10g per portion, varies by food density)
- **Food Size:** Dry food, 0.19 - 0.47 inches (5-12mm) diameter
- **Power Supply:** DC 5V/1A adapter (included), 3 x D-size batteries (not included)
- **Product Dimensions:** 7 x 6 x 5 inches (approximate base dimensions)
- **Item Weight:** 3.39 pounds
- **Special Features:** 10-second Voice Recording, Programmable Feeding Schedule, Dual Power Supply, Twist-Lock Lid

## WARRANTY AND SUPPORT

---

For warranty information, technical support, or any inquiries regarding your Olelica 5L Automatic Pet Feeder, please refer to the contact details provided on the product packaging or contact Olelica customer service directly. Please have your product model and purchase information ready when contacting support.