

STOPWOOFER ERQWE12212

STOPWOOFER Dog Bark Collar (Model ERQWE12212) Instruction Manual

Brand: STOPWOOFER | Model: ERQWE12212

INTRODUCTION

Thank you for choosing the STOPWOOFER Dog Bark Collar. This device is designed to assist in training your dog to reduce excessive barking using humane, no-shock methods. It features adjustable vibration and beep modes, a rechargeable battery, and a waterproof design for versatile use. Please read this manual thoroughly before operating the device to ensure proper usage and your pet's safety and comfort.

PRODUCT FEATURES

- **No Shock Design:** Utilizes vibration and beep only for humane bark correction.
- **Multiple Training Modes:** Offers sound, vibration, and sound + vibration combinations.
- **Adjustable Sensitivity:** 3 levels of sensitivity to detect barking, from quiet to loud environments.
- **Adjustable Intensity:** 5 levels of vibration intensity.
- **Rechargeable Battery:** Long-lasting battery, fully charged in 2 hours, provides up to 14 days of use.
- **Waterproof (IP67):** Designed to withstand water exposure, suitable for outdoor use.
- **Smart Anti-Mistrigger Chip:** Advanced AI chip prevents false activations from external noises.
- **LED Display:** Clear screen for easy mode and sensitivity adjustments.
- **Suitable for Various Dog Sizes:** Adjustable strap fits dogs from 7-120 lbs.

PACKAGE CONTENTS

- STOPWOOFER Dog Bark Collar Device
- Adjustable Nylon Strap
- Magnetic Charging Cable
- Long and Short Contact Points (Metal)
- Silicone Caps for Contact Points
- Test Lamp
- User Manual

SETUP

1. **Charge the Device:** Connect the magnetic charging cable to the collar and a USB power source. The battery icon on

the LED screen will indicate charging status. A full charge takes approximately 2 hours.

2. **Attach Contact Points:** Select the appropriate length of metal contact points based on your dog's fur thickness. For dogs with shorter fur, use the shorter points; for longer fur, use the longer points. Screw them securely into the back of the device. Optionally, place the silicone caps over the contact points for added comfort.
3. **Adjust the Collar Strap:** Thread the nylon strap through the device. Adjust the strap to fit snugly around your dog's neck, ensuring two fingers can fit comfortably between the collar and your dog's neck. The device should be positioned centrally on your dog's throat.

A promotional graphic for the STOP WOOFER Dog Bark Collar. The background is dark blue. On the right, a close-up of a brown dog's face with its mouth open, showing its tongue. The dog is wearing the collar, which has a blue rectangular unit with 'STOP WOOFER' in white text. On the left, white and light blue text reads '3 SAFE TRAINING MODES' and 'Stop unwanted barking in a safe and humane way'. Below this, a light blue lightning bolt icon is crossed out with a white 'X', with the text 'NO SHOCK:' to its left. At the bottom left, three training modes are listed with corresponding icons: a speaker icon for 'SOUND', a square with wavy lines for 'VIBRATION', and a speaker with wavy lines for 'SOUND + VIBRATION'.

Image: The STOPWOOFER Dog Bark Collar showing its adjustable strap and quick-release buckle. The main unit is blue with a black LED screen.

OPERATION CONTROLS

The collar features an LED screen and two buttons: a Power/Sensitivity button (right) and a Mode/Lock button (left).

Power & Sensitivity Button (Right Button)

- **Turn On/Off:** Press and hold the Power button for 2 seconds. The device will beep and the LED screen will light up.
- **Adjust Sensitivity:** Briefly press the Power button to cycle through sensitivity levels 0-3. Level 0 is for testing (blow into the sensor hole). Levels 1-3 increase sensitivity, making it easier to trigger the device.

Mode & Lock Button (Left Button)

- **Lock/Unlock Device:** Press and hold the Mode button for 2 seconds to lock or unlock the device. A lock icon will

appear/disappear on the screen.

- **Change Mode Setting:** Briefly press the Mode button to cycle through the available correction modes. The intensity of vibration or shock (if enabled) will gradually increase with each consecutive activation.

Correction Modes

The collar offers various combinations of sound, vibration, and shock (though this model is advertised as "No Shock", the interface might show a shock option which should be disabled for this product). Always start with the lowest effective setting.

- **Mode 1 (Sound + Vibration + Shock):** Activates all three correction types. (Note: For "No Shock" models, ensure shock is disabled or not selected).
- **Mode 2 (Vibration + Beep):** Activates vibration and sound.
- **Mode 3 (Shock + Beep):** Activates shock and sound. (Note: For "No Shock" models, ensure shock is disabled or not selected).
- **Mode 4 (Shock + Vibration):** Activates shock and vibration. (Note: For "No Shock" models, ensure shock is disabled or not selected).
- **Mode 5 (Vibration Only):** Activates vibration only.
- **Mode 6 (Beep Only):** Activates sound only.

For this "No Shock" model, it is recommended to use modes that only include vibration and/or beep.



Image: Close-up of the STOPWOOFER Dog Bark Collar's LED display, illustrating the various mode and sensitivity settings.

PROTECTION MODE

To prevent over-correction, the device will enter a protection mode if it activates 5 consecutive times. During this mode, the device will display a flashing "P" and will not activate for 30 seconds. After 30 seconds, it will return to its initial state. This ensures your dog is not subjected to continuous corrections.

WEARING THE COLLAR

Proper fit is crucial for the collar's effectiveness and your dog's comfort. Ensure the contact points touch your dog's skin. If your dog has long fur, you may need to trim the fur slightly around the contact points or use the longer contact points provided.

- Position the device centrally on your dog's throat.
- Adjust the strap so it is snug but not too tight. You should be able to fit two fingers between the collar and your dog's neck.
- Do not leave the collar on your dog for more than 12 hours a day to prevent skin irritation.



Image: A dog wearing the STOPWOOFER Bark Collar, demonstrating the correct placement and fit around the neck.

CHARGING INSTRUCTIONS

The STOPWOOFER Dog Bark Collar features a magnetic charging port for convenience.

1. Locate the magnetic charging port on the back of the device.
2. Connect the provided magnetic charging cable to the port. Ensure a secure connection.
3. Plug the USB end of the cable into a compatible USB power adapter (not included) or a computer USB port.
4. The battery icon on the LED screen will indicate the charging status.
5. A full charge typically takes 2 hours and provides up to 14 days of battery life, depending on usage.



Image: The STOPWOOFER Dog Bark Collar connected to its magnetic charging cable, illustrating the charging process.

MAINTENANCE

- **Cleaning:** Regularly clean the device and contact points with a damp cloth. Ensure the device is dry before charging or re-attaching to your dog.
- **Strap Care:** Inspect the nylon strap for wear and tear. Replace if damaged.
- **Storage:** Store the collar in a cool, dry place when not in use.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Collar not activating	Low battery; Sensitivity too low; Improper fit; Protection mode active.	Charge the collar; Increase sensitivity level; Adjust collar fit; Wait 30 seconds for protection mode to reset.

Problem	Possible Cause	Solution
False activations	Sensitivity too high; External noises (though AI chip minimizes this).	Decrease sensitivity level.
No response from dog	Intensity too low; Dog's fur blocking contact points.	Increase vibration intensity; Ensure contact points touch skin (trim fur if necessary).
Collar not charging	Loose connection; Faulty cable/adapter.	Ensure magnetic cable is securely connected; Try a different USB adapter or cable.

SPECIFICATIONS

- **Model Number:** ERQWE12212
- **Waterproof Level:** IP67
- **Battery Capacity:** 300mAh
- **Charging Time:** Approximately 2 hours
- **Battery Life:** Up to 14 days (depending on usage)
- **Adjustable Sensitivity:** Levels 0-3
- **Vibration Levels:** 5 levels
- **Collar Dimensions:** 25"L x 0.39"W (strap)
- **Device Weight:** 3.52 ounces
- **Recommended Dog Weight:** 7-120 lbs

WARRANTY & SUPPORT

The STOPWOOFER Dog Bark Collar comes with a **1-Year Warranty** against manufacturing defects. For any questions, troubleshooting assistance, or warranty claims, please contact STOPWOOFER customer support through the retailer's platform or the official brand website.

For additional resources and tips on dog training, visit reputable animal behavior websites or consult with a professional dog trainer.