

## Replacement Remote Control for Emerson Quiet Kool A/C

# User Manual: Replacement Remote Control

For Emerson Quiet Kool Portable A/C Air Conditioners

## 1. INTRODUCTION

---

This manual provides essential information for the proper setup, operation, and maintenance of your Generic replacement remote control for Emerson Quiet Kool portable air conditioner units. This remote is designed to be compatible with various models, including EACH18R2W, 17S-EACH18R2W, 17S-EAC12R2W, 19S-EACH12R2W, EAC12R2W, 21S-EACH18R2W, EACH12R2W, EACH24R2W, and 19S-EACH24R2W.

Please read this manual thoroughly before using the remote control to ensure correct functionality and to avoid potential issues. Note that as a replacement unit, some advanced functions present on the original remote may not be supported.

## 2. SETUP

---

### 2.1 Battery Installation

The remote control requires two (2) AAA batteries for operation. Batteries are not included with the remote control and must be purchased separately.

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) ends align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.



*Image: Rear view of the remote control with the battery cover detached, revealing the two AAA battery slots.*

## **2.2 Initial Use**

This is an infrared (IR) replacement remote control. No complex pairing or programming is typically required. Once batteries are installed, point the remote directly at the infrared receiver on your Emerson Quiet Kool portable A/C unit and press the desired function button.

## **3. OPERATING THE REMOTE CONTROL**

---

The remote control features various buttons for controlling your air conditioner. Below is a general overview of common button functions. Please note that specific functionality may vary depending on your A/C model and as this is a replacement remote, not all original functions may be available.



*Image: Front view of the replacement remote control, displaying its LCD screen and various control buttons.*

- **ON/OFF:** Powers the air conditioner on or off.
- **MODE:** Cycles through operating modes (e.g., Cool, Fan, Dry, Heat - if supported by A/C).
- **FAN:** Adjusts fan speed.
- **▲ / ▼ (Up/Down Arrows):** Adjusts temperature settings or navigates menu options.
- **SWING:** Controls the louver swing function.
- **SLEEP:** Activates or deactivates sleep mode for quiet operation and energy saving.
- **SUPER:** Activates a powerful cooling/heating mode for rapid temperature change.
- **SMART:** Engages an intelligent operating mode.
- **IFEEL:** Activates the 'I Feel' function, which senses temperature at the remote's location.
- **DIMMER:** Adjusts the brightness of the A/C unit's display.
- **TIMER ON/OFF:** Sets a timer for the unit to turn on or off automatically.
- **CLOCK:** Sets the current time on the remote's display.

**Important Note:** *This is a replacement remote. It may not replicate all functions of your original remote control. Refer to your air conditioner's original manual for detailed information on specific features.*

## 4. MAINTENANCE

### 4.1 Battery Replacement

Replace batteries when the remote's display becomes dim or the remote no longer controls the A/C unit effectively. Always replace both batteries at the same time with new AAA batteries. Do not mix old and new batteries, or different types of batteries.

### 4.2 Cleaning

To clean the remote control, gently wipe its surface with a soft, dry cloth. Do not use liquid cleaners, abrasive materials, or chemical solvents, as these can damage the remote's surface or internal components.

### 4.3 Storage

If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage to the remote.

## 5. TROUBLESHOOTING

Problem	Possible Cause / Solution
Remote not responding to A/C unit.	<ul style="list-style-type: none"><li>○ Batteries are dead or inserted incorrectly. Replace batteries and check polarity.</li><li>○ Obstruction between remote and A/C unit's IR receiver. Ensure clear line of sight.</li><li>○ Remote is too far from the A/C unit. Move closer.</li><li>○ A/C unit's IR receiver is faulty. Consult A/C unit's manual.</li></ul>
Some functions do not work.	<ul style="list-style-type: none"><li>○ This is a replacement remote. It may not support all advanced or specific functions of your original A/C remote.</li><li>○ Ensure your A/C model is listed as compatible. If your model number is not included in the product title, this remote may not be fully compatible.</li></ul>
Remote display is dim or blank.	<ul style="list-style-type: none"><li>○ Batteries are low. Replace with new AAA batteries.</li></ul>

## 6. SPECIFICATIONS

- **Model:** Replacement Remote Control for Emerson Quiet Kool A/C
- **Brand:** Generic
- **Connectivity Technology:** Infrared (IR)
- **Controller Type:** Button Control
- **Max Number of Supported Devices:** 1 (one A/C unit)
- **Batteries Required:** 2 x AAA (not included)
- **Special Feature:** Replacement may not work with all functions as original.

## 7. RETURNS AND SUPPORT

For any issues or questions regarding this replacement remote control, please refer to the return policy of your purchase platform. Typically, a 30-day return/replacement policy is offered for this product. As this is a Generic brand replacement part, direct manufacturer support may not be available. For specific operational details of your Emerson Quiet Kool A/C unit, please consult the original user manual provided with your air conditioner.