



[Manuals.plus](#) /

> [Maxim](#) /

> Maxim Lighting Knox Collection 21634CLBK 18-Inch Three-Light Semi-Flush Mount Ceiling Fixture Instruction Manual

Maxim 21634CLBK

Maxim Lighting Knox Collection 21634CLBK 18-Inch Three-Light Semi-Flush Mount Ceiling Fixture Instruction Manual

Model: 21634CLBK

1. SAFETY INFORMATION

Please read and understand all instructions before beginning installation. Failure to do so may result in electric shock, fire, or other injuries that could be fatal or cause property damage.

- **WARNING:** Risk of Electric Shock. Disconnect power at the main fuse or circuit breaker before installation or servicing.
- All electrical connections must be in accordance with local codes, ordinances, or the National Electric Code (NEC). Contact a qualified electrician if you are unfamiliar with proper electrical wiring connections.
- This fixture is rated for DAMP locations. Do not install in areas where it will be directly exposed to water.
- **Proposition 65 Warning:** This product may contain chemicals known to the State of California to cause cancer, birth defects, or other reproductive harm. Wash hands after handling.
- Use only the specified bulb type and wattage. Exceeding the maximum wattage may cause overheating.

2. WHAT'S IN THE BOX

Carefully unpack the fixture and check that all parts are included. Retain the packaging material until you are sure the item is complete and undamaged.

- Fixture Body (Black Finish, Alloy Steel)
- Glass Shades (Clear)
- Mounting Hardware (Crossbar, Mounting Screws, Wire Nuts)
- Instruction Manual



Image: The Maxim Lighting Knox Collection 21634CLBK semi-flush mount ceiling fixture in black finish with clear glass shades.

3. SPECIFICATIONS

Brand	Maxim
Model Number	21634CLBK
Dimensions (L x W x H)	18" x 18" x 7.5"
Material	Alloy Steel, Glass
Finish	Black
Shade Material	Glass (Clear)
Light Source	3 x E26 Medium Base Bulbs (60 Watt Max per bulb)
Voltage	120 Volts
Dimmable	Yes (with compatible dimmer switch and dimmable bulbs)
Mounting Type	Semi-Flush Mount
Indoor/Outdoor Usage	Indoor (Damp Location Approved)
Item Weight	3.3 Pounds

4. SETUP AND INSTALLATION

Professional installation is recommended. Ensure power is disconnected at the circuit breaker before proceeding.

Installation Steps:

1. **Prepare for Installation:** Turn off electricity at the main fuse box or circuit breaker. Clear the work area.
2. **Mount the Crossbar:** Attach the mounting crossbar to the junction box in the ceiling using the provided screws. Ensure it is securely fastened.
3. **Wire the Fixture:** Connect the fixture's wires to the corresponding house wires (black to black, white to white, ground to ground) using wire nuts. Ensure all connections are secure.
4. **Attach the Fixture Body:** Carefully lift the fixture body and align it with the mounting screws on the crossbar. Secure the fixture to the crossbar using the provided nuts or decorative caps.
5. **Install Glass Shades:** Carefully attach the clear glass shades to the fixture arms. Ensure they are seated properly and secured according to the specific design.
6. **Install Bulbs:** Screw three E26 medium base bulbs (not included, 60W max each) into the sockets.
7. **Restore Power:** Once installation is complete, turn the electricity back on at the main fuse box or circuit breaker.



Image: View of the Maxim Lighting Knox Collection 21634CLBK fixture installed on a ceiling, showing the three E26 bulb sockets and clear glass shades.

5. OPERATING INSTRUCTIONS

This semi-flush mount ceiling fixture operates like a standard light fixture. Once properly installed and

powered, it can be controlled via a wall switch.

- **Turning On/Off:** Use the wall switch connected to the fixture to turn the lights on or off.
- **Dimming Functionality:** If dimmable E26 bulbs are installed and the fixture is connected to a compatible dimmer switch, you can adjust the light intensity using the dimmer control.

6. MAINTENANCE

Regular maintenance will help preserve the appearance and functionality of your fixture.

Cleaning:

- Always disconnect power before cleaning.
- For the metal finish, wipe with a soft, dry cloth. Do not use abrasive cleaners or polishes as they may damage the finish.
- For the glass shades, remove them carefully and wash with mild soap and water. Rinse thoroughly and dry completely before reattaching.

Bulb Replacement:

- Ensure power is off at the circuit breaker.
- Allow bulbs to cool completely before touching.
- Unscrew the old bulb counter-clockwise and screw in a new E26 medium base bulb (60W max).
- Do not overtighten bulbs.

7. TROUBLESHOOTING

If your fixture is not functioning correctly, refer to the following common issues and solutions:

Problem	Possible Cause	Solution
Light does not turn on	No power to the fixture	Check circuit breaker or fuse. Ensure wall switch is on.
Light bulb is faulty	Bulb needs replacement	Replace bulb with a new E26 medium base bulb (60W max).
Loose wire connections	Wiring not secure	Turn off power, check and secure all wire connections.
Flickering light	Incorrect bulb type or loose connection	Ensure bulbs are fully screwed in. If using LED, ensure they are dimmable and compatible with your dimmer switch.

If the issue persists after trying these solutions, consult a qualified electrician.

8. WARRANTY AND SUPPORT

This Maxim Lighting fixture comes with a **1-year manufacturer's limited warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal use.

The warranty does not cover damage caused by improper installation, misuse, abuse, accidents, or unauthorized repairs. For warranty claims or technical support, please contact Maxim Lighting customer

service directly or refer to their official website for contact information.

Please retain your proof of purchase for warranty purposes.