

## Nisanmoon B0CFVYJFXR

# Nisanmoon WiFi Hidden Camera Power Bank 10000mAh User Manual

Model: B0CFVYJFXR

## 1. INTRODUCTION

This manual provides detailed instructions for the Nisanmoon WiFi Hidden Camera Power Bank. This device combines a high-capacity 10000mAh power bank with a discreet 1080P HD camera, offering features such as WiFi connectivity, night vision, and motion detection for various monitoring needs.

Please read this manual thoroughly before operating the device to ensure proper usage and to maximize its functionality.

## 2. SAFETY INFORMATION

- Do not expose the device to extreme temperatures, direct sunlight, or high humidity.
- Avoid dropping or subjecting the device to strong impacts.
- Keep the device away from water and other liquids.
- Do not attempt to disassemble or modify the device. This will void the warranty and may cause damage.
- Use only the provided charging cable or a certified 5V charger.
- Ensure proper ventilation when charging or operating the device.

## 3. PACKAGE CONTENTS

- Nisanmoon WiFi Hidden Camera Power Bank
- USB Charging Cable
- Reset Pin (similar to a SIM ejector tool)
- Lens Cover Stickers (for discreet use)
- User Manual



Image: The power bank camera, showing its dimensions (13.5cm x 7.2cm x 2.5cm), and accessories including a USB cable, reset pin, and lens cover stickers.

## 4. PRODUCT OVERVIEW

The Nisanmoon WiFi Hidden Camera Power Bank is designed for discreet surveillance while functioning as a portable charger. Key components include:

- **Camera Lens:** Discreetly integrated on the side.
- **USB Output Ports:** For charging external devices.
- **Micro USB Input Port:** For charging the power bank itself.
- **Power Button:** To turn the device on/off and activate power bank function.
- **Indicator Lights:** Provide status information (e.g., charging, recording, WiFi status).
- **Micro SD Card Slot:** Supports up to 256GB for local storage (card not included).
- **Reset Hole:** For factory reset using the provided pin.



Image: The Nisanmoon power bank camera, illustrating the hidden camera lens and a smartphone displaying a live video feed from the camera.

## 5. SETUP GUIDE

### 5.1 Charging the Device

Before first use, fully charge the power bank camera using the provided USB cable and a 5V power adapter. The indicator lights will show charging status and turn solid when fully charged.

### 5.2 Inserting a Micro SD Card

To enable local video recording, insert a Micro SD card (Class 10 or higher, up to 256GB, not included) into the designated slot. Ensure the card is inserted correctly until it clicks into place.

### 5.3 App Installation

1. Scan the QR code in the manual or search for "Tuyasmart" in your smartphone's app store (iOS/Android).
2. Download and install the Tuyasmart app.
3. Register a new account or log in if you already have one.

### 5.4 Connecting to WiFi

1. Power on the camera by pressing and holding the power button.
2. Open the Tuyasmart app and tap "Add Device" or the "+" icon.
3. Follow the in-app instructions to connect the camera to your home WiFi network. The camera supports both 2.4GHz and 5GHz WiFi bands.
4. Ensure the camera is close to your router during the initial setup.

## 6. OPERATING INSTRUCTIONS

### 6.1 Live Viewing

Once connected to WiFi, open the Tuyasmart app and select your camera from the device list to view the live 1080P HD video feed from anywhere.

## Banque D'énergie 10000mAh Caméra WiFi



## Visionner des Vidéos en Direct sur Votre Téléphone Portable



Image: A visual representation of the power bank camera streaming live HD 1080P video to a smartphone, with a family scene in the background.

### 6.2 Motion Detection and Alerts

The camera features intelligent motion detection. When movement is detected, the camera will:

- Automatically start recording.
- Send an alert notification to your smartphone via the Tuyasmart app.

You can adjust the motion detection sensitivity in the app settings.

## Détection de Mouvement

*Un message d'alerte est envoyé sur votre téléphone lorsque l'appareil détecte des objets en mouvement*

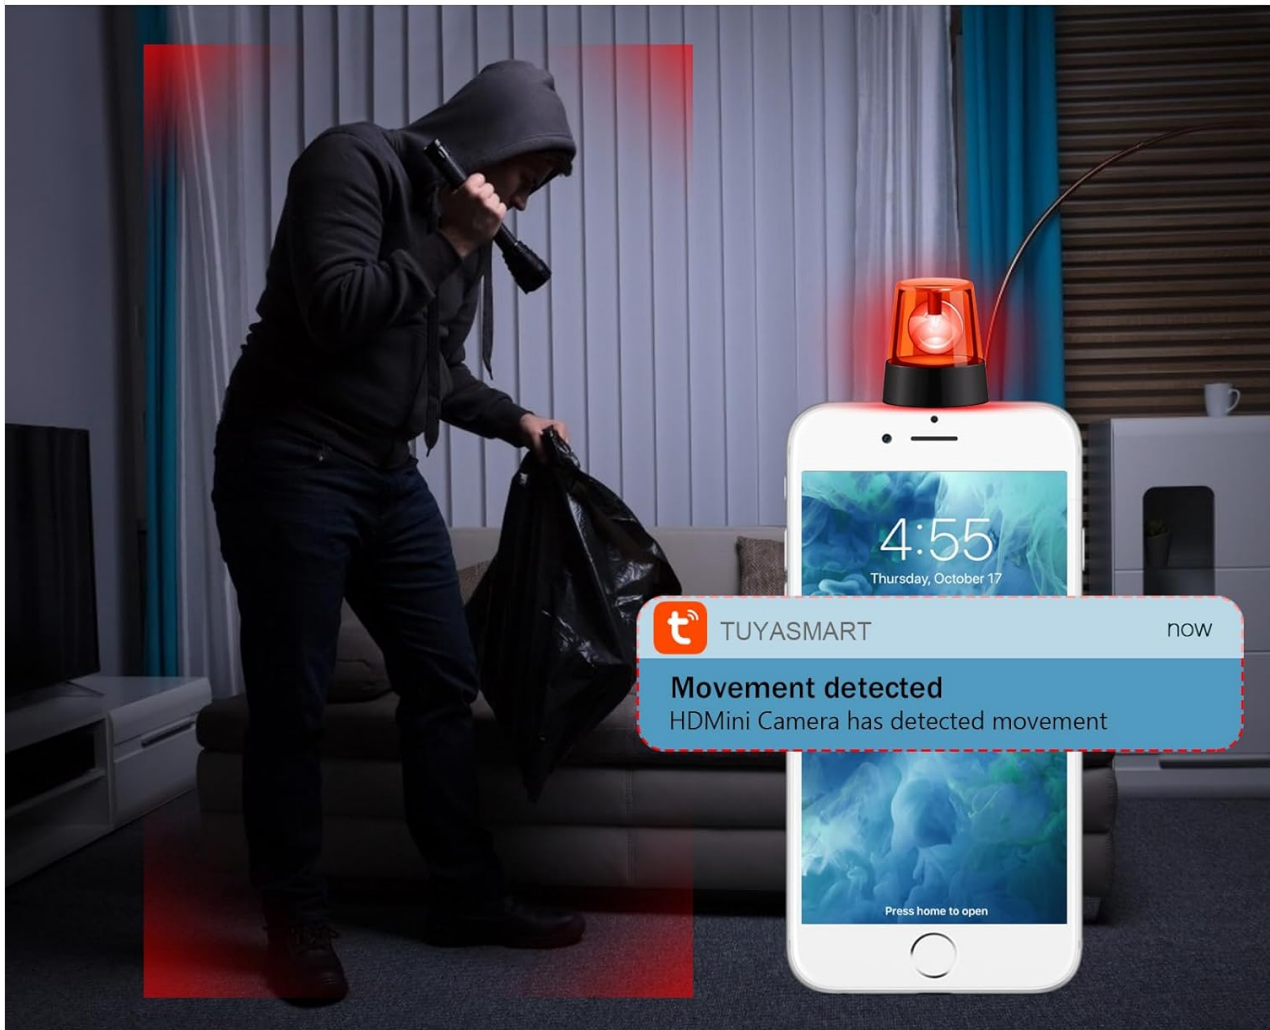


Image: A smartphone screen showing a "Movement detected" notification from the Tuyasmart app, overlaid on an image of a person in a room, indicating the motion detection feature.

### 6.3 Night Vision

The camera is equipped with 4 invisible infrared LED lights for night vision, allowing clear recording up to 3 meters in low-light conditions. Night vision can be set to automatic or manual mode through the app.

# Vision Nocturne




Image: A split image demonstrating the camera's night vision capability, showing a room in daylight on one side and the same room in darkness with infrared illumination on the other.

## 6.4 Recording and Storage

The camera supports two primary storage methods:

- **Micro SD Card:** Records video directly to an inserted Micro SD card. The device supports loop recording, automatically overwriting the oldest files when the card is full.
- **Cloud Storage:** An optional paid cloud storage service is available via the TuyaSmart app for storing recorded videos for up to 30 days.

# Enregistrement en Boucle, Prise en Charge de 2 Types de Stockage

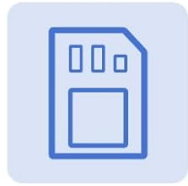

Carte micro sd max jusqu'à **256gb** (non inclus) **30** jours de stockage dans le nuage payants



Image: Icons representing Micro SD card storage (up to 256GB) and cloud storage, accompanied by a film strip illustrating continuous recording and various captured moments.

## 6.5 Power Bank Functionality

The device can be used as a standard 10000mAh power bank to charge other electronic devices. Simply connect your device to one of the USB output ports using a compatible charging cable.

## 7. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the device. Do not use liquid cleaners.
- **Battery Care:** To prolong battery life, avoid fully discharging the power bank frequently. Charge it regularly, even if not in use for extended periods.
- **SD Card Management:** Regularly back up important recordings from the Micro SD card. Format the SD card periodically through the app to maintain optimal performance.
- **Firmware Updates:** Check the Tuyasmart app periodically for any available firmware updates for the camera. Follow in-app instructions for updates.

## 8. TROUBLESHOOTING

- **Device not powering on:** Ensure the device is fully charged.
- **Cannot connect to WiFi:**
  - Ensure your WiFi network is 2.4GHz or 5GHz compatible.
  - Verify the WiFi password is correct.
  - Move the camera closer to the router during setup.
  - Try resetting the camera using the reset pin.
- **No recording or footage missing:**
  - Check if a Micro SD card is inserted and properly formatted.
  - Ensure the SD card is not full.
  - Verify recording settings in the Tuyasmart app.
  - Check your cloud storage subscription status if using cloud recording.
- **Motion detection not working:**
  - Adjust motion detection sensitivity in the app.
  - Ensure the camera has a clear view of the area.
- **Short battery life:**
  - Continuous recording and frequent WiFi access consume more power.
  - Ensure the device is fully charged before use.

## 9. SPECIFICATIONS

<b>Brand</b>	Nisanmoon
<b>Model</b>	B0CFVYJFXR
<b>Material</b>	Plastic
<b>Battery Capacity</b>	10000mAh Lithium-ion
<b>Input Voltage</b>	5 Volts
<b>Video Resolution</b>	1080p HD
<b>Connectivity Technology</b>	Wireless (Wi-Fi 2.4/5Ghz)
<b>Special Features</b>	Motion Detector, HD Resolution, Night Vision
<b>Compatible Devices</b>	Smartphone
<b>Storage Support</b>	Micro SD Card (up to 256GB, not included), Cloud Storage
<b>Product Dimensions</b>	16 x 10.2 x 3.9 cm; 340 grams (Package Dimensions)

## 10. WARRANTY AND SUPPORT

---

For warranty information or technical support, please refer to the product packaging or contact Nisanmoon customer service directly. Contact details are typically available on the manufacturer's official website or through your purchase platform.