

Je Joue Vesta (88587)

Je Joue Vesta Vibrating Butt Plug User Manual

Model: Vesta (88587)

1. INTRODUCTION

Product Overview

The Je Joue Vesta is a premium vibrating butt plug designed for a fulfilling experience. Crafted from soft, body-safe silicone, it features a weighted feel, smooth surface, and tapered tip for comfortable insertion. This device is compatible with various lubricants and is designed for both solo and partner use.

Equipped with Je Joue's signature low-frequency motor, the Vesta delivers deep, rumble vibrations. It offers five distinct speeds and seven unique patterns, providing a wide range of sensations from gentle hums to intense pulses. The device is whisper-quiet, waterproof, and travel-ready, making it suitable for use in various settings. It also includes a Bluetooth remote control for flexible operation.





Figure 1: Front view of the Je Joue Vesta vibrating butt plug, showcasing its sleek, black, and ergonomic design.

2. KEY FEATURES

- **Easy to Use:** Designed for straightforward operation, suitable for both new and experienced users.
- **Silky Soft for Comfort:** Constructed from ultra-soft silicone for a smooth and comfortable fit, ensuring effortless insertion and a luxurious feel.
- **Body-Safe and Lube-Compatible:** Made from 100% body-safe silicone, compatible with water-based or silicone-based lubricants for safe and versatile use.

- **Unique Customizable Vibrations:** Features 5 speeds and 7 patterns of deep, rumbley vibrations from a powerful motor, targeting key pleasure points. Includes a Bluetooth remote for mode switching.
- **Deep Rumbley Sensations:** Utilizes Je Joue's signature low-frequency motor to deliver intense, deep rumbley sensations for a powerful and unique experience.

3. GETTING STARTED

3.1 Unboxing and Initial Inspection

Carefully remove the Je Joue Vesta from its packaging. Inspect the device for any visible damage or defects. Ensure all components, including the device, charging cable, and remote control (if applicable), are present.



Figure 2: Contents of the Je Joue Vesta package, showing the device, its box, a small instruction booklet, and a USB charging cable.

3.2 Initial Charge

Before first use, fully charge your Je Joue Vesta. Locate the charging port on the device, typically a small magnetic or covered port. Connect the provided USB charging cable to the device and plug the other end into a USB power source (e.g., computer, USB wall adapter). The indicator light will typically show charging status and turn solid when fully charged. Refer to the small instruction booklet for specific charging light indicators.

3.3 First Cleaning

Clean the device thoroughly before its first use. Refer to the 'Care and Maintenance' section for detailed cleaning instructions.

4. OPERATING INSTRUCTIONS

4.1 Powering On/Off

To power on the Je Joue Vesta, press and hold the power button (usually located on the base of the device) for a few seconds until the vibrations begin. To power off, press and hold the power button again until the vibrations cease.

4.2 Changing Vibration Modes and Speeds

Once powered on, short presses of the power button will cycle through the 5 speeds and 7 patterns. Experiment with each setting to find your preferred sensation.

4.3 Using the Bluetooth Remote Control

The Je Joue Vesta can be controlled via its Bluetooth remote. Ensure the remote is charged (if applicable) and paired according to the separate remote instructions (if provided). The remote allows for convenient control of vibration speeds and patterns from a distance.



Figure 3: Angled view of the Je Joue Vesta, highlighting its ergonomic shape and smooth silicone finish, ideal for understanding its form during operation.

5. CARE AND MAINTENANCE

5.1 Cleaning

The Je Joue Vesta is waterproof and easy to clean. After each use, wash the device thoroughly with warm water and a mild, toy-safe soap. Rinse completely and pat dry with a lint-free cloth. Do not use harsh chemicals, alcohol-based cleaners, or abrasive materials, as these can damage the silicone.



Figure 4: The Je Joue Vesta with water droplets, illustrating its waterproof design and ease of cleaning.

5.2 Storage

Store the device in a clean, dry place away from direct sunlight and extreme temperatures. Avoid storing it with other toys made of different materials, especially those containing PVC or phthalates, as this can cause damage to the silicone over time. Use the original packaging or a dedicated storage pouch for best preservation.

6. TROUBLESHOOTING

6.1 Device Not Turning On

- Ensure the device is fully charged. Connect it to the charger and wait for the charging indicator to confirm.
- Press and hold the power button firmly for the recommended duration (typically 2-3 seconds).

6.2 Weak Vibrations

- The battery may be low. Recharge the device fully.
- Ensure the device is clean and free from debris that might impede vibration.

6.3 Bluetooth Remote Not Connecting

- Ensure both the device and the remote are charged.

- Refer to the remote's specific instructions for pairing procedures.
- Ensure there are no obstructions or excessive distance between the device and the remote.

If you continue to experience issues, please refer to the 'Warranty and Support' section for contact information.

7. TECHNICAL SPECIFICATIONS

Attribute	Detail
Brand	Je Joue
Model Name	Vesta
Item Model Number	88587
Material	Silicone
Color	Black
Product Dimensions (L x W x H)	11.7 x 6.25 x 2.96 cm (4.6 x 2.46 x 1.16 inches)
Item Weight	75.6 g (2.67 oz)
Vibration Speeds	5
Vibration Patterns	7
Control	On-device button, Bluetooth Remote Control
Waterproof	Yes

8. IMPORTANT SAFETY INFORMATION

Legal Disclaimer: Actual product packaging and materials may contain more and different information than what is shown on our website. We recommend that you do not rely solely on the information presented and that you always read labels, warnings, and directions before using or consuming a product.

- Always clean the device before and after each use.
- Use only water-based or silicone-based lubricants with this product. Oil-based lubricants can damage silicone.
- Do not use if the device appears damaged or compromised.
- Discontinue use immediately if you experience any discomfort or irritation.
- Keep out of reach of children.
- Consult a healthcare professional if you have any medical conditions or concerns before using this product.

9. WARRANTY AND SUPPORT

For product support, troubleshooting assistance beyond this manual, or information regarding warranty claims, please visit the official Je Joue store or contact their customer service directly.

You can find more information and contact details by visiting the [Je Joue Store on Amazon.ca](#).

© 2024 Je Joue. All rights reserved.