

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Timex](#) /
- › [Timex Expedition North Ridge 43mm Watch User Manual](#)

Timex TW2W16000QY

Timex Men's Expedition North Ridge 43mm Watch

Model: TW2W16000QY

Brand: Timex

INTRODUCTION

This instruction manual provides comprehensive guidance for the setup, operation, and maintenance of your Timex Men's Expedition North Ridge 43mm Watch. Please read this manual thoroughly to ensure proper use and longevity of your timepiece.





Image: Front view of the Timex Expedition North Ridge 43mm Watch, showcasing its black dial, luminous hands, and chronograph subdials. The watch features a robust black case and a matching black strap.

KEY FEATURES

- **Strap:** 8-inch black strap, designed for durability and comfort.
- **Case:** 42mm round case, providing a substantial yet comfortable fit.
- **Dial:** Black dial with clear markers and hands for easy readability.
- **Lens:** Durable mineral glass lens, offering scratch resistance.
- **Water Resistance:** Water resistant up to 100 meters (330 feet), suitable for swimming and snorkeling, but not for diving.
- **Movement:** Quartz movement for accurate timekeeping.
- **Chronograph:** Integrated chronograph function for measuring elapsed time.

SETUP

Setting Time and Date

1. **Pull out the Crown:** Gently pull the crown (the knob on the side of the watch) to position 2 for setting the date, or position 3 for setting the time.
2. **Set the Date:** If in position 2, turn the crown clockwise or counter-clockwise to adjust the date.
3. **Set the Time:** If in position 3, turn the crown to move the hour and minute hands. Ensure you set the correct AM/PM

time.

4. **Push in the Crown:** Once time and date are set, push the crown back into position 1 to engage the movement and seal the watch.



Image: Side view of the Timex Expedition North Ridge 43mm Watch, highlighting the crown and the two pushers used for operating the chronograph and setting functions.

OPERATING INSTRUCTIONS

Using the Chronograph

The chronograph function allows you to measure elapsed time with precision.

1. **Start:** Press the top pusher (A) to start the chronograph. The chronograph second hand will begin to move.
2. **Stop:** Press the top pusher (A) again to stop the chronograph. The elapsed time will be indicated by the chronograph hands.
3. **Reset:** After stopping, press the bottom pusher (B) to reset all chronograph hands to their zero positions.

4. **Split Time:** Some models may feature a split time function. Consult the specific movement guide for detailed instructions if applicable.

Water Resistance

Your Timex Expedition North Ridge watch is water resistant up to 100 meters (330 feet). This rating means it is suitable for recreational swimming, showering, and snorkeling. It is not designed for scuba diving or high-impact water sports.

- Do not operate the crown or pushers while the watch is wet or submerged.
- Avoid exposing the watch to extreme temperature changes, such as moving from a hot sauna to cold water, as this can compromise seals.
- Rinse the watch with fresh water after exposure to salt water or chlorinated water.



Image: Close-up of the watch's case back, displaying the "WR 100M" marking, indicating its water resistance rating.

MAINTENANCE

Cleaning Your Watch

To maintain the appearance of your watch, regularly wipe the case and strap with a soft, damp cloth. For metal bracelets, a soft brush can be used to clean between links. Avoid using harsh chemicals or abrasive materials.

Battery Replacement

Your watch is powered by a lithium metal battery (included). When the battery needs replacement, it is recommended to

take your watch to an authorized Timex service center or a reputable watch repair professional. This ensures proper battery installation and re-sealing for water resistance.

Strap Care

The black strap is designed for durability. To prolong its life, avoid prolonged exposure to direct sunlight, extreme temperatures, and harsh chemicals. If the strap becomes wet, allow it to air dry naturally.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Watch not running or hands not moving.	Battery depleted.	Replace battery (professional service recommended).
Chronograph hands do not reset to zero.	Calibration issue or mechanical fault.	Consult the specific movement guide for chronograph calibration steps, or seek professional repair if buttons are unresponsive or jammed.
Watch gains or loses time.	Exposure to strong magnetic fields; low battery; internal issue.	Keep watch away from strong magnets. Replace battery if old. If problem persists, seek professional service.
Moisture under the crystal.	Compromised water resistance due to impact or seal degradation.	Immediately take to a professional watch repairer to prevent damage to the movement.

SPECIFICATIONS






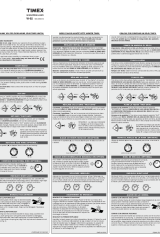
- Model Number:** TW2W16000QY
- Case Diameter:** 42mm
- Strap Length:** 8 inches
- Water Resistance:** 100 meters (330 feet)
- Lens Material:** Mineral Glass
- Battery Type:** 1 Lithium Metal battery (included)
- Manufacturer:** Timex
- ASIN:** B0CFW2691V
- Date First Available:** August 16, 2023
- Package Dimensions:** 4.49 x 4.13 x 3.11 inches
- Item Weight:** 9.14 ounces

WARRANTY AND SUPPORT

Timex watches are manufactured to high standards and come with a limited warranty. For specific warranty details, please refer to the warranty card included with your purchase or visit the official Timex website. For technical support, service, or parts, please contact Timex customer service directly.

Timex Official Website: www.timex.com

Related Documents - TW2W16000QY

	<p>Timex Expedition North Slack Tide Watch User Guide</p> <p>This user guide provides detailed instructions for setting and operating the Timex Expedition North Slack Tide watch, including time, date, and tide cycle hand adjustments, as well as information on water resistance, shock resistance, warranty, and battery care.</p>
	<p>Руководство по эксплуатации часов Timex</p> <p>Подробное руководство по эксплуатации часов Timex, охватывающее настройку времени, использование хронографа, водонепроницаемость, регулировку браслета и функции подсветки INDIGLO® для различных механизмов Timex.</p>
	<p>Timex Expedition Digital Watch User Manual</p> <p>Comprehensive user manual for the Timex Expedition Digital watch, covering functions, basic operations, time and date settings, alarm, timer, chronograph, INDIGLO night-light, water resistance, and battery information.</p>
	<p>Timex Expedition Digital World Time Solar Watch User Guide</p> <p>Comprehensive user guide for the Timex Expedition Digital World Time Solar watch (Model M11R), covering functions, button operations, power saving, battery status, and world time zones.</p>
	<p>Timex Kids Digital Watch User Guide - Operation and Features</p> <p>Comprehensive user guide for the Timex Kids digital watch (model 791-095007). Covers features, basic operations, setting time and date, chronograph, alarm, timer, INDIGLO night light, water resistance, strap adjustments, battery information, and warranty details.</p>
	<p>Timex Watch User Manual and Warranty Information</p> <p>A comprehensive guide for Timex watches, covering setup, operation, features like INDIGLO night-light, bracelet adjustment, water and shock resistance, battery care, and international warranty details.</p>