Manuals+

Q & A | Deep Search | Upload

Timex TW2W13100VQ

Timex Men's Chicago 45mm Watch User Manual

Model: TW2W13100VQ | Brand: Timex

1. Introduction

Thank you for choosing the Timex Men's Chicago 45mm Watch. This manual provides essential information for the proper setup, operation, and maintenance of your timepiece. Please read these instructions carefully to ensure optimal performance and longevity of your watch.

The Timex Chicago collection is inspired by the architectural and cultural heritage of Chicago, offering a design that is both robust and refined. This chronograph watch features a 45mm brass case, a textured dial, and a black natural leather strap with quick-release spring bars.



Image 1.1: Front view of the Timex Men's Chicago 45mm Watch, showcasing the black dial, silver-tone case, and black leather strap.

2. SETUP

2.1 Setting the Time and Date

- 1. **Pull out the crown:** Gently pull the crown (located on the right side of the watch case) to position 2 for time setting, or position 1 for date setting.
- 2. **Set the time:** Rotate the crown to move the hour and minute hands to the desired time. Ensure to account for AM/PM if your watch has a 24-hour indicator or date change mechanism.
- 3. **Set the date:** If applicable, rotate the crown in position 1 to adjust the date. Avoid setting the date between 9 PM and 3 AM, as this can interfere with the automatic date change mechanism.
- 4. **Push in the crown:** Once the time and date are set, push the crown back into its normal operating position to start the watch.



Image 2.1: Side view of the watch, highlighting the crown and chronograph pushers for setting and operation.

2.2 Adjusting the Strap

The watch comes with a natural leather strap equipped with quick-release spring bars for easy removal and attachment. To adjust the fit, use the buckle to select the appropriate hole on the strap that provides a comfortable and secure fit on your wrist.

3. OPERATING INSTRUCTIONS

3.1 Basic Timekeeping

Your Timex Chicago watch displays hours, minutes, and seconds. The main hands indicate the current time. The date window displays the current day of the month.

3.2 Chronograph Function

This watch features a chronograph, which is a stopwatch function. The subdials on the watch face are used for measuring elapsed time.

- Start/Stop: Press the top pusher (button) to start and stop the chronograph.
- **Reset:** With the chronograph stopped, press the bottom pusher to reset all chronograph hands to their zero positions.

Refer to Image 1.1 for the visual layout of the chronograph subdials and pushers.

4. MAINTENANCE

4.1 Cleaning Your Watch

To maintain the appearance of your watch, wipe the case and crystal with a soft, dry cloth. For the leather strap, avoid prolonged exposure to water and direct sunlight. If the strap gets wet, allow it to air dry naturally.

4.2 Water Resistance

This watch is water resistant up to 50 meters (164 feet). This means it is suitable for short periods of recreational swimming, but not for diving or snorkeling. Avoid operating the crown or pushers when the watch is wet or submerged, as this can compromise the water resistance.





Image 4.1: Rear view of the watch, displaying the stainless steel case back with water resistance information.

4.3 Battery Replacement

The watch is powered by a quartz movement and requires a battery. When the watch stops or the second hand begins to jump erratically (indicating a low battery), it is recommended to have the battery replaced by a qualified watch technician. This ensures the proper sealing and water resistance are maintained.

5. TROUBLESHOOTING

- Watch not running: Check if the crown is fully pushed in. If the watch still does not run, the battery may need replacement.
- **Time inaccuracy:** Minor deviations in timekeeping are normal for quartz watches. If the inaccuracy is significant, the watch may require servicing or a battery replacement.
- Condensation under crystal: If condensation appears under the crystal, it indicates a loss of water resistance. Immediately seek professional service to prevent further damage to the movement.

6. SPECIFICATIONS

Model Number: TW2W13100VQ

Case Diameter: 45mm
Case Material: Brass

Dial Color: Black

Strap Material: Natural Leather

Strap Length: 8 inches Crystal: Mineral Glass

Water Resistance: 50 meters (164 feet)

Movement: Quartz



Image 6.1: Detailed view of the watch's case back, showing engraved specifications and branding.

7. WARRANTY AND SUPPORT

Your Timex watch is covered by a manufacturer's warranty. For detailed information regarding warranty terms, conditions, and service procedures, please refer to the warranty card included with your purchase or

visit the official Timex website.

For further assistance or to locate an authorized service center, please visit the Timex Store on Amazon or the official Timex brand website.

© 2023 Timex. All rights reserved.

Related Documents

	Timex Kids Digital Watch User Guide - Operation and Features Comprehensive user guide for the Timex Kids digital watch (model 791-095007). Covers features, basic operations, setting time and date, chronograph, alarm, timer, INDIGLO night light, water resistance, strap adjustments, battery information, and warranty details.
TIMEX PRODUCTION 11911 TIMEX PRODUCTION 11911 TIMEX	Руководство по эксплуатации часов Timex Подробное руководство по эксплуатации часов Timex, охватывающее настройку времени, использование хронографа, водонепроницаемость, регулировку браслета и функции подсветки INDIGLO® для различных механизмов Timex.
17988 1898	Timex Watch User Manual and Warranty Information A comprehensive guide for Timex watches, covering setup, operation, features like INDIGLO nightlight, bracelet adjustment, water and shock resistance, battery care, and international warranty details.
Gardinas	Timex FamilyConnect Watch User Manual A comprehensive guide to using the Timex FamilyConnect cellular-connected watch for kids, covering setup, app usage, watch features, and safety information.