

Sharper Image 1016977

Sharper Image® Powerboost® Pro+ Hot & Cold Deep Tissue Massage Gun

Instruction Manual

1. PRODUCT OVERVIEW

The Sharper Image® Powerboost® Pro+ Compact is a versatile deep tissue massage gun designed for muscle recovery and pain relief. It features dual-temperature therapy, a quiet motor, and multiple attachments for a personalized massage experience.

- **Dual-Temperature Therapy:** Seamlessly switch between 38°F cooling and 115°F heating.
- **Whisper-Quiet Motor:** Industrial-grade brushless motor for discreet use.
- **4 Custom Attachments:** Tailored relief for various muscle groups and needs.
- **Portable & Lightweight:** Compact design with a travel case for on-the-go use.
- **Long-Lasting Battery:** Up to 5 hours of performance on a single charge.



Figure 1: The Sharper Image Powerboost Pro+ Compact Massage Gun, showcasing the main unit, three interchangeable massage heads, and the included carrying case.

2. SAFETY INFORMATION

Please read all instructions and warnings prior to use. Keep this information for future reference.

- Do not submerge the device in water.
- Do not use detergents or soap when cleaning the device.
- Allow to dry fully before plugging back in.
- Do not use if causing pain or discomfort.

- Ensure use on firm surfaces.
- Keep out of reach of children.
- Statements regarding dietary supplements have not been evaluated by the FDA and are not intended to diagnose, treat, cure, or prevent any disease or health condition.

3. SETUP

3.1 Unboxing and Initial Charge

Upon opening the package, ensure all components are present:

- Power Percussion Deep Tissue Massager
- Interchangeable massage nodes (x4)
- Carrying case
- Charging Base
- USB-C Charging Cable

SHARPER IMAGE®

POWERBOOST

PRO+COMPACT



**HOT + COLD PORTABLE
PERCUSSION MASSAGER**

WHAT YOU GET



MASSAGER



FOUR ATTACHMENTS



USB-C CHARGING CABLE



CARRYING CASE




Figure 2: The contents of the product package, including the massager, four attachments, USB-C charging cable, and carrying case. Before first use, fully charge the device using the included USB-C charging cable and charging base. The battery indicator on the digital dial will show charging progress.

3.2 Attaching Massage Heads


To attach a massage head, gently push the desired attachment into the opening at the front of the message gun until it is securely in place. To remove, pull the attachment straight out.



 
WHAT YOU GET

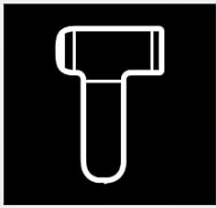


PowerBoost™
Pro+ Compact

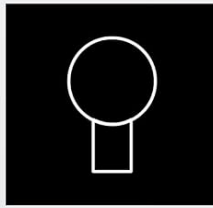 

4 massage
attachments

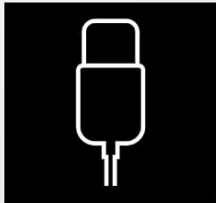 

USB-C
charging cable

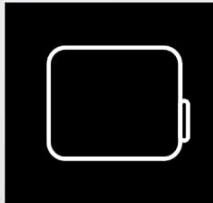 

Carrying
case



Figure 3: The four primary massage attachments: Fork, Round, Flat, and the Hot + Cold attachment, each designed for specific massage needs.

4. OPERATING INSTRUCTIONS

4.1 Powering On/Off and Speed Adjustment

To power on the device, press and hold the power button located on the digital dial. The LED display will illuminate, showing the current speed setting. Rotate the digital dial to cycle through the 6 intensity levels. To power off, press and hold the power button again.



+ DIGITAL DIAL

INSTANT HEAT OR COLD



Figure 4: The digital dial with LED display, used for adjusting massage intensity and temperature settings.

4.2 Dual-Temperature Therapy

The specialized Hot + Cold attachment allows for dual-temperature therapy. Attach this head to the massager. Rotate the digital dial to select either the cooling (38°F) or heating (115°F) function. The device will quickly reach the desired temperature.

CUTTING EDGE TEMPERATURE CONTROL



- + SEAMLESSLY ALTERNATE BETWEEN CALMING HEAT (115°F) & REJUVENATING COLD (38°F)
- + USER-FRIENDLY DIAL CONTROL & BRIGHT LED DISPLAY



Figure 5: Demonstrating the use of the hot/cold attachment for targeted temperature therapy on the shoulder.

4.3 Application Areas

Use the massage gun on various muscle groups to alleviate soreness and promote recovery. Start with a low intensity and gradually increase as comfortable. Avoid using on bones, joints, or sensitive areas. Refer to the specific attachments for targeted use:

- **Round Head:** General full-body massage, large muscle groups like arms, back, hips, thighs, calves.
- **Flat Head:** Suitable for all parts of the body, especially for relaxation and shaping.
- **Fork Head:** Ideal for the spine, neck, and Achilles tendon.
- **Hot + Cold Head:** For targeted temperature therapy on specific sore areas.

LIGHTWEIGHT AND TRAVEL-FRIENDLY

COMPACT YET
POWERFUL DESIGN



2 HOURS OF USE
PER FULL CHARGE



Figure 6: A user applying the massage gun to their back, highlighting its ergonomic design for self-use.

5. MAINTENANCE

5.1 Cleaning

To clean the massage gun and its attachments, wipe them with a damp cloth. Do not submerge the device in water or use harsh detergents or soaps, as this may damage the unit.

5.2 Storage

Store the massage gun and all its accessories in the provided carrying case when not in use. This protects the device from dust and damage, and keeps all components organized for easy access and travel.

WHISPER QUIET MOTOR



STATE-OF-THE-ART BRUSHLESS
MOTOR INTEGRATED WITH
QUIET-DRIVE TECHNOLOGY



Figure 7: The massage gun and its attachments neatly stored within the compact carrying case, ready for travel or storage.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not turn on.	Low battery.	Charge the device fully using the provided USB-C cable and charging base.
Device turns off automatically after a few seconds.	Dirty contacts on the hot/cold head or unit.	Inspect and clean the contacts between the hot/cold head and the main unit. Ensure they are free of dirt or debris.

Problem	Possible Cause	Solution
Attachments are difficult to install/remove.	Improper alignment or debris.	Ensure the attachment is aligned correctly. Clean any debris from the attachment base and the massager's opening.
Temperature therapy not working effectively.	Incorrect attachment or setting.	Ensure the specific Hot + Cold attachment is used and the digital dial is set to the desired temperature mode (hot or cold).

7. SPECIFICATIONS

Product Dimensions: 6.5 x 5 x 2 inches

Item Weight: 1.3 Pounds

Item Model Number: 1016977

Batteries: 1 Lithium Ion battery (included)

Power Source: Battery Powered

Material: Metal

Temperature Range (Hot): Up to 115°F

Temperature Range (Cold): Down to 38°F

Speeds: 6 Intensity Levels

Attachments: 4 Custom Attachments

Battery Life: Up to 5 hours (per charge)

Manufacturer: MerchSource

ASIN: B0CFWP1G12

8. WARRANTY AND SUPPORT

8.1 Manufacturer's Warranty

This product is backed by a **1-year manufacturer warranty**. This warranty covers defects in materials and workmanship under normal use.

8.2 Customer Support

For any questions, issues, or warranty claims, please contact Sharper Image customer support. You can typically find contact information on the product packaging or the official Sharper Image website. For purchases made through Amazon, you may also message the seller directly through the Amazon platform for a quick resolution.

Note: Keep your proof of purchase for warranty validation.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question