

Handor 8521

Handor 6-in-1 Hand Immersion Blender (Model 8521) User Manual

Comprehensive instructions for safe and effective use.

1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using the Handor 6-in-1 Hand Immersion Blender. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Always unplug the appliance from the power supply before assembly, disassembly, or cleaning.
- Do not immerse the motor unit in water or any other liquid. Clean with a damp cloth only.
- Keep hands, hair, clothing, and utensils away from moving blades during operation to prevent injury.
- This appliance is not intended for use by children or persons with reduced physical, sensory, or mental capabilities unless supervised.
- Avoid contact with moving parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner.
- Blades are sharp. Handle with care when assembling, disassembling, or cleaning.
- Do not use outdoors.
- Ensure the voltage indicated on the appliance corresponds to your local mains voltage before connecting.

2. PRODUCT OVERVIEW AND COMPONENTS

The Handor 6-in-1 Hand Immersion Blender is a versatile kitchen appliance designed for various food preparation tasks. It includes several attachments for blending, chopping, whisking, and frothing.



Figure 2.1: Handor 6-in-1 Hand Immersion Blender with all included attachments: main motor unit, immersion blender shaft, egg whisk, 500ml chopper bowl, 600ml beaker, and milk frother attachment.

2.1 Included Components:

- **Motor Unit:** The main body containing the 1000W motor and control buttons.
- **Immersion Blender Shaft:** Stainless steel shaft with anti-splash blades for blending.
- **Egg Whisk Attachment:** For whipping eggs, cream, and light batters.
- **500ml Chopper Bowl:** With stainless steel chopping blades for nuts, vegetables, and meat.

- **600ml Beaker:** For blending liquids and measuring ingredients.
- **Milk Frother Attachment:** For frothing milk.

3. SETUP AND ASSEMBLY

Before first use, wash all detachable parts (except the motor unit) in warm soapy water, rinse thoroughly, and dry. The motor unit can be wiped with a damp cloth.

3.1 Attaching the Immersion Blender Shaft:

1. Align the immersion blender shaft with the motor unit.
2. Twist clockwise until it locks securely into place.
3. To detach, twist counter-clockwise and pull apart.

3.2 Assembling the Chopper:

1. Carefully place the chopping blade onto the central pin inside the 500ml chopper bowl.
2. Add ingredients to the chopper bowl.
3. Place the chopper lid onto the bowl, ensuring it is properly seated.
4. Attach the motor unit to the chopper lid by aligning and twisting clockwise until secure.

3.3 Attaching the Egg Whisk / Milk Frother:

1. Insert the whisk or frother attachment into the whisk gear box.
2. Align the whisk gear box with the motor unit.
3. Twist clockwise until it locks securely into place.

4. OPERATING INSTRUCTIONS

Ensure the appliance is properly assembled and plugged into a 110V power outlet before operation.

12 SPEED 1000W HIGH POWER

Meet all your cooking needs



Figure 4.1: The motor unit showing the 12-speed variable control dial and the power/TURBO buttons.

4.1 Speed Control:

- The motor unit features a 12-speed variable control dial at the top. Rotate the dial to select your desired speed.
- Press the power button to start operation at the selected speed.
- Press and hold the **TURBO** button for maximum power instantly. Release to return to the dial-selected speed or

stop if the power button is not pressed.

4.2 Using the Immersion Blender:

1. Attach the immersion blender shaft to the motor unit.
2. Place the blender into the ingredients in a deep container (e.g., the 600ml beaker, a pot, or a bowl). Ensure the blades are fully submerged.
3. Select the desired speed using the dial.
4. Press and hold the power button to operate. Move the blender up and down gently to ensure even blending.
5. Release the power button to stop. Unplug before removing from ingredients.

Recommended Speeds:

- **Speeds 1-3:** Milkshakes, juices, light sauces.
- **Speeds 4-6:** Baby food, purees.
- **Speeds 7-9:** Desserts, thicker mixtures.
- **Speeds 10-12:** Nuts, harder ingredients (use TURBO for best results).

12 SPEEDS

All-Round Cooking Assistant



Figure 4.2: Visual guide for recommended speed settings based on food type, including milkshakes, baby food, desserts, and nuts.

4.3 Using the Chopper:

1. Assemble the chopper as described in Section 3.2.
2. Ensure ingredients are cut into small pieces (approx. 1-2 cm) before placing them in the chopper bowl. Do not overfill.
3. Select a suitable speed. For harder ingredients like nuts, use higher speeds or the TURBO function.

4. Press and hold the power button in short pulses for controlled chopping.
5. Release the button to stop. Unplug before disassembling.

4.4 Using the Egg Whisk:

1. Attach the egg whisk to the motor unit.
2. Place the whisk into the ingredients (e.g., eggs, cream) in a bowl.
3. Select a low to medium speed for gentle whisking, or higher speeds for faster whipping.
4. Press and hold the power button to operate.
5. Release the button to stop. Unplug before removing.

4.5 Using the Milk Frother:

1. Attach the milk frother to the motor unit.
2. Submerge the frother head into milk in a cup or small pitcher.
3. Press and hold the power button. Move the frother up and down slightly to create foam.
4. Release the button when desired froth is achieved. Unplug before removing.

5. CLEANING AND MAINTENANCE

Proper cleaning and maintenance ensure the longevity and optimal performance of your Handor Immersion Blender.

5.1 Cleaning the Motor Unit:

- Always unplug the motor unit before cleaning.
- Wipe the exterior of the motor unit with a damp cloth. Do not immerse it in water or any other liquid.
- Dry thoroughly after cleaning.

5.2 Cleaning Attachments:

- The immersion blender shaft, egg whisk, chopper bowl, chopper blades, beaker, and milk frother attachment are detachable and can be washed in warm soapy water.
- Rinse thoroughly under running water.
- Exercise extreme caution when handling the sharp chopper blades and immersion blender blades.
- All detachable parts are generally dishwasher safe (top rack recommended), but hand washing is preferred for longevity.
- Ensure all parts are completely dry before storing.

5.3 Storage:

Store the appliance and its attachments in a dry, safe place, out of reach of children.

6. TROUBLESHOOTING

If you encounter issues with your Handor Immersion Blender, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet not working; motor unit not properly attached to an accessory.	Check power cord connection; test outlet with another appliance; ensure motor unit is securely locked onto the desired attachment.

Problem	Possible Cause	Solution
Blades are not rotating or are rotating slowly.	Too much food in the bowl/beaker; ingredients are too hard; attachment not properly secured.	Reduce the amount of food; cut ingredients into smaller pieces; ensure attachment is correctly locked. Use TURBO for tough ingredients.
Motor unit overheats.	Continuous operation for too long; processing very dense ingredients.	Unplug the appliance and let it cool down for at least 30 minutes. Avoid continuous operation for more than 1 minute with heavy loads.
Loud noise or unusual vibration.	Attachment not properly secured; foreign object caught in blades.	Ensure all attachments are securely locked. Unplug and check for any obstructions around the blades.

If the problem persists after trying these solutions, please contact customer support.

7. PRODUCT SPECIFICATIONS

Brand	Handor
Model Number	8521
Power	1000W
Voltage	110 Volts
Number of Speeds	12 (Variable) + TURBO
Chopper Bowl Capacity	500ml (17oz)
Beaker Capacity	600ml (24oz)
Blade Material	Stainless Steel
Product Dimensions	10"D x 2"W x 5"H (Main Unit)
Item Weight	1.5 pounds
UPC	749782216314

8. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the product packaging or contact Handor customer service directly. Keep your purchase receipt as proof of purchase.

Contact Information: Please visit the official Handor website or refer to the contact details provided with your product for support.

