

[Manuals.plus](#) /

› [Smoby](#) /

› Smoby Spidey FleXtreme Car Track Set Instruction Manual

Smoby 180918

Smoby Spidey FleXtreme Car Track Set Instruction Manual

Model: 180918

1. SAFETY INFORMATION

WARNING!

- Not suitable for children under 3 years of age.
- Minimum age: 48 months.
- Contains small parts. Choking hazard.
- Adult supervision is recommended during assembly and play.

2. PRODUCT OVERVIEW

The Smoby Spidey FleXtreme Car Track Set allows for creative and dynamic track building. This set includes flexible track pieces, a motorized Spidey vehicle, and a unique web-shaped fixing clamp for versatile play.

2.1. Components Included

- 184 Flexible Track Pieces (totaling 4.4 meters)
- 1 Electronic Light-Up Spidey Vehicle
- 1 Entry-Exit Track Piece
- 1 Spider Web Fixing Clamp
- 3 LR03 (AAA) Batteries (for the vehicle)



Figure 1: Overview of included components. Shows the powered Spidey vehicle, flexible red and blue track pieces, a yellow starting area, and the spider web fixing clamp.

3. SETUP INSTRUCTIONS

1. **Unpack Components:** Carefully remove all parts of the Spidey FleXtreme set from its packaging. Ensure all listed components are present.
2. **Install Batteries:** Locate the battery compartment on the underside of the Spidey vehicle. Insert the 3 LR03 (AAA) batteries, ensuring correct polarity. Close the compartment securely.
3. **Design Your Track:** Unroll the flexible track pieces. Connect them by interlocking the ends to form your desired circuit layout. The tracks are designed to be highly flexible, allowing for various configurations, including climbs, descents, and loops.
4. **Utilize the Fixing Clamp:** Use the spider web fixing clamp to attach sections of the track to furniture or other objects in your environment. This allows for multi-level and creative track designs.
5. **Attach Starting Track:** Connect the entry-exit track piece to your main circuit. This serves as the designated starting point for the vehicle.



Figure 2: Example of track setup, demonstrating how the flexible tracks can be arranged across different surfaces and objects.

4. OPERATING INSTRUCTIONS

- 1. **Place Vehicle on Track:** Carefully place the Spidey vehicle onto the assembled track, ensuring its wheels are properly aligned within the track grooves.
- 2. **Start the Vehicle:** Press the start button located on the vehicle to activate it. The vehicle will begin to move along the track, and its lights will illuminate.
- 3. **Observe and Enjoy:** Watch as the vehicle navigates the circuit, performing climbs, descents, upside-down maneuvers, twists, and loops.
- 4. **Stop the Vehicle:** To stop the vehicle, press the start button again or lift it from the track.
- 5. **Reconfigure Tracks:** After play, you can easily reassemble the tracks to create new and exciting circuit designs.

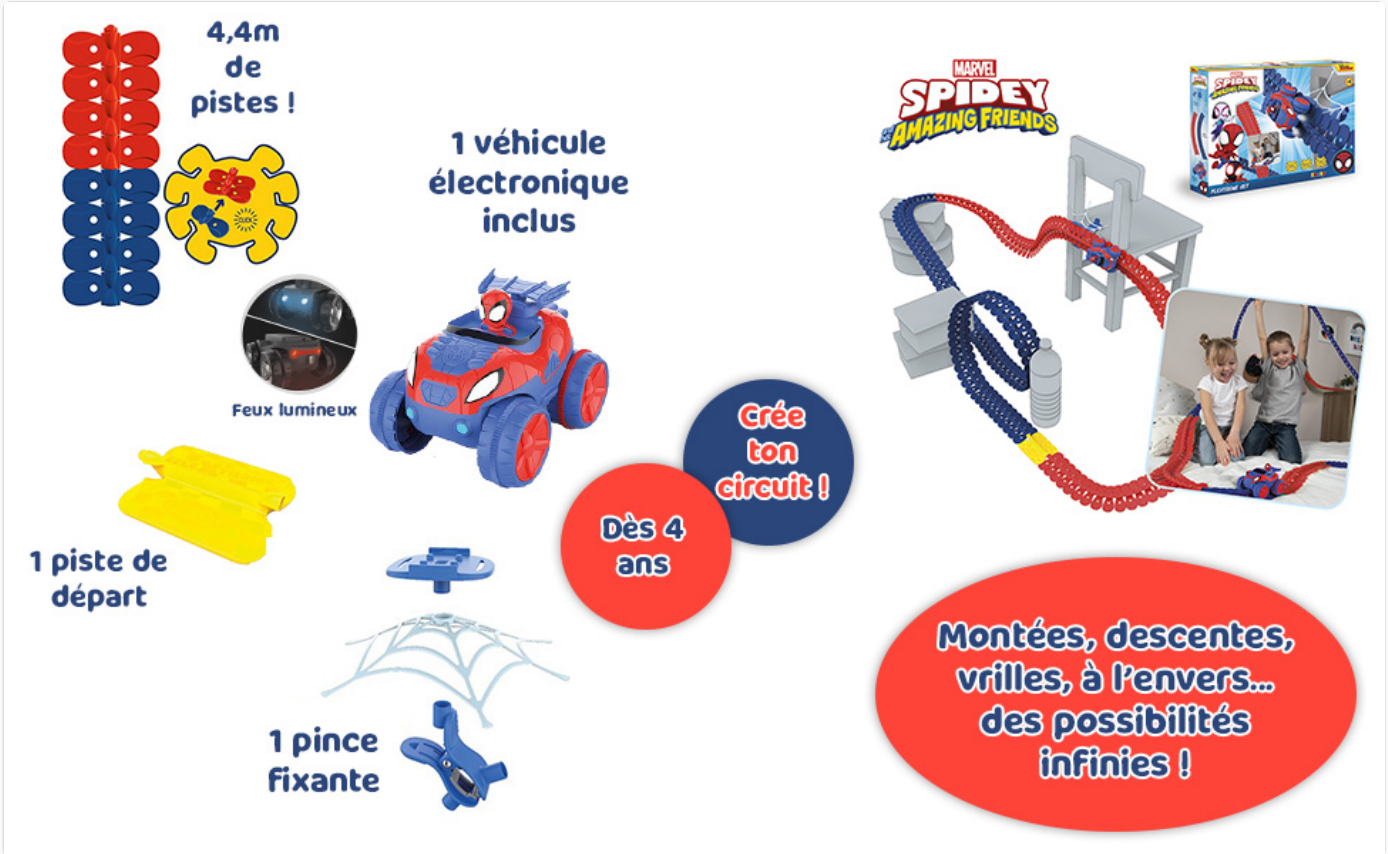


Figure 3: The Spidey vehicle in action on a flexible track, showcasing its dynamic movement capabilities.

5. MAINTENANCE

- **Cleaning:** Wipe the track pieces and vehicle with a dry or slightly damp cloth. Do not immerse the vehicle in water.
- **Storage:** Store the set in a clean, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** Remove batteries from the vehicle if it will not be used for an extended period to prevent leakage. Replace all batteries at the same time with new ones of the same type.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Vehicle does not move or moves slowly.	Low or dead batteries. Incorrect battery installation. Vehicle not properly on track.	Replace batteries with new LR03 (AAA) batteries. Ensure batteries are inserted with correct polarity. Place vehicle firmly on the track, aligning wheels with grooves.

Problem	Possible Cause	Solution
Vehicle falls off the track.	Track sections not securely connected. Track curves are too sharp or unsupported.	Ensure all track pieces are firmly interlocked. Provide additional support for steep inclines or sharp curves using the fixing clamp or other objects.
Short battery life.	Frequent use. Type of batteries used.	Consider using high-quality rechargeable LR03 (AAA) batteries for extended play and cost efficiency.

7. SPECIFICATIONS

- **Brand:** Smoby
- **Model Name:** Spidey FleXtreme Set
- **Model Number:** 180918
- **Age Range:** From 4 years
- **Material:** Plastic
- **Total Track Length:** 4.4 meters
- **Vehicle Power:** 3 x LR03 (AAA) batteries (included)
- **Item Dimensions (Box):** 42 x 7 x 32 cm
- **Weight:** 1.31 Kilograms
- **Assembly Time:** Approximately 30 minutes
- **Educational Objective:** Imagination development
- **Special Features:** Flexible track, special grip vehicle, anti-tip design

8. WARRANTY AND SUPPORT

This product comes with a **2-year manufacturer’s warranty**. For any questions, technical support, or warranty claims, please contact Smoby customer service through their official website or the retailer where the product was purchased. Please retain your proof of purchase for warranty purposes.

© 2026 Smoby. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question