

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [artfone](#) /

› [artfone F30 4G Flip Phone User Manual](#)

## artfone F30

# artfone F30 4G Flip Phone User Manual

Model: F30

## INTRODUCTION

---

Welcome to the user manual for your new artfone F30 4G Flip Phone. This device is specifically designed for ease of use, featuring large keys, a clear display, and essential functions for seniors. Please read this manual carefully to understand how to operate your phone safely and efficiently.

The artfone F30 combines a classic flip design with modern 4G connectivity, ensuring reliable communication. Its robust features include a dedicated SOS button for emergencies, a bright flashlight, and a user-friendly interface with large fonts and clear menu icons.

## 1. SETUP

---

### 1.1. SIM Card and Battery Installation

To begin using your artfone F30, you need to install the SIM card(s) and the battery. The phone supports dual SIM cards and a microSD card for expanded storage (up to 32GB).

- 1. Open the Phone:** Gently open the flip phone to access the keypad and screen.
- 2. Remove the Back Cover:** Locate the notch on the back cover and carefully pry it open to remove it.
- 3. Insert SIM Card(s):** Locate the SIM card slots. Insert your 2G, 3G, or 4G compatible SIM card(s) into the designated slots with the gold contacts facing down. Ensure they are securely seated.
- 4. Insert MicroSD Card (Optional):** If you wish to expand storage, insert a microSD card (up to 32GB) into its dedicated slot.
- 5. Insert Battery:** Place the 1000 mAh rechargeable lithium battery into the battery compartment, ensuring the contacts align correctly.
- 6. Replace Back Cover:** Carefully align and press the back cover until it clicks into place.



Image: The artfone F30 flip phone opened, displaying the keypad and screen. This view indicates where the back cover can be removed to access the SIM card and battery compartments.

## 1.2. Charging the Battery

Before first use, fully charge the phone's battery. The phone comes with a charging station and a USB Type-C cable for

convenient and safe charging.

1. **Using the Charging Station:** Connect the USB Type-C cable to the charging station and then to a power adapter. Place the phone into the charging station, ensuring it sits correctly. The charging indicator on the phone will illuminate.
2. **Direct Charging:** Alternatively, connect the USB Type-C cable directly to the phone's charging port and then to a power adapter.

A full charge typically takes a few hours. The phone supports up to 4-5 hours of talk time and up to 200 hours of standby time.



Image: The artfone F30 flip phone securely placed in its dedicated charging dock, indicating the charging process.

## 2. OPERATING INSTRUCTIONS

---

## 2.1. Power On/Off

- **To Power On:** Press and hold the red **End Call/Power** button until the screen lights up.
- **To Power Off:** Press and hold the red **End Call/Power** button until the power off options appear, then select "Power Off".

## 2.2. Making and Receiving Calls

- **Making a Call:**
  - a. Open the flip phone.
  - b. Dial the desired phone number using the large keypad. The phone features a voice function that announces the numbers as you press them, helping to prevent dialing errors.
  - c. Press the green **Call** button to initiate the call.
- **Receiving a Call:**
  - a. When the phone rings, open the flip to answer automatically, or press the green **Call** button.
  - b. To end a call, press the red **End Call** button.

## 2.3. Sending and Receiving SMS Messages

- **Sending an SMS:** Navigate to the "Messages" menu, select "Write Message," enter your text, and then select the recipient from your contacts or enter a number manually.
- **Receiving an SMS:** New messages will be indicated by an icon on the screen. Navigate to the "Messages" menu to read them.

## 2.4. SOS Emergency Button

The arfone F30 features a dedicated SOS button on the back for emergencies. This button can be configured to call and send text messages to up to 5 pre-set emergency contacts.

1. **Setting Up SOS Contacts:** Go to "Settings" > "SOS Settings" to add up to 5 emergency numbers. You can also customize the emergency SMS message.
2. **Activating SOS:** In an emergency, press and hold the SOS button on the back of the phone for a few seconds. The phone will automatically call the pre-set numbers in sequence until one answers, and send the emergency SMS to all contacts.



Image: A finger activating the prominent SOS button located on the rear of the artfone F30, highlighting its emergency function.

## 2.5. Flashlight

A dedicated flashlight button is located on the right side of the phone. Press this button to turn the flashlight on or off, providing illumination in dark environments.

## 2.6. Speed Dial (A/B/C Buttons)

The A, B, and C buttons on the keypad can be assigned to frequently called numbers for quick dialing.

1. **Setting Up Speed Dial:** Go to "Contacts" > "Speed Dial Settings" and assign a contact to each of the A, B, or C keys.
2. **Using Speed Dial:** In standby mode, press and hold the assigned A, B, or C button to call the corresponding contact.

## 2.7. Other Features

- **Bluetooth:** Connect to wireless headsets or other Bluetooth devices. Access via "Settings" > "Bluetooth".
- **FM Radio:** Listen to your favorite radio stations. Access via the "Multimedia" menu.

- **Calculator:** Perform basic arithmetic calculations.
- **Alarm Clock:** Set multiple alarms for reminders.
- **Calendar:** View dates and add events.
- **Audio/Video Player:** Play media files stored on the phone or microSD card.
- **Image Viewer:** Browse photos.
- **Magnification Function:** Enhance text visibility on the screen.
- **Keypad Backlight:** The keypad illuminates for easier use in low light.

### 3. MAINTENANCE

---

- **Cleaning:** Use a soft, dry cloth to clean the phone's surface. Avoid using liquid cleaners or aerosols.
- **Battery Care:** To prolong battery life, avoid extreme temperatures. Do not leave the phone fully discharged for extended periods.
- **Storage:** Store the phone in a cool, dry place when not in use.
- **Water Resistance:** This phone is not water-resistant. Avoid exposure to liquids.

### 4. TROUBLESHOOTING

---

Problem	Possible Solution
Phone does not power on.	Ensure the battery is correctly installed and fully charged. Try charging the phone for at least 30 minutes.
Cannot make or receive calls.	Check if the SIM card is correctly inserted. Ensure you have network signal. Contact your mobile carrier if the issue persists.
Poor call quality.	Move to an area with better network coverage. Ensure the earpiece/microphone is not obstructed.
SOS button not working.	Verify that emergency contacts are correctly set up in the SOS settings. Ensure the phone has network signal.
Battery drains quickly.	Reduce screen brightness. Close unused applications. Limit background data usage.

### 5. SPECIFICATIONS

---

<b>Brand</b>	artfone
<b>Model Name</b>	F30
<b>Operating System</b>	KaiOS
<b>Cellular Technology</b>	4G (supports 2G, 3G, 4G networks)
<b>Mobile Carrier</b>	All providers
<b>Screen Size</b>	2.4 Inches
<b>Resolution</b>	320 x 240

<b>RAM Memory</b>	48 MB
<b>Internal Storage</b>	128 MB
<b>Expandable Storage</b>	MicroSD up to 32 GB
<b>Battery Capacity</b>	1000 mAh
<b>Special Features</b>	SOS Button, Flashlight, Large Keys, Voice Function, Dual SIM, Bluetooth, FM Radio, Charging Dock

## 6. WARRANTY AND SUPPORT

---

Your artfone F30 Flip Phone comes with a standard manufacturer's warranty. Please refer to the warranty card included in your product packaging for specific terms and conditions.

For technical support, troubleshooting assistance, or warranty claims, please contact artfone customer service through the retailer where you purchased the product or visit the official artfone website for contact information.

**Online Resources:** For additional information and FAQs, you may visit [theartfone Store on Amazon](#).



© 2024 artfone. All rights reserved.

This manual is for informational purposes only. Specifications are subject to change without notice.