

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Noise](#) /
- › [Noise Buds X Prime Truly Wireless Earbuds User Manual](#)

## Noise Buds X Prime

# Noise Buds X Prime Truly Wireless Earbuds

User Instruction Manual

## INTRODUCTION

---

Welcome to the user manual for your Noise Buds X Prime Truly Wireless Earbuds. These earbuds are designed to provide a superior audio experience with extended playtime, clear calls, and quick charging capabilities. This manual will guide you through the setup, operation, maintenance, and troubleshooting of your device to ensure optimal performance.

Key features include:

- Up to 120-hour playtime for extended listening.
- Quad mic with Environmental Noise Cancellation (ENC) for clear communication.
- Powerful 11mm audio drivers for rich, high-quality sound.
- Instacharge™ technology: 10 minutes of charging provides 200 minutes of playtime.
- Low latency (up to 50ms) for a seamless gaming and video experience.
- Premium dual-tone finish and Bluetooth v5.3 connectivity.

## WHAT'S IN THE BOX

---

Please check the contents of your package. It should include:

- 1N Bluetooth Headphone (Pair of Earbuds)
- 1N Charging Case
- 1N Charging Cable
- 1N User Manual
- 1N Warranty Registration Card

## PRODUCT OVERVIEW

---



The Noise Buds X Prime earbuds nestled in their sleek, open charging case, highlighting their metallic silver-grey design.

**Premium dual tone finish**

**Up to 120-hour playtime**

**Quad mic with ENC**

**Instacharge™  
(10-min charge = 200-min playtime)**

**11mm driver  
Low latency (up to 50ms)**

An overview of the Noise Buds X Prime's key features, including its premium design, extended battery life, powerful drivers, fast charging, and advanced microphone system.



 
Detail of the earbud's premium dual-tone finish, emphasizing its aesthetic design.

## SETUP

### 1. Charging the Earbuds and Case

Before first use, fully charge the Noise Buds X Prime. The charging case holds multiple charges for the earbuds, extending their total playtime.

- **Connect the Charging Cable:** Use the provided USB-C cable to connect the charging case to a power source.
- **Charging Indicators:** The LED indicator on the charging case will show the charging status. Refer to the specific light patterns in the full manual for detailed information.
- **Instacharge™:** A quick 10-minute charge can provide up to 200 minutes of playtime for your earbuds. A full charge for the case takes approximately 1.5 hours.



Visual representation of the Instacharge feature, showing earbuds and case with a charging cable.

### 2. Pairing with Your Device

Follow these steps to pair your Noise Buds X Prime with a Bluetooth-enabled device:

1. **Initial Pairing:** Open the charging case. The earbuds will automatically enter pairing mode, indicated by a flashing LED on the earbuds.
2. **Activate Bluetooth:** On your smartphone, tablet, or laptop, enable Bluetooth.
3. **Select Device:** In the list of available Bluetooth devices, select "Noise Buds X Prime".
4. **Confirmation:** Once connected, the earbud LEDs will stop flashing, and you will hear an audio prompt confirming the connection.
5. **Re-pairing:** If the earbuds do not automatically connect to a previously paired device, ensure

Bluetooth is enabled on your device and select "Noise Buds X Prime" from the Bluetooth menu.

The earbuds and case highlighting connectivity features like Hyper Sync and Bluetooth v5.3, along with IPX5 water resistance.

## OPERATING INSTRUCTIONS

The Noise Buds X Prime feature intuitive touch controls for managing your audio and calls.



A visual guide to the touch controls on the Noise Buds X Prime earbuds.

### Touch Controls

Function	Gesture
Play/Pause Music	Tap either earbud twice
Answer Call	Tap either earbud twice
End Call	Tap either earbud twice
Previous Song	Tap the left earbud thrice
Next Song	Tap the right earbud thrice
Volume Up	Tap the right earbud once
Volume Down	Tap the left earbud once
Reject Call	Touch and hold either earbud for 2 seconds
Activate Voice Assistant (Google Assistant/Siri)	Tap right earbud four times
Switch Bass/Normal Mode	Touch and hold right earbud for 2 seconds

## MAINTENANCE

---

Proper care and maintenance will extend the lifespan of your Noise Buds X Prime earbuds.

### Cleaning

- Use a soft, dry, lint-free cloth to clean the earbuds and charging case.
- Gently remove any earwax or debris from the ear tips and speaker mesh using a clean, dry cotton swab or a small, soft brush.
- Do not use abrasive cleaners, alcohol, or chemical solvents.

### Storage

- Always store the earbuds in their charging case when not in use to protect them and keep them charged.
- Store the device in a cool, dry place, away from extreme temperatures and direct sunlight.

### Water Resistance

The Noise Buds X Prime are rated IPX5 water-resistant, meaning they can withstand splashes and sweat. They are not designed for submersion in water. Avoid using them during swimming or showering.

## TROUBLESHOOTING

---

If you encounter issues with your Noise Buds X Prime, try the following solutions:

- **No Sound/One Earbud Not Working:**
  - Ensure both earbuds are charged.
  - Place both earbuds back into the charging case, close the lid, wait a few seconds, then open it again to reset the connection.
  - Check your device's volume settings.
- **Pairing Issues:**
  - Ensure Bluetooth is enabled on your device and the earbuds are in pairing mode.
  - Forget "Noise Buds X Prime" from your device's Bluetooth list and attempt to re-pair.
  - Ensure the earbuds and your device are within the 10-meter Bluetooth range.
- **Charging Issues:**
  - Verify the charging cable is securely connected to both the case and the power source.
  - Ensure the charging contacts on the earbuds and inside the case are clean and free of debris.
  - Try a different charging cable or power adapter.
- **Poor Call Quality:**
  - Ensure the microphones are not obstructed.
  - Move to a quieter environment to benefit from the ENC feature.
  - Check the Bluetooth connection stability.
- **Resetting the Earbuds:** If issues persist, consult the full product manual or Noise support for specific reset instructions, as procedures can vary.

## SPECIFICATIONS

Feature	Detail
Model Name	Buds X Prime
Connectivity Technology	Wireless (Bluetooth)
Bluetooth Version	5.3
Bluetooth Range	10 Metres
Audio Driver Size	11 Millimetres
Battery Life	Up to 120 Hours (with charging case)
Charging Time	Approx. 1.5 Hours (case)
Microphone	Quad Mic with ENC
Water Resistance Level	IPX5
Control Method	Touch
Material	Polycarbonate (PC)
Item Weight	50 Grams
Product Dimensions	6.5 x 4.9 x 2.9 cm
Compatible Devices	Cellphones, Laptops, Tablets

## WARRANTY AND SUPPORT

Your Noise Buds X Prime earbuds come with a **1-Year Warranty** from the date of purchase. This warranty covers manufacturing defects. Please retain your proof of purchase for warranty claims.

For further assistance, technical support, or warranty claims, please contact Noise customer service. You can find more information and support resources on the official Noise website or by visiting the [Noise Store on Amazon](#).

Manufacturer: Nexxbase Marketing Pvt. Ltd, Khasra No-146/25/2/1, Jail Road Badshahpur, Gurugram Haryana-122101.