

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [KitchenAid](#) /

› [KitchenAid 5-Speed Ultra Power Hand Mixer \(Model KHM512PT\) Instruction Manual](#)

## KitchenAid KHM512PT

# KitchenAid 5-Speed Ultra Power Hand Mixer

Model: KHM512PT

## INTRODUCTION

This manual provides essential instructions for the safe and efficient operation, maintenance, and care of your KitchenAid 5-Speed Ultra Power Hand Mixer. Please read all instructions carefully before use and retain for future reference.



Image: The KitchenAid 5-Speed Ultra Power Hand Mixer in a pistachio green color, shown with its stainless steel beaters attached, ready for use.

## IMPORTANT SAFETY INFORMATION

---

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions.
- To protect against risk of electrical shock, do not immerse mixer in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
- Avoid contact with moving parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner.
- The use of attachments not recommended or sold by KitchenAid may cause fire, electric shock, or injury.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter.
- Do not let cord contact hot surfaces, including the stove.
- Remove beaters from mixer before washing.
- This product is designed for household use only.

## **PACKAGE CONTENTS**

---

Your KitchenAid 5-Speed Ultra Power Hand Mixer package includes:

- KitchenAid 5-Speed Ultra Power Hand Mixer unit
- 2 Stainless Steel Turbo Beater™ Accessories



Image: Side view of the KitchenAid 5-Speed Ultra Power Hand Mixer, highlighting its ergonomic design and the "5 SPEED" label.



Image: The two included stainless steel Turbo Beater accessories, designed for efficient mixing.

## SETUP INSTRUCTIONS

---

1. **Unpack the Mixer:** Carefully remove the hand mixer and all accessories from the packaging.
2. **Clean Accessories:** Before first use, wash the Turbo Beater Accessories in warm, soapy water, then rinse and dry thoroughly. The accessories are dishwasher-safe.
3. **Insert Beaters:** Ensure the mixer is unplugged. Insert the Turbo Beater Accessories into the openings on the underside of the mixer. One beater has a collar (or ridge) on its shaft; this beater should be inserted into the larger opening. Push firmly until they click into place.
4. **Position the Cord:** The lockable swivel cord can be positioned to either side of the mixer to keep it out of your way during mixing.
5. **Connect to Power:** Plug the mixer into a standard electrical outlet.

Your browser does not support the video tag.

Video: An official KitchenAid product video demonstrating the setup and basic features of the hand mixer, including inserting and removing beaters.

## OPERATING INSTRUCTIONS

---

The KitchenAid 5-Speed Ultra Power Hand Mixer offers precise control for various mixing tasks.

1. **Select Speed:** Use the speed control slider located on the top of the mixer to select your desired speed from 1 to 5.
  - **Speed 1 (Stir):** Ideal for slowly stirring in chunky ingredients like nuts or chocolate chips, or for gently combining dry ingredients.
  - **Speed 2 (Mix):** Suitable for mixing batters, gravies, and sauces.
  - **Speed 3 (Blend):** For blending heavy mixtures, such as cookie dough or mashed potatoes.
  - **Speed 4 (Beat):** Use for beating eggs or light batters.
  - **Speed 5 (Whip):** Perfect for whipping egg whites, heavy cream, or meringues to stiff peaks.
2. **Start Mixing:** Once the desired speed is selected, the mixer will begin operating. The soft start feature gradually increases the speed to prevent splattering.
3. **Mixing Technique:** Guide the mixer through the ingredients, moving it slowly around the bowl. Avoid hitting the sides of the bowl with the beaters.
4. **Stop Mixing:** Slide the speed control to the "OFF" position (0) to stop the mixer.
5. **Eject Beaters:** With the mixer unplugged, press the eject button to release the Turbo Beater Accessories.



Image: The hand mixer in action, effectively mixing cookie dough in a stainless steel bowl, demonstrating its power for thicker consistencies.

## CLEANING AND MAINTENANCE

---

Proper cleaning and maintenance will ensure the longevity of your hand mixer.

- **Always unplug** the mixer before cleaning.
- **Mixer Body:** Wipe the mixer body with a damp cloth. Do not immerse the mixer in water or other liquids.
- **Turbo Beater Accessories:** The stainless steel Turbo Beater Accessories are dishwasher-safe. They can also be washed by hand in warm, soapy water.
- **Cord:** Wipe the cord clean with a damp cloth if necessary.
- **Storage:** Store the mixer and its accessories in a dry place. The compact design allows for easy storage in a drawer or cabinet.

# TROUBLESHOOTING

Problem	Possible Cause	Solution
Mixer does not operate.	Mixer is not plugged in.	Ensure the mixer is securely plugged into a working electrical outlet.
Beaters are difficult to insert/eject.	Beaters are not aligned correctly or the eject button is not fully pressed.	Ensure the mixer is unplugged. Align the beater with the collar into the larger opening. Press the eject button firmly to release.
Splattering during mixing.	Speed setting is too high for the ingredients, or the soft start feature is not fully utilized.	Start at a lower speed (Speed 1) and gradually increase as needed. Ensure ingredients are fully contained within the mixing bowl.

If the problem persists, please contact KitchenAid Customer Service.

# SPECIFICATIONS

- **Brand:** KitchenAid
- **Model Name:** 5 Speed Ultra Power Hand Mixer
- **Model Number:** KHM512PT
- **Color:** Pistachio
- **Product Dimensions:** 8"D x 3.5"W x 6"H
- **Item Weight:** 2 pounds
- **Controls Type:** Push Button
- **Special Feature:** Detachable Spindle, Lockable Swivel Cord
- **Dishwasher Safe:** Yes (Accessories only)
- **UPC:** 883049546193







# WARRANTY AND SUPPORT

For detailed warranty information and customer support, please refer to the official KitchenAid website or contact their customer service directly. Keep your purchase receipt for warranty claims.

**Online Support:** Visit [www.kitchenaid.com](http://www.kitchenaid.com)

# Related Documents - KHM512PT

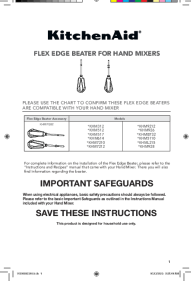

	<p><a href="#">KitchenAid 7 &amp; 9 Speed Hand Mixers: Instructions, Recipes, and Warranty</a></p> <p>Comprehensive guide for KitchenAid 7 and 9 Speed Hand Mixers, including setup, operation, safety, troubleshooting, care, and a collection of recipes. Features warranty information and product details.</p>
	<p><a href="#">KitchenAid Bowl Lift Stand Mixer: Instructions and Recipes</a></p> <p>Explore the capabilities of your KitchenAid Bowl Lift Stand Mixer with this comprehensive guide. It includes detailed instructions, safety information, troubleshooting tips, and a vast collection of recipes for baking and cooking.</p>
	<p><a href="#">KitchenAid Flex Edge Beater for Hand Mixers: Compatibility and Speed Guide</a></p> <p>Find compatibility information and a detailed speed control guide for KitchenAid Flex Edge Beaters (KHMFE2) for various hand mixer models. Includes important safety precautions and usage tips.</p>
	<p><a href="#">KitchenAid Ultra Power Blender 5 Speed: Instructions and Recipes</a></p> <p>Comprehensive guide for the KitchenAid Ultra Power 5-Speed Blender, covering setup, operation, safety precautions, troubleshooting, warranty information, and a variety of recipes.</p>
	<p><a href="#">KitchenAid Stand Mixer User Manual, Guide, and Safety Information</a></p> <p>Comprehensive guide for KitchenAid Stand Mixers, covering parts, features, safety instructions, operating procedures, care and cleaning, troubleshooting tips, and warranty details.</p>
	<p><a href="#">KitchenAid K45SS Owner's Manual and Service Guide</a></p> <p>Comprehensive owner's manual and service guide for the KitchenAid K45SS stand mixer, detailing disassembly, repairs, troubleshooting, and adjustments.</p>



