

JUAREZ JRK651

JUAREZ Octavé JRK651 61-Key Electronic Keyboard Piano User Manual

Model: JRK651

INTRODUCTION

The JUAREZ Octavé JRK651 is a versatile 61-key electronic keyboard designed for beginners, students, and home learners. It features a powerful learning system, a wide sound library, and essential performance features to provide a complete keyboard experience for practice and creativity. This manual provides detailed instructions for setting up, operating, and maintaining your electronic keyboard.

WHAT'S IN THE BOX

Please check the contents of your package to ensure all items are present:

- JUAREZ Octavé JRK651 61-Key Electronic Keyboard
- Power Adapter (DC 9V)
- Wired Microphone
- Key Note Stickers
- User Manual (this document)

SETUP

1. **Power Connection:** Locate the DC 9V power adapter. Insert the small end of the adapter into the "DC 9V" jack on the rear panel of the keyboard. Plug the other end of the adapter into a standard electrical outlet.



Image: Rear panel connections including DC 9V power input.

2. **Turning On:** Press the **POWER** button located on the top left of the keyboard to turn it on.



Image: Control panel with the POWER button.

3. **Microphone Connection:** If using the wired microphone, plug its connector into the "MIC" input jack on the rear panel.
4. **Headphone/Output Connection:** For private practice, connect headphones to the "PHONES/OUTPUT" jack on the rear panel. This will mute the built-in speakers. This jack can also be used to connect to external amplification systems.

5. **Key Note Stickers:** For beginners, apply the provided key note stickers to the corresponding keys as indicated in the sticker guide.
6. **Music Sheet Stand:** Insert the music sheet stand into the designated slots on the top panel of the keyboard.



Image: Front view of the keyboard with music sheet stand.

OPERATING INSTRUCTIONS

Basic Controls

- **POWER Button:** Turns the keyboard on or off.
- **MASTER VOL +/-:** Adjusts the overall volume of the keyboard.
- **FUNCTION Button:** Used to access various advanced settings and modes. Press this button, then use the number keys or other function buttons to select specific parameters.
- **START/STOP Button:** Starts or stops rhythm playback and demo songs.



Image: Central control panel with main function buttons.

Timbres (Tones)

The keyboard features 300 different instrument timbres. To select a timbre:

1. Press the **TIMBRES** button.
2. Use the number keys (0-9) to enter the desired timbre number. Refer to the timbre list in the full user manual for specific numbers.

Rhythms

The keyboard includes 300 rhythm styles. To select and play a rhythm:

1. Press the **RHYTHMS** button.
2. Use the number keys (0-9) to enter the desired rhythm number.
3. Press **START/STOP** to begin rhythm playback.
4. Press **START/STOP** again to stop the rhythm.



Image: Left-side control panel with RHYTHMS and CHORD buttons.

Demo Songs

There are 21 built-in demo songs. To play a demo song:

1. Press the **DEMO SONGS** button.
2. Use the number keys (0-9) to select a specific demo song, or press **DEMO SONGS** repeatedly to cycle through them.
3. Press **START/STOP** to stop playback.

Learning Modes (3-Step Learning)

The keyboard features an intelligent 3-step learning system to assist beginners:

- **One-Key Mode:** Allows you to play along with a demo song by pressing any key. The correct note will sound regardless of which key is pressed.
- **Follow Mode:** The keyboard waits for you to play the correct note before proceeding with the song.
- **Ensemble Mode:** You play the melody while the keyboard plays the accompaniment.

Refer to the full user manual for detailed instructions on activating and using each learning mode.

Recording and Playback

You can record your performances and play them back:

- **RECORD:** Press this button to start recording your playing.
- **PLAY:** Press this button to play back your recorded performance.



Image: Left-side control panel with RECORD and PLAY buttons.

Advanced Controls

- **Tempo Adjustment (30–240 BPM):** Use the **TEMPO +/-** buttons to increase or decrease the speed of rhythms and demo songs.
- **Metronome:** Press the **METRONOME** button to activate a click track for timing practice.
- **Transpose:** Adjusts the pitch of the keyboard up or down in semitone steps. Use the **TRANSPOSE +/-** buttons.
- **Split Keyboard:** Divides the keyboard into two sections, allowing two different voices or functions to be played simultaneously.
- **Sustain:** Adds a decaying effect to notes, similar to a piano's sustain pedal.
- **Vibrato:** Adds a slight pitch modulation effect to notes.
- **Percussion Effects:** Access various percussion sounds.
- **Chord Modes (Single Chord & Fingered Chord):** Allows for automatic chord accompaniment. **Single Chord** mode plays a major chord by pressing a single key in the lower range. **Fingered Chord** mode recognizes full chord voicings.

MAINTENANCE

- **Cleaning:** Wipe the keyboard surface with a soft, dry cloth. For stubborn dirt, use a slightly damp cloth and then dry thoroughly. Avoid using abrasive cleaners, solvents, or waxes.
- **Storage:** Store the keyboard in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity.
- **Handling:** Avoid dropping the keyboard or subjecting it to strong impacts. Do not place heavy objects on top of it.
- **Power Off:** Always turn off the keyboard and unplug the power adapter when not in use for extended

periods.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No sound from speakers.	<ul style="list-style-type: none">Keyboard not powered on.Volume too low.Headphones connected.	<ul style="list-style-type: none">Press the POWER button.Increase MASTER VOL.Unplug headphones from the PHONES/OUTPUT jack.
Keyboard does not turn on.	<ul style="list-style-type: none">Power adapter not connected properly.Power outlet not working.	<ul style="list-style-type: none">Ensure the power adapter is securely plugged into both the keyboard and the wall outlet.Try a different power outlet.
Rhythm or demo song not playing.	<ul style="list-style-type: none">Rhythm/Demo not selected.START/STOP not pressed.	<ul style="list-style-type: none">Select a rhythm or demo song number.Press the START/STOP button.
Microphone not working.	<ul style="list-style-type: none">Microphone not plugged in correctly.Microphone volume too low (if applicable).	<ul style="list-style-type: none">Ensure the microphone is fully inserted into the MIC jack.Check if there's a separate microphone volume control (if available on the keyboard or mic).

SPECIFICATIONS

Feature	Detail
Number of Keys	61 Full-Size Keys
Timbres (Tones)	300
Rhythms	300
Demo Songs	21
Learning Modes	One-Key, Follow, Ensemble (3-Step Learning)
Recording	Record & Playback Function
Tempo Range	30–240 BPM
Effects	Sustain, Vibrato, Split, Percussion
Chord Modes	Single Chord & Fingered Chord
Metronome	Yes

Feature	Detail
Speakers	Built-in Dual Speakers
Connectivity	Mic Input, Audio Input, Headphone/Output Jack
Power Supply	DC 9V Adapter
Product Dimensions	80 x 80 x 20 cm
Item Weight	1.5 kg

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included in your product packaging or visit the official JUAREZ website. Keep your purchase receipt as proof of purchase for any warranty claims.

Manufacturer: Juarez, PHOTRONICS INC

Country of Origin: China

For further assistance, you may contact JUAREZ customer service through their official channels.