

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Emerson](#) /

› Emerson Portable CD Player Boombox with Cassette Player Combo, Tape Recorder, AM/FM Radio, AUX, Headphone Jack, Dual Speakers - Model EPB-3003 User Manual

Emerson EPB-3003



Emerson Portable CD Player Boombox with Cassette Player Combo, Tape Recorder, AM/FM Radio, AUX, Headphone Jack, Dual Speakers - Model EPB-3003 User Manual

Your guide to setup, operation, and maintenance.

1. IMPORTANT SAFETY INFORMATION

Please read and understand all safety instructions before using this product. Keep this manual for future reference.

- **Power Source:** Operate the unit only from the power sources indicated on the marking label.
- **Ventilation:** Ensure proper ventilation. Do not block any ventilation openings.
- **Water and Moisture:** Do not expose the unit to rain, moisture, dripping, or splashing. Do not place objects filled with liquids on the unit.
- **Heat:** Keep the unit away from heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- **Cleaning:** Unplug the unit from the wall outlet before cleaning. Use a soft, dry cloth only.
- **Servicing:** Do not attempt to service this product yourself. Refer all servicing to qualified service personnel.

2. PRODUCT OVERVIEW

The Emerson EPB-3003 is a versatile portable audio system designed for various listening experiences. It features a top-loading CD player, a cassette player/recorder, and an AM/FM radio. The unit can be powered by AC or batteries, offering flexibility for both indoor and outdoor use.



Figure 2.1: Front view of the Emerson EPB-3003 Portable CD Player Boombox, showing the dual speakers, control panel, and carrying handle.

Key Features:

- Top-loading CD Player (CD, CD-R, CD-RW compatible)
- Cassette Player and Tape Recorder
- Digital AM/FM Stereo Radio with PLL technology
- 3.5mm AUX Input for external devices
- Headphone Jack
- Dual Speakers for clear stereo sound
- AC/DC and Battery Operated for portability

Controls and Components:

Refer to the diagram below for an overview of the unit's controls and components.



A portable boombox to keep the music playing wherever you go!

Figure 2.2: Diagram illustrating the main controls and components of the boombox, including the display, function buttons, volume, and tuning controls.

1. **FUNCTION Button:** Selects between CD, Radio, Tape, and AUX modes.
2. **SCAN/PLAY/PAUSE Button:** Initiates scan in radio mode, plays/pauses CD or cassette.
3. **STOP Button:** Stops playback.
4. **SKIP/SEARCH Buttons (◀◀ / ▶▶):** Skips tracks on CD, searches on cassette, tunes radio stations.
5. **MEM.- / MEM.+ Buttons:** Stores and recalls radio presets.
6. **TUN. (Tune) Buttons (+/-):** Fine-tunes radio frequency.
7. **VOL. (Volume) Buttons (+/-):** Adjusts audio volume.
8. **PROG./P-MODE Button:** Programs CD tracks, selects playback mode.
9. **Display:** Shows current mode, track number, frequency, etc.
10. **CD Compartment:** For loading compact discs.
11. **Cassette Compartment:** For loading audio cassettes.
12. **Telescopic Antenna:** For FM radio reception.
13. **AUX Input Jack:** Connects external audio devices.
14. **Headphone Jack:** For private listening.
15. **AC Power Input:** Connects to the AC power adapter.
16. **Battery Compartment:** For DC power using batteries.

3. SETUP

3.1 Powering the Unit

The boombox can be powered by either AC power or batteries.

AC Power Operation:

1. Ensure the unit is turned off.
2. Connect the supplied AC power adapter cord to the AC power input jack on the back of the unit.
3. Plug the other end of the AC power adapter into a standard wall outlet (120V AC, 60Hz).

Battery Operation:

For portable use, the unit requires 6 x 'C' size batteries (not included).

1. Ensure the unit is turned off and disconnected from AC power.
2. Open the battery compartment cover located on the bottom of the unit.

3. Insert 6 'C' size batteries, observing the correct polarity (+ and -) as indicated inside the compartment.
4. Close the battery compartment cover securely.

Note: Remove batteries if the unit will not be used for an extended period to prevent leakage and damage.

3.2 Antenna Setup

For optimal FM radio reception, fully extend the telescopic antenna. For AM reception, the unit has a built-in antenna, so no adjustment is typically needed. If AM reception is poor, try repositioning the unit.

4. OPERATING INSTRUCTIONS

4.1 General Operation

1. Press the **POWER** button to turn the unit on.
2. Press the **FUNCTION** button repeatedly to select the desired mode: CD, RADIO, TAPE, or AUX.
3. Adjust the volume using the **VOL. +/-** buttons.
4. Press the **POWER** button again to turn the unit off.

4.2 CD Player Operation



Figure 4.1: Loading a compact disc into the top-loading CD compartment.

1. Press the **FUNCTION** button to select CD mode. The display will show "CD" or "OP" (Open).
2. Open the CD compartment cover.
3. Place a CD with the label side facing up onto the center spindle.
4. Close the CD compartment cover. The unit will read the disc, and the total number of tracks will appear on the display.
5. Press the **PLAY/PAUSE** button (▶/■) to start playback. The current track number will be displayed.
6. To pause playback, press the **PLAY/PAUSE** button (▶/■). Press again to resume.
7. To stop playback, press the **STOP** button (■).
8. To skip to the next track, press the **SKIP/SEARCH** button (▶▶).
9. To go back to the beginning of the current track or previous tracks, press the **SKIP/SEARCH** button (◀◀).
10. To fast forward or rewind within a track, press and hold the **SKIP/SEARCH** buttons (▶▶ or ◀◀).

Programmed Playback:

1. In STOP mode, press the **PROG./P-MODE** button. The display will show "P01".
2. Use the **SKIP/SEARCH** buttons (◀◀ / ▶▶) to select the desired track.

3. Press **PROG./P-MODE** again to confirm the track. Repeat for up to 20 tracks.
4. Press **PLAY/PAUSE** to start programmed playback.

4.3 Cassette Player/Recorder Operation



Figure 4.2: Inserting a cassette tape into the front-loading compartment.

1. Press the **FUNCTION** button to select TAPE mode.
2. Open the cassette compartment door.
3. Insert a cassette tape with the open edge facing upwards.
4. Close the cassette compartment door.
5. Press the **PLAY** button (▶) on the cassette control panel to start playback.
6. To stop playback, press the **STOP/EJECT** button (■).
7. To fast forward, press the **FAST FORWARD** button (▶▶).
8. To rewind, press the **REWIND** button (◀◀).
9. To pause playback, press the **PAUSE** button (■■). Press again to resume.

Recording to Cassette:



Figure 4.3: Preparing to record to a cassette tape.

You can record from the radio or the AUX input.

1. Insert a blank cassette tape into the cassette compartment.

2. Select the desired source (RADIO or AUX) using the **FUNCTION** button.
3. Start playing the audio you wish to record (tune to a radio station or start playback from the AUX device).
4. Press the **RECORD** button (●) on the cassette control panel. The **PLAY** button (▶) will also engage. Recording will begin.
5. To stop recording, press the **STOP/EJECT** button (■).

4.4 AM/FM Radio Operation



Portable and Compact All-in-One Boombox

A built-in handle and power versatility provide the ultimate portability.

Figure 4.4: The boombox tuned to an AM/FM radio station.

1. Press the **FUNCTION** button to select RADIO mode.
2. Extend the telescopic antenna for FM reception.
3. Press the **SCAN** button to automatically scan and store available stations.
4. Alternatively, use the **TUN. +/-** buttons to manually tune to a desired frequency.
5. To recall stored stations, use the **MEM.- / MEM.+** buttons.

4.5 AUX Input

The AUX input allows you to connect external audio devices (e.g., smartphones, MP3 players) to play through the boombox speakers.

1. Press the **FUNCTION** button to select AUX mode.
2. Connect one end of a 3.5mm audio cable (not included) to the AUX input jack on the boombox.
3. Connect the other end of the audio cable to the headphone jack or audio output of your external device.
4. Start playback on your external device.
5. Adjust the volume on both the boombox and your external device for optimal sound.

4.6 Headphone Jack

For private listening, plug standard 3.5mm headphones (not included) into the headphone jack. The speakers will automatically mute.

5. MAINTENANCE

5.1 Cleaning the Unit

- Unplug the unit from the power source before cleaning.
- Use a soft, dry cloth to wipe the exterior surfaces.
- Do not use abrasive cleaners, waxes, or solvents as they may damage the finish.

5.2 CD Player Care

- Handle CDs by their edges to avoid fingerprints and scratches.
- Clean CDs with a soft, lint-free cloth, wiping from the center outwards.
- Do not use solvents or abrasive cleaners on CDs.

5.3 Cassette Player Care

- Keep the cassette compartment clean. Dust and debris can affect playback quality.
- Periodically clean the tape heads and pinch rollers with a cotton swab lightly dampened with isopropyl alcohol.
- Avoid exposing tapes to direct sunlight or extreme temperatures.

6. TROUBLESHOOTING

If you experience issues with your boombox, refer to the following table for common problems and solutions.

Problem	Possible Cause	Solution
No power	AC adapter not connected; Batteries depleted or incorrectly inserted.	Check AC connection; Replace batteries or ensure correct polarity.
No sound	Volume too low; Headphones connected; Incorrect function mode.	Increase volume; Disconnect headphones; Select correct mode (CD, Radio, Tape, AUX).
CD not playing	CD inserted incorrectly; CD dirty or scratched; Disc not compatible.	Insert CD label-side up; Clean or replace CD; Ensure CD-R/RW compatibility.
Cassette not playing/recording	Cassette inserted incorrectly; Tape heads dirty; Tape damaged.	Insert cassette correctly; Clean tape heads; Try a different tape.
Poor radio reception	Antenna not extended; Unit location.	Fully extend FM antenna; Reposition the unit for better AM reception.
AUX input not working	Cable not connected; Incorrect function mode; External device volume low.	Check 3.5mm cable connection; Select AUX mode; Increase volume on external device.

7. SPECIFICATIONS

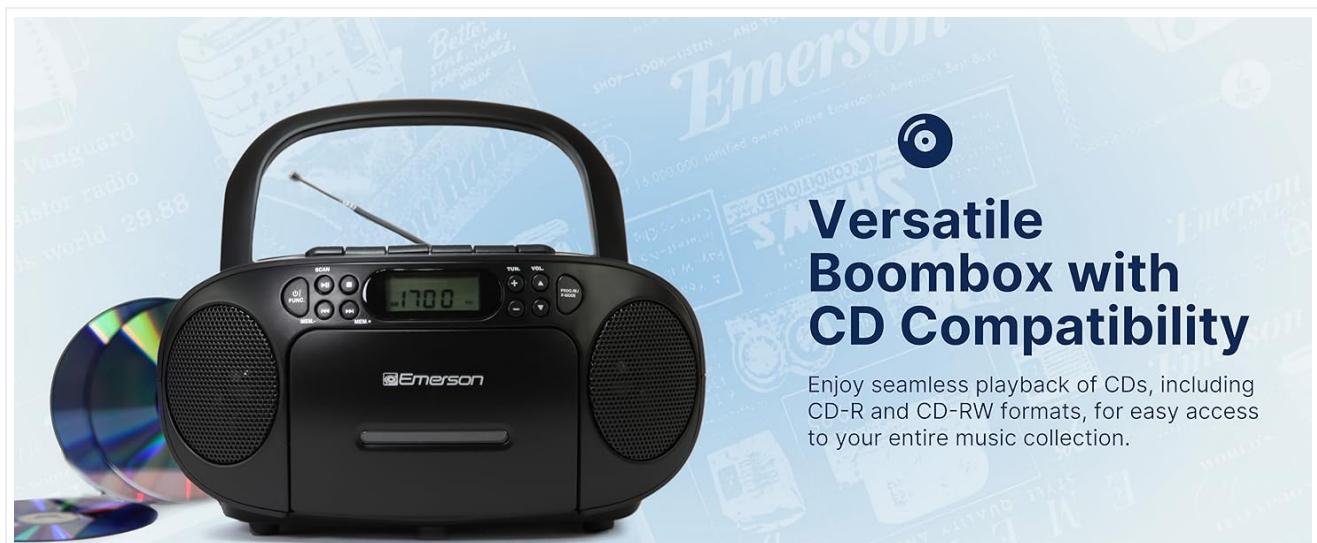


Figure 7.1: Product dimensions of the Emerson EPB-3003.

- **Model:** EPB-3003
- **Power Source:** AC 120V ~ 60Hz or 6 x 'C' size batteries (DC 9V)
- **Radio Frequency:** FM: 88-108 MHz, AM: 530-1710 kHz
- **CD Compatibility:** CD, CD-R, CD-RW
- **Connectivity:** 3.5mm AUX Input, 3.5mm Headphone Jack
- **Speakers:** Dual Stereo Speakers
- **Product Dimensions (L x W x H):** 9.1 x 8.5 x 4.5 inches (23.1 x 21.6 x 11.4 cm)
- **Item Weight:** 2.86 pounds (1.3 kg)
- **Manufacturer:** Naxa Electronics, Inc.

8. WARRANTY AND SUPPORT

This product is covered by a limited manufacturer's warranty. For specific warranty details, please refer to the warranty card included with your purchase or contact Emerson customer support.

Customer Support:

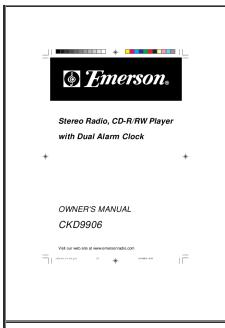
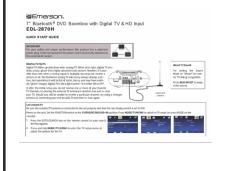
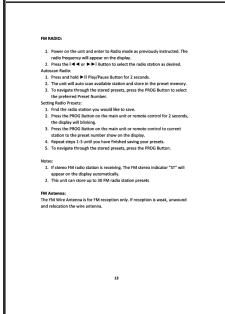
For technical assistance, troubleshooting, or warranty inquiries, please contact Emerson customer support through their official website or the contact information provided in your product packaging.

Please have your model number (EPB-3003) and purchase date available when contacting support.

© 2023 Emerson. All rights reserved.

Related Documents - EPB-3003

 Emerson MP3/CD Bass Reflex Boombox with Bluetooth® EPB-3001 Instruction Manual	<p>This manual provides detailed instructions for operating the Emerson EPB-3001 MP3/CD Bass Reflex Boombox with Bluetooth®. Learn about its features, controls, and how to use various modes including CD, USB, Bluetooth®, Radio, and Aux.</p>
 Emerson PD6870RD/PD6870CH Portable CD Player AM/FM Radio Cassette Recorder Owner's Manual	<p>Comprehensive owner's manual for the Emerson PD6870RD and PD6870CH portable CD player, featuring AM/FM digital tuner and cassette recorder. Includes setup, operation, safety, troubleshooting, and maintenance guides.</p>
 Emerson PD3812 Portable CD/Cassette Player with AM/FM Tuner - Owner's Manual	<p>Comprehensive owner's manual for the Emerson PD3812 portable CD-R/RW player with AM/FM digital tuner and cassette recorder. Covers setup, operation, safety instructions, maintenance, and warranty.</p>

	<p><u>Emerson CKD9906 Stereo Radio, CD-R/RW Player, Dual Alarm Clock - Owner's Manual</u></p> <p>Official owner's manual for the Emerson CKD9906 Stereo Radio, CD-R/RW Player with Dual Alarm Clock. Provides detailed instructions on setup, operation, safety, maintenance, and troubleshooting.</p>
	<p><u>Emerson EDL-2870H 7" Bluetooth DVD Boombox Quick Start Guide</u></p> <p>Concise guide to setting up and using the Emerson EDL-2870H 7-inch Bluetooth DVD Boombox with Digital TV and HD Input, covering TV, DVD, Bluetooth, and Radio functions.</p>
	<p><u>Emerson ES-4000 Micro System User Manual: CD, MP3, Bluetooth, FM Radio</u></p> <p>This user manual provides comprehensive instructions for operating the Emerson ES-4000 Micro System. Learn how to use its CD/MP3 player, Bluetooth connectivity, FM radio, and other features. Includes troubleshooting tips and specifications.</p>

Documents - Emerson – EPB-3003



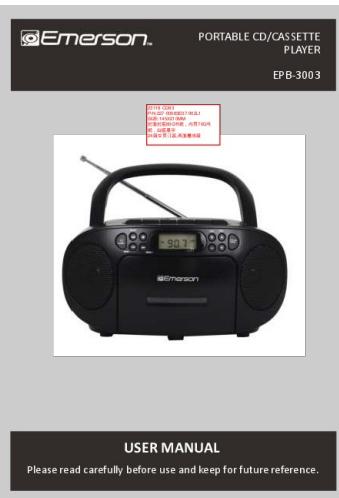
[\[pdf\] User Manual Instructions Accessories](#)

Product Manual Emerson® CD Cassette Radio Boom Box EP 3003 Black

8b5824e94ed44b6fa7894857cefb9b3614398be8 manual 1 NAXEPB3003BLCK petra attachment

9695320 663bd7c16d658310033878 |||

PORTABLE CD/CASSETTE PLAYER **EPB-3003** 23118-CD83 P/N:227-00083E07-002L1 SIZE:145X210MM 80G 70G 24 12 , USER MANUAL Please read carefully before use and keep for future reference. SAFETY INSTRUCTIONS 1. Read these instructions All the safety and operating instructions should be read before ...
lang:en score:35 filesize: 4.95 M page_count: 24 document date: 2024-05-08



[\[pdf\]](#) User Manual Instructions Accessories

USER MANUAL 15 ore fa — Please read carefully before use and keep for future reference PORTABLE CD CASSETTE PLAYER EPB 3003 23118 CD83 P N 227 00083E07 002L1 SIZE

c4ae2f0a61aea7ad86cb5391b15b823eaaa575fa manual 1 NAXEPB3003WHT petra attachment 9695322 663bd7c677d1b797234310 |||

PORTABLE CD/CASSETTE PLAYER **EPB-3003** 23118-CD83 P/N:227-00083E07-002L1 SIZE:145X210MM 80G 70G 24 12 , USER MANUAL Please read carefully before use and keep for future reference. SAFETY INSTRUCTIONS 1. Read these instructions All the safety and operating instructions should be read before ...

lang:en **score:31** filesize: 4.95 M page_count: 24 document date: 2024-05-08



[\[pdf\]](#) User Manual Instructions Accessories

EPB 3003 Manual English Spanish Download Product ManualPortable CD Cassette Player with AM FM Stereo EMERSONAUDIOEPB 23c2e69b e25e 42fb 845a e2e13bd094ffEPB e2e13bd094ffemersonaudio cdn shop files e2e13bd094ff v 8922997174868182237emersonaudio 8922997174868182237 |||

PORTABLE CD/CASSETTE PLAYER **EPB-3003** USER MANUAL Please read carefully before use and keep for future reference. SAFETY INSTRUCTIONS 1. Read these instructions - All the safety and operating instructions should be read before this product is operated. 2. Keep these instructions. The safety and ope...

lang:en **score:29** filesize: 4.92 M page_count: 24 document date: 2024-02-17