

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Furby](#) /

› **Furby Furblets Pix-Elle Mini Friend Instruction Manual**

Furby F8898

Furby Furblets Pix-Elle Mini Friend Instruction Manual

MODEL: F8898

INTRODUCTION

Welcome to the world of Furblets! The Furby Furblets Pix-Elle Mini Friend is a compact, interactive electronic plush toy designed to bring joy with its unique musical personality and over 45 sounds and Furbish phrases. This manual provides essential information for setting up, operating, and maintaining your Pix-Elle Furblet.



Image: Front view of the Furby Furblets Pix-Elle Mini Friend in its colorful retail packaging.

SETUP

What's in the Box

- 1 Furblets figure
- 1 Keychain clip

Battery Installation and Power On

Your Furblet Pix-Elle comes with 3 A76/LR44 button cell batteries already installed. To activate your Furblet and make its ears pop open, press the top of its head. This also serves as the on/off switch.



Image: A hand pressing the top of the Furblet's head, indicating the power-on and ear-pop activation point.

OPERATING YOUR FURBLET

Interacting with Pix-Elle

Your Furblet Pix-Elle offers over 45 unique sounds, including gamer music and Furbish phrases. There are three main interaction points:

- **Press the top of the head:** Activates fun Furbish phrases and serves as the on-off switch. This also makes the peekaboo ears pop open.
- **Tap the heart gem:** Activates music. Pix-Elle plays upbeat gamer tunes.
- **Press the beak:** Triggers fun feeding noises.



Image: A visual guide highlighting the three interactive points on the Furblet: top of the head, heart gem, and beak.

Harmonizing with Other Furblets

Furblets are designed to sing together! Collect more than one interactive pet (sold separately), and they will harmonize when placed near each other and activated. Each Furblet has a different music style personality.

Interaction with Full-Size Furby (2023 and later)

If you own the latest Furby from 2023 or a newer model, activate its Furdar mode. Your Furby will interact with your Furblets, offering unique phrases about its 'dee noo-lahs' (little friends).



Image: The Pix-Elle Furblet positioned next to a larger, full-size Furby, demonstrating their interactive capability.

Portability

The Furble Pix-Elle includes a removable keychain clip. This allows you to attach your mini friend to backpacks or other travel bags, taking the fun wherever you go.



Image: The Furby Furblets Pix-Elle Mini Friend shown outside its packaging, highlighting its attached keychain clip.

OFFICIAL PRODUCT VIDEOS

Furby Furblets (World Of Video)

Your browser does not support the video tag.

Video: An official promotional video showcasing the various Furby Furblets and their interactive features, including sounds and ear movements.

Furby Furblets Video

Your browser does not support the video tag.

Video: A short official video demonstrating the playful nature and sound capabilities of the Furby Furblets.

MAINTENANCE

Cleaning and Care

To keep your Furblet Pix-Elle clean, perform surface cleaning only. Do not immerse the toy in water or use harsh cleaning agents. Gently wipe with a damp cloth as needed.

TROUBLESHOOTING

No Sound or Intermittent Functionality

If your Furblet is not producing sounds or is behaving erratically, the batteries may be low or depleted. Replace the 3 A76/LR44 button cell batteries with new ones. Ensure they are inserted correctly according to polarity markings.

If the issue persists after replacing batteries, ensure all interactive points (top of head, heart gem, beak) are being pressed firmly and correctly. If the problem continues, contact customer support.

SPECIFICATIONS

Feature	Detail
Product Dimensions	3.75 x 2.09 x 5 inches
Item Weight	3.7 ounces
Item Model Number	F8898
Manufacturer Recommended Age	6 years and up
Batteries	3 LR44 batteries required (included)
Manufacturer	Hasbro

SAFETY INFORMATION

WARNING: Small parts may be generated. Not for children under 3 years.

WARRANTY AND SUPPORT

For warranty information or product support, please refer to the manufacturer's official website or contact their customer service department. Keep your proof of purchase for any warranty claims.