

Stalwart 75-PT2000

Stalwart Cordless Electric Scissors User Manual

Model: 75-PT2000

1. INTRODUCTION

Thank you for purchasing the Stalwart Cordless Electric Scissors. This tool is designed for efficient cutting of various materials such as fabric, leather, carpet, and cardboard. Please read this manual thoroughly before operating the device to ensure safe and proper use. Keep this manual for future reference.

2. SAFETY INFORMATION

WARNING: Read all safety warnings and instructions. Failure to follow the warnings and instructions may result in electric shock, fire, and/or serious injury.

- **Keep Work Area Clean:** Cluttered areas invite accidents.
- **Avoid Dangerous Environments:** Do not use power tools in damp or wet locations, or expose them to rain. Keep work area well lit.
- **Keep Children Away:** All visitors should be kept at a safe distance from the work area.
- **Dress Properly:** Do not wear loose clothing or jewelry. Contain long hair. Loose clothing, jewelry, or long hair can be caught in moving parts.
- **Use Safety Equipment:** Always wear eye protection. Use a face or dust mask if cutting operations create dust.
- **Stay Alert:** Watch what you are doing, use common sense. Do not operate tool when you are tired.
- **Secure Workpiece:** Use clamps or a vise to hold the workpiece. This is safer than using your hand and it frees both hands to operate the tool.
- **Do Not Overreach:** Keep proper footing and balance at all times.
- **Disconnect Tools:** Disconnect the tool from the power source before making any adjustments, changing accessories, or storing the tool.

- **Avoid Accidental Starting:** Ensure the switch is in the off position before plugging in.
- **Check for Damaged Parts:** Before further use of the tool, a guard or other part that is damaged should be carefully checked to determine that it will operate properly and perform its intended function.
- **Blade Safety:** Blades are sharp. Handle with care. Always use blade guards when not in use or during storage.
- **Battery Safety:** Use only the charger supplied with the tool. Do not expose the battery to extreme temperatures or disassemble it.

3. PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- Stalwart Cordless Electric Scissors (1 unit)
- Stainless-Steel Blades (2 sets)
- Blade Guards (2 units)
- Power Cord (for charging)

4. PRODUCT OVERVIEW

Familiarize yourself with the components of your Stalwart Cordless Electric Scissors:



Image: Labeled diagram of the electric scissors showing the AC Power Port, Ergonomic Grip, Safety Button, Trigger, Lock/Unlock mechanism, and Stainless-Steel Blades.

- **Stainless-Steel Blades:** For cutting various materials.
- **Lock/Unlock Switch:** Engages or disengages the blade mechanism for safety.
- **Safety Button:** Must be pressed simultaneously with the trigger to operate the scissors.
- **Trigger:** Activates the cutting action when pressed with the safety button.
- **Ergonomic Grip:** Designed for comfortable use by both right and left-handed users.
- **AC Power Port:** For connecting the charging cord.



Image: Side view of the Stalwart Cordless Electric Scissors, highlighting its compact design.

5. SETUP

5.1 Charging the Battery

The electric scissors are powered by a rechargeable lithium-ion battery. Before first use, fully charge the battery.

1. Ensure the scissors are turned off and the lock/unlock switch is in the locked position.
2. Insert the charging cord into the AC Power Port on the rear of the scissors.
3. Plug the other end of the charging cord into a standard electrical outlet.
4. The charging indicator light (if present) will illuminate to show charging is in progress.
5. Allow the battery to charge completely. Charging time may vary.
6. Once charged, disconnect the charging cord from the scissors and the outlet.

CORDLESS CONVENIENCE



Powered by
Lithium-Ion Battery



Recharge with
Standard Power Cord

Image: The electric scissors with the charging cable connected, illustrating the cordless convenience and charging method.

5.2 Blade Installation and Replacement

The scissors come with two sets of durable stainless-steel blades. Always ensure the scissors are off and unplugged before handling blades.

1. Locate the blade release mechanism, typically a small lever or button near the blades.
2. Press the release mechanism and carefully slide the existing blades off.
3. Align the new blades with the slot and slide them into place until they click securely.
4. Ensure the blades are firmly seated before operation.
5. Always use the provided blade guards when storing or transporting the blades.

DURABLE BLADES



Stainless-Steel Blades



**85-degree Angle for
Optimal Maneuverability**



**Extra Blades &
Blade Guards**



Easy to Install & Replace


Image: A close-up of hands demonstrating the installation of durable stainless-steel blades onto the electric scissors.

6. OPERATING INSTRUCTIONS


6.1 Powering On and Off

1. To power on, slide the Lock/Unlock switch to the unlocked position.
2. Press and hold the Safety Button located on the side of the grip.
3. While holding the Safety Button, press the Trigger to activate the blades.
4. To stop cutting, release the Trigger.
5. For safety, always slide the Lock/Unlock switch to the locked position when not in use.

ERGONOMIC DESIGN

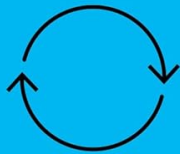

Fits Both Right &
Left Handed Users

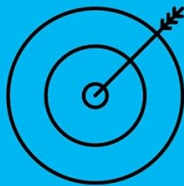

Precise Cutting



Easy One Button
Operation

Image: A hand gripping the electric scissors, illustrating the ergonomic design suitable for both right and left-handed users and single-button operation.

6.2 Cutting Techniques

The electric scissors are designed for precise cutting of various materials. Always ensure the material is flat and stable before cutting.

- **General Use:** Position the material between the blades. Press the safety button and trigger to begin cutting. Guide the scissors smoothly along your desired cutting line.
- **Fabric and Leather:** These scissors are effective for various fabrics and leather types. Ensure the material is not bunched up to prevent uneven cuts.
- **Carpet:** For carpet, apply steady pressure and guide the scissors slowly. The 85-degree blade angle is optimized for maneuverability.
- **Cardboard:** The scissors can cut through standard cardboard. For very thick or corrugated cardboard, proceed slowly and do not force the tool.

USE ELECTRIC SCISSORS WITH:



Cardboard



Carpet



Fabric



Leather & More

Image: Four panels showing the electric scissors effectively cutting cardboard, carpet, fabric, and leather, demonstrating its versatility.

7. MAINTENANCE

7.1 Cleaning

Regular cleaning ensures optimal performance and extends the life of your tool.

1. Ensure the scissors are off, locked, and unplugged before cleaning.
2. Use a dry cloth to wipe down the body of the scissors.
3. Carefully remove any material debris from around the blades. A small brush can be used for this purpose.
4. Do not use harsh chemicals or abrasive cleaners.

7.2 Blade Care

Keep blades sharp and clean for best cutting results.

- Inspect blades regularly for dullness or damage. Replace dull blades with a new set.
- After cutting sticky materials, clean the blades to prevent residue buildup.

- Always use blade guards when blades are not in use to protect them and prevent accidental injury.

7.3 Storage

Proper storage protects your tool and ensures its readiness for future use.

- Store the electric scissors in a dry, clean place, away from direct sunlight and extreme temperatures.
- Ensure the Lock/Unlock switch is in the locked position and blade guards are in place.
- Keep out of reach of children.

8. TROUBLESHOOTING

If you encounter issues with your Stalwart Cordless Electric Scissors, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Scissors do not turn on.	Battery is not charged. Lock/Unlock switch is in locked position. Safety button and trigger not pressed correctly.	Charge the battery fully. Slide switch to unlocked position. Press safety button and trigger simultaneously.
Poor cutting performance.	Blades are dull or dirty. Material is too thick or hard for the tool. Blades are not properly installed.	Clean or replace blades. Do not force the tool; use appropriate tools for very tough materials. Reinstall blades securely.
Battery life is short.	Battery not fully charged. Battery is old or damaged.	Ensure battery is fully charged before use. Contact customer support for battery replacement options.

If the problem persists after attempting these solutions, please contact Stalwart customer support.

9. SPECIFICATIONS

Key technical specifications for the Stalwart Cordless Electric Scissors, Model 75-PT2000:



Image: Diagram showing the dimensions of the Stalwart Cordless Electric Scissors, including length, width, height, and blade length.

- **Model Number:** 75-PT2000
- **Power Source:** Lithium-Ion Battery (3.6V)
- **Blade Material:** Stainless Steel
- **Blade Angle:** 85-degree (for optimal maneuverability)
- **Product Dimensions (L x W x H):** 9.5 inches x 1.5 inches x 4 inches
- **Blade Length:** 1.75 inches
- **Weight:** Approximately 1 lb
- **Charging Cord Length:** 45 inches
- **Color:** Red and Black
- **Handle Orientation:** Ambidextrous

10. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the warranty card included with your purchase or visit the official Stalwart website. You may also contact Stalwart customer service directly for assistance with product inquiries, parts, or service.

Stalwart Customer Service: Please refer to your product packaging or the Stalwart brand website for current contact information.

