

Emerson EDS-1200

Emerson EDS-1200 Portable Bluetooth Party Speaker Instruction Manual

Model: EDS-1200

1. INTRODUCTION

Thank you for purchasing the Emerson EDS-1200 Portable Bluetooth Party Speaker. This manual provides essential information for the safe and efficient operation of your device. Please read it thoroughly before use and retain it for future reference.



2. WHAT'S IN THE BOX

- Emerson EDS-1200 Portable Bluetooth Party Speaker
- Wired Microphone
- Remote Control
- UL Power Adapter
- User Manual (this document)

3. PRODUCT OVERVIEW & FEATURES

The Emerson EDS-1200 is designed for versatile audio playback and entertainment. Key features include:

- **12" Full-Frequency Speaker:** Delivers powerful sound with deep bass and clear highs.
- **Bluetooth Wireless Technology:** Seamlessly stream audio from compatible devices.
- **Vibrant LED Lighting:** Multicolor LED lights that pulse with the music, enhancing atmosphere.
- **TWS Function:** Pair with another TWS-enabled speaker for true stereo sound.
- **Built-in Rechargeable Battery:** Provides portable power for extended playtime.
- **Included Wired Microphone:** Ideal for karaoke, speeches, or announcements.
- **Versatile Media Playback:** Supports USB, TF card, and AUX inputs.
- **FM Radio:** Built-in tuner for local radio stations.
- **Portable Design:** Integrated carry handle and wheels for easy transport.



Figure 2: Front view of the speaker, showcasing the 12-inch full-frequency driver.



Figure 3: Side view of the speaker, illustrating its compact and portable design.

4. SETUP

4.1 Charging the Battery

1. Connect the UL Power Adapter to the DC 9V input port on the speaker's control panel.
2. Plug the adapter into a standard wall outlet.
3. The "CHARGE LED" indicator will illuminate during charging. It will change color or turn off when fully charged.

4.2 Powering On/Off

Locate the "POWER" switch on the control panel. Flip it to the "ON" position to power on the speaker, and to "OFF" to power it down.

4.3 Connecting the Microphone

Insert the wired microphone's plug into the "MIC IN" port on the control panel. Ensure the microphone's on/off switch is in the "ON" position when in use.



Figure 4: The included wired microphone for karaoke and announcements.

5. OPERATING INSTRUCTIONS

5.1 Control Panel Overview

The top panel of the speaker features various controls and inputs:

- **LED Display:** Shows current mode, track information, and battery status.
- **Mode Button:** Cycles through input modes (Bluetooth, FM, USB, TF, AUX).
- **Volume Knob:** Adjusts the master volume.
- **Bass/Treble Knobs:** Adjusts bass and treble levels.
- **Echo Knob:** Adjusts microphone echo effect.
- **Mic Vol Knob:** Adjusts microphone volume.
- **USB/TF Card Slots:** For media playback.
- **AUX In:** 3.5mm input for external audio devices.
- **LED-SW (Light Switch):** Toggles the LED disco lights.

Your browser does not support the video tag.

Video 1: A 360-degree product overview of the Emerson EDS-1200 speaker, showcasing its design and control panel.

5.2 Bluetooth Pairing

1. Power on the speaker. The LED display will show "BLUE" or similar, indicating Bluetooth mode. If not, press the "MODE" button until Bluetooth mode is selected.
2. Enable Bluetooth on your smartphone, tablet, or other device.

3. Search for "Emerson EDS-1200" (or similar name) in your device's Bluetooth list and select it to pair.
4. Once paired, the speaker will emit an audible confirmation, and you can begin streaming audio.



Figure 5: Seamless music streaming via Bluetooth wireless technology.

5.3 TWS (True Wireless Stereo) Function

To achieve true stereo sound, you can pair two EDS-1200 speakers together:

1. Ensure both EDS-1200 speakers are powered on and in Bluetooth mode.
2. On one speaker (this will be the master), press and hold the "TWS" button (or a similar button indicated in the manual, if available, otherwise assume it's part of the mode button functionality or automatic pairing).
3. The speakers will attempt to pair with each other. A confirmation tone will sound once connected.
4. Now, connect your Bluetooth device to the master speaker as described in section 5.2. Audio will play in stereo across both speakers.

TWS Pairing

Enjoy the full array of features from TV to DVD function with the included remote! (sold individually)



Figure 6: Two speakers paired using TWS function for expanded sound coverage.

5.4 USB/TF Card Playback

1. Insert a USB flash drive or TF (Micro SD) card containing MP3 audio files into the respective slot on the control panel.
2. The speaker will automatically switch to USB/TF mode and begin playback. If not, press the "MODE" button to select the correct input.
3. Use the "PREV" and "NEXT" buttons to skip tracks, and the "PLAY/PAUSE" button to control playback.

Play your favorite stored music on USB



Figure 7: USB input for playing stored music files.

5.5 FM Radio

1. Press the "MODE" button to switch to FM Radio mode.
2. Press and hold the "PLAY/PAUSE" button to automatically scan and save available FM stations.
3. Use the "PREV" and "NEXT" buttons to navigate through the saved stations.

FM Radio

Enjoy your favorite local radio stations



Figure 8: Enjoying local radio stations with the built-in FM tuner.

5.6 AUX Input

Connect an external audio device (e.g., MP3 player, laptop) to the "AUX IN" port using a 3.5mm audio cable. The speaker will automatically switch to AUX mode, or you may need to select it using the "MODE" button.

5.7 LED Disco Lights

Toggle the "LED-SW" switch on the control panel to turn the vibrant multicolor LED lights on or off. The lights will pulse with the rhythm of the music.

Lighting effects that dance along with the music!



Figure 9: Dynamic LED lighting effects that dance along with the music.

6. SPECIFICATIONS

Feature	Description
Model Number	EDS-1200
Brand	Emerson
Mounting Type	Floor Standing
Power Source	Corded Electric, Battery Powered
Connector Type	Aux
Material	Plastic
Item Weight	6.5 pounds
Number of Channels	2
Audio Input	Bluetooth, AUX, USB, SD Card
Product Dimensions (L x W x H)	13.19 x 18.9 x 11.02 inches
Connectivity Technology	AUX, Bluetooth, USB
Color	Black



Figure 10: Dimensions and weight of the Emerson EDS-1200 speaker.

7. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the speaker's exterior. Do not use abrasive cleaners or solvents.
- **Storage:** Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, fully charge the speaker before long periods of storage and recharge it every 3-6 months.
- **Avoid Water:** This speaker is not waterproof. Keep it away from water and excessive moisture.

8. TROUBLESHOOTING






- **No Power:** Ensure the speaker is charged or connected to the power adapter. Check the power switch.
- **No Sound:** Check the volume levels on both the speaker and your connected device. Ensure the correct input mode is selected.
- **Bluetooth Pairing Issues:** Make sure the speaker is in Bluetooth mode and your device's Bluetooth is enabled. Try unpairing and re-pairing the device. Ensure no other devices are connected to the speaker.
- **Microphone Not Working:** Check if the microphone is properly plugged into the "MIC IN" port and its on/off switch is in the "ON" position. Adjust the "MIC VOL" knob.
- **LED Lights Not Working:** Ensure the "LED-SW" switch is in the "ON" position.

9. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation included with your purchase or visit the official Emerson website. Keep your proof of purchase for warranty claims.

© 2023 Emerson. All rights reserved.

Related Documents - EDS-1200

	<p>Emerson EDS-1200 Portable Bluetooth Party Speaker with Disco Lights - Instruction Manual</p> <p>Detailed instruction manual for the Emerson EDS-1200 Portable Bluetooth Party Speaker, covering setup, features, troubleshooting, specifications, and safety information.</p>
	<p>Emerson EDS-1000 Bluetooth Party Speaker with Digital Drum Function User Manual</p> <p>User manual for the Emerson EDS-1000 Bluetooth Party Speaker, detailing features, setup, safety guidelines, troubleshooting, and specifications for optimal use.</p>
	<p>Emerson EHS-2050 Home Theater Bluetooth Soundbar with Wireless Subwoofer User Manual</p> <p>User manual for the Emerson EHS-2050 Home Theater Bluetooth Soundbar with Wireless Subwoofer. Includes safety instructions, package contents, device specifications, control features, installation, operating modes, connectivity options, troubleshooting, and support information.</p>
	<p>Emerson EAS-3000 Portable Bluetooth Speaker with Carrying Strap - Instruction Manual</p> <p>Instruction manual for the Emerson EAS-3000 Portable Bluetooth Speaker with Carrying Strap. Learn about features, setup, modes, specifications, and FCC notice.</p>
	<p>MRLDS-CO2 Gas Detector Manual Emerson</p> <p>Comprehensive manual for the Emerson MRLDS-CO2 Gas Detector (P/N 809-1020). Covers installation, operation, calibration, and troubleshooting for detecting CO2 refrigerant, combustible gases, and toxic compounds.</p>



[Emerson iC200/iC200BK: Digital Tuning Stereo Clock Radio with iPod Docking Station - Owner's Manual](#)

Explore the features and operation of the Emerson iC200 and iC200BK digital tuning stereo clock radio with iPod docking station. This owner's manual covers setup, SmartSet time, alarms, iPod integration, and more.