

## **HDX8, HDXC2, HDXS2, HDXC1, S60-N2, N3, DEKODERY, STB-N4, N5, N6, T90 LITE, N2**

### **Generic Replacement Remote Control User Manual**

For Globo HDX8, OPTICUM HDXC2, HDXS2, HDXC1, S60-N2, N3, DEKODERY STB-N4, N5, N6, T90 LITE, N2. TV Telekarta Conax Satellite Receivers

#### **INTRODUCTION**

This manual provides essential instructions for the setup, operation, and basic maintenance of your Generic replacement remote control. This remote is designed to function with various Globo and Opticum satellite receiver models. Please read this manual carefully to ensure proper use and to maximize the functionality of your device.

#### **SETUP**

##### **1. Battery Installation**

The remote control requires two (2) AAA batteries (not included). Follow these steps to install them:

1. Locate the battery compartment cover on the back of the remote control.
2. Press down on the tab and slide the cover off.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.



**Image 1:** Rear view of the remote control with the battery cover removed, illustrating the battery insertion slots.

## 2. Initial Pairing (If Required)

This replacement remote control may require pairing with your satellite receiver before use. Refer to your specific satellite receiver's user manual for detailed instructions on how to pair a new remote control. Typically, this involves a sequence of button presses on the remote and/or the receiver, or accessing a pairing menu on the receiver.

**Note:** This remote operates using Infrared (IR) technology. Ensure there is a clear line of sight between the remote control and the IR sensor on your satellite receiver for optimal performance.

## OPERATING INSTRUCTIONS

The remote control features a standard layout for satellite receiver functions. Below is a general guide to its buttons:



**Image 2:** Front view of the remote control, displaying all functional buttons.

- **Power Button (Orange Button):** Turns the receiver ON or OFF.
- **Number Buttons (0-9):** Used for direct channel selection or inputting numerical data.
- **Channel Up/Down (CH+/CH-):** Changes the channel sequentially.
- **Volume Up/Down (VOL+/VOL-):** Adjusts the audio volume.
- **Mute Button:** Silences the audio output.
- **Navigation Pad (Arrow Buttons & OK):** Used to navigate menus and confirm selections.
- **Menu Button:** Accesses the main menu of the satellite receiver.
- **EPG (Electronic Program Guide):** Displays the program guide.
- **Info Button:** Shows information about the current program.
- **Exit Button:** Exits current menus or screens.
- **FAV (Favorites):** Accesses your list of favorite channels.
- **PVR/REC (Record):** Initiates recording if your receiver supports PVR functions.

- **Playback Controls (Play, Pause, Stop, Rewind, Fast Forward, Skip):** Controls media playback.
- **Color Buttons (Red, Green, Yellow, Blue):** These buttons often have context-sensitive functions within menus or applications. Refer to your receiver's on-screen prompts.

## MAINTENANCE

---

### Battery Replacement

Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new AAA batteries. Do not mix old and new batteries, or different types of batteries.

### Cleaning

To clean the remote control, use a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water. Avoid using harsh chemicals, abrasive cleaners, or excessive moisture, as these can damage the remote's surface or internal components.

### Storage

Store the remote control in a cool, dry place away from direct sunlight and extreme temperatures. If the remote will not be used for an extended period, it is advisable to remove the batteries to prevent leakage.

## TROUBLESHOOTING

---

- **Remote not responding:**
  - Check if the batteries are correctly installed and have sufficient charge. Replace them if necessary.
  - Ensure there is a clear line of sight between the remote control and the satellite receiver's IR sensor. Remove any obstructions.
  - Confirm that the remote is paired with your receiver, especially if it's a new setup or if the receiver's settings have been reset.
- **Buttons not working correctly:**
  - Clean the remote control, paying attention to the areas around the unresponsive buttons, as dirt or debris might be interfering.
  - If only specific buttons are affected, and cleaning does not help, the remote may be faulty.
- **Remote works intermittently:**
  - This often indicates low battery power. Replace the batteries.
  - Ensure you are within the effective range of the receiver's IR sensor.

## SPECIFICATIONS

---

Feature	Detail
Model Compatibility	Globo HDX8, OPTICUM HDXC2, HDXS2, HDXC1, S60-N2, N3, DEKODERY STB-N4, N5, N6, T90 LITE, N2. TV Telekarta Conax Satellite Receivers
Connectivity Technology	Infrared (IR)
Controller Type	Button Control

Batteries Required	2 x AAA (not included)
Special Feature	Requires pairing before use
ASIN	B0CG192VGG

## WARRANTY AND SUPPORT

As this is a generic replacement product, specific warranty terms may vary. Please refer to the seller or your purchase documentation for details regarding warranty coverage and return policies.

For technical support or further assistance, please contact the seller from whom you purchased this remote control. They will be able to provide guidance specific to your purchase.

© 2023 Generic. All rights reserved.